



# WHAT'S NEW


## SOLIDWORKS 2020











**DS SOLIDWORKS** / Visualize

# Contents






---







Legal Notices .....	10
<b>1 Welcome to SOLIDWORKS 2020 .....</b>	<b>13</b>
Top Enhancements .....	14
Performance Improvements .....	15
For More Information .....	17
<b>2 User Interface .....</b>	<b>19</b>
Changes to the CommandManager Menu .....	19
Display Feature Names in a Different Language .....	20
Drag Multiple Contiguous Features to a Folder .....	20
Enhanced Large Tooltips for Toolbars .....	21
File Types List .....	21
Markups .....	22
Drawing Markups with a Mouse .....	23
Exporting Multiple Markups .....	23
Markup Previews .....	24
Searching for Materials .....	24
Touch Mode .....	25
Troubleshooting Enhancements .....	25
Updated Help Menu .....	26
View Recent Files .....	27
Welcome Dialog Box .....	27
<b>3 SOLIDWORKS Fundamentals .....</b>	<b>28</b>
Application Programming Interface .....	28
Changes to System Options and Document Properties .....	29
Checking the 3D Printer Size .....	31
Closing a Document When Saving a Copy .....	32
Opening Documents .....	32
Improved Performance When Opening and Saving Files from a Previous Version  .....	32
Open Modes from File Explorer or PDM Vault View .....	33
Simplified Open Options .....	33
Selection Sets .....	34
Adding a Selection to a Selection Set .....	34
Updating Entities in a Selection Set .....	35
Slicing Data for 3MF Export .....	35
Specifying the Up Axis for View Orientation .....	37









<b>4 Installation</b>	<b>38</b>
Improved Installation Manager Download Performance	38
Installing SOLIDWORKS PCB Viewer	38
Installing Toolbox Software Without Installing Toolbox Data	39
SOLIDWORKS File Utilities Replaces SOLIDWORKS Explorer	39
Testing a Setup for a Push Deployment	39
<b>5 Administration</b>	<b>41</b>
Selecting a SOLIDWORKS Simulation License with a SolidNetWork License	41
SOLIDWORKS Rx Supports SOLIDWORKS Composer and SOLIDWORKS Electrical	42
Specifying Support Information	43
<b>6 Assemblies</b>	<b>44</b>
Envelope Publisher 	44
Creating Envelopes for a Subassembly	45
Viewing Envelopes	46
Envelope Publisher PropertyManager	46
Exploded Views	47
Auto-Space Components in Exploded Views	47
Reusing a Multibody Part Explode	49
External References Options	49
Flexible Components 	50
Adding a Flexible Component	51
Editing External References of Flexible Components	53
Activate Flexible Component PropertyManager	53
Isolating Interferences	54
Large Design Review	54
Create and Edit Component Patterns in Large Design Review 	54
Create Mates to Reference Geometry in Large Design Review 	55
Mates	56
Flip Alignment of Width Mates	56
Quick Mates Context Toolbar	56
Modify Configuration for Toolbox Components	57
Patterns	57
Component Pattern with Variable Instances	57
Mirror Components PropertyManager	59
Pattern Driven Component Patterns	65
Performance Improvements for Assemblies	67
Save as Copy with a Subset of Configurations	67
<b>7 SOLIDWORKS CAM</b>	<b>68</b>
Customization Settings	68
Probing Routines	68

Tab Cutting .....	69
Tapered Multipoint Thread Tool .....	69
Universal Post Generator .....	69
<b>8 SOLIDWORKS Composer .....</b>	<b>70</b>
SOLIDWORKS Composer .....	70
360 Degree Capture .....	70
Basic Attach Type for Annotations .....	70
BOM ID Callouts .....	70
Exponent Shape for Callouts .....	70
Importing Appearances from SOLIDWORKS Files .....	71
Importing Exploded, Saved, and Named Views from SOLIDWORKS Files  .....	71
Inlaid Text for Linear Arrows .....	71
Read-Only Mode Enhancement for Animation Library Templates .....	71
Support of MP4 Format for Animations  .....	72
Warning Message Before Breaking External Assembly Links .....	72
SOLIDWORKS Composer Sync .....	72
Importing Appearances from SOLIDWORKS Files .....	72
Importing Exploded, Saved, and Named Views from SOLIDWORKS Files  .....	72
<b>9 Detailing and Drawings .....</b>	<b>74</b>
Adding Hole Callouts in Section Views  .....	74
Alternate Position Views .....	76
Applying All Uppercase to Dimensions and Hole Callouts .....	78
Chain Dimensions  .....	78
Cosmetic Threads .....	80
Adding Callouts for Non-Hole Wizard Holes .....	80
Adding Callouts for External Threads .....	81
Simplifying Callouts .....	82
Creating Markups for Drawings .....	83
Custom Scales for Drawing Sheets and Views .....	84
Setting Custom Scales for Drawing Sheets .....	84
Setting Custom Scales for Drawing Views .....	85
Modifying the List of Available Scales .....	85
Design Library .....	85
Detailing Mode  .....	86
Opening Drawings in Detailing Mode .....	87
Dimensioning Datum Targets .....	88
Flag Notes .....	88
Foreshortened Dimensions .....	88
Link Child Views to Parent by Default .....	89
Location for Saving a New Drawing .....	89
Performance Improvements in Drawings .....	89






Render Pipeline in Drawings 	89
Symbols on Sheet Formats	89
<b>10 eDrawings</b>	<b>90</b>
Manufacturing Models in the 3DEXPERIENCE Marketplace Make	90
eDrawings Performance	90
Quality	90
SOLIDWORKS Drawings Support	91
Support for Configuration-Specific \$PRPSHEET Properties	91
Text Scale in 3D Views	92
Virtual Reality	92
<b>11 SOLIDWORKS Electrical</b>	<b>96</b>
Leader Lines 	96
Text Leaders	96
Block Leaders	98
Leader Styles Manager	99
Minimum Bend Radius and Bend Factor	100
Project Viewer	100
Reimport Electrical Data for Wires, Cables, and Harnesses 	102
Report Enhancements for Rows and Columns 	102
Row Height in Reports	102
Row Number Column in Reports	103
User Rights Manager 	103
Archive Environment	103
Feature Grid	104
User Profile Customization	104
<b>12 SOLIDWORKS Flow Simulation</b>	<b>105</b>
Altitude	105
Fan Derating	105
Logical Expressions in Formula Dependency	106
<b>13 SOLIDWORKS 3D Interconnect</b>	<b>107</b>
Importing DXF and DWG Files	107
Importing IFC Files	107
Inserting CAD Files into Active SOLIDWORKS Files	107
<b>14 SOLIDWORKS Manage</b>	<b>109</b>
Adding Conditions to a Process Stage	109
Adding Related Records	110
BOM Editing	110
Copy Manual Quantities of BOM	111
Creating a Subprocess	111

Custom Procedures.....	111
Customized Affected Item List.....	111
Dashboard Viewer.....	111
Editing the Project Task Subject.....	112
Export Feature of BOM Compare Tool.....	113
Inactive Configuration Part Numbering.....	113
Integration into Microsoft Outlook.....	113
Interactive Capacity Planning and User Workload Dashboards.....	113
Main User Interface Controls for Records.....	114
Object Notes.....	114
Adding Object Notes .....	114
Viewing Object Notes.....	114
PDM Options Tab.....	115
Plenary Web Client.....	116
Process Task Assignment Controls.....	116
Project Gantt Charts.....	116
Send to Process.....	117
View Hidden Controls in the Workflow Designer.....	117
<b>15 SOLIDWORKS MBD.....</b>	<b>118</b>
3D PMI Compare.....	118
Annotations Folder  .....	118
DimXpert.....	119
Annotation Name Format.....	119
Pipe Threads and Compound Holes.....	120
<b>16 Model Display.....</b>	<b>121</b>
Body Compare  .....	121
Comparing Bodies.....	121
Body Compare PropertyManager .....	123
<b>17 Parts and Features.....</b>	<b>125</b>
Graphics Mesh and Mesh BREP Bodies.....	125
Adding Coordinate Axes, Reference Axes, and Reference Planes .....	125
Decimating a Graphics Mesh Body  .....	127
Expanded Support for Mesh BREP Bodies in Features  .....	134
Holes.....	134
Defining Hole Depth to Tip or Shoulder.....	134
Hole Wizard.....	135
Repairing Missing References for Fillets and Chamfers  .....	135
Surfaces.....	137
Creating an Offset Surface Without Failed Faces  .....	137
Specifying the Thicken Direction .....	139

<b>18 SOLIDWORKS PCB</b>	<b>143</b>
Duplicate Designators	143
Integration with SOLIDWORKS PDM	143
Rigid-Flex Support in SOLIDWORKS PCB	144
<b>19 SOLIDWORKS PDM</b>	<b>145</b>
Defining Child Reference State Conditions 	145
Logging Out from Windows Explorer	146
Performance Improvements in Browsing 	146
Performance Improvements in the SOLIDWORKS PDM Add-in	147
Performance Improvements	147
Reordering Columns in Search Results	147
Resizable Dialog Boxes	148
Scaling the Paper Size in Print Task	148
Search User Interface 	148
Customizable Variables - New Variable List Dialog Box	149
Using Quick Search	150
Searching in Multiple Variables	151
Creating a Search Card to Search Within Multiple Variables	153
Using AND, OR, and NOT Operators in Search 	153
Warning Users When Transitioning Files	156
Web2 Enhancements	156
Bill of Materials Tab in Web2 	156
History Tab	159
List of Files to Download in Web2	160
<b>20 SOLIDWORKS Plastics</b>	<b>163</b>
Coolant Input Boundary Condition	163
Create Body from Deformed Shape	163
Domains Node	164
Enhanced Solid Mesh (Auto) Workflow 	164
Streamlined Mesh Creation 	165
Flow, Pack, and Cool Analyses Enhancements	165
Geometry-Based Boundary Conditions 	165
Legacy Plastics Simulation Studies	166
Material Library Updates	166
Plastics Material Databases in 3D ContentCentral	168
Plastics Tutorials	169
Study Creation and Management	169
Virtual Mold Design	169

<b>21 Routing</b>	<b>171</b>
3D Route Changes in Flattened Routes	171
Color for Electrical Coverings	171
Connector Blocks	172
Create Multiple Connection Points ★	172
Length Leaders for Flattened Routes	173
Manufactured-Style Flattened Route	174
Mass and Density of Cables and Wires	174
Minimum Bend Radius ★	174
Pipe Drawings	175
Reimport Electrical Data ★	175
Show/Hide Flatten Route Items	175
Splices Without Components	176
Transparent Coverings	177
<b>22 Sheet Metal</b>	<b>178</b>
Convert to Sheet Metal	178
Tab and Slot	178
<b>23 SOLIDWORKS Simulation</b>	<b>179</b>
Collapse Simulation Tree Folders	179
Distributed Coupling for Pins and Bolts ★	179
Draft and High-Quality Mesh Definition ★	182
Free Body Forces for Nonlinear Studies ★	183
Link Between Results and Model Files	184
Repair Corrupt Studies	185
Simulation Evaluator ★	185
Simulation Performance Improvements	185
Stress Averaging at Mid-Side Nodes	186
Thermal Loads for Beams ★	186
<b>24 Sketching</b>	<b>189</b>
Applying Torsion Continuity Relations ★	189
Baseline and Chain Dimensions in Sketches	190
Importing 2D DXF or DWG Files as Reference Sketches	191
Power Modify Tool	191
Silhouette Entities ★	193
Creating Silhouette Entities	194
Silhouette Entities PropertyManager	195

<b>25 SOLIDWORKS Visualize</b>	<b>196</b>
AMD ProRender Integration	196
AxF Measured Materials	196
glTF Export for AR and VR	197
IES Light Profiles	197
Inline Rendering	198
Instancing	198
MDL Support	198
NVIDIA RTX Support	199
Scaling for High-Resolution Displays	199
SOLIDWORKS PDM Integration	199
 <b>26 Structure System and Weldments</b>	 <b>201</b>
Options for Creating Primary Members Based on Points 	201
Specifying the Member Profile	202
Creating Primary Members Based on Point and Length	202
Creating Primary Members Between Points	203
Creating Primary Members Based on Up to Point	203
Creating Primary Members Based on Direction	204
Creating Curved Beams and Merging Tangent Members	205
Split Members 	205
Pattern and Mirror Support 	208
Creating a Linear Pattern of a Structure System Feature	208
Adding a Structure System Feature to an Existing Feature	210
Member and Corner Trim Enhancements	211
Cut List Properties for Weldment and Structure System Features	211

# Legal Notices

---

© 1995-2019, Dassault Systemes SolidWorks Corporation, a Dassault Systèmes SE company, 175 Wyman Street, Waltham, Mass. 02451 USA. All Rights Reserved.

The information and the software discussed in this document are subject to change without notice and are not commitments by Dassault Systemes SolidWorks Corporation (DS SolidWorks).

No material may be reproduced or transmitted in any form or by any means, electronically or manually, for any purpose without the express written permission of DS SolidWorks.

The software discussed in this document is furnished under a license and may be used or copied only in accordance with the terms of the license. All warranties given by DS SolidWorks as to the software and documentation are set forth in the license agreement, and nothing stated in, or implied by, this document or its contents shall be considered or deemed a modification or amendment of any terms, including warranties, in the license agreement.

## Patent Notices

SOLIDWORKS® 3D mechanical CAD and/or Simulation software is protected by U.S. Patents 6,611,725; 6,844,877; 6,898,560; 6,906,712; 7,079,990; 7,477,262; 7,558,705; 7,571,079; 7,590,497; 7,643,027; 7,672,822; 7,688,318; 7,694,238; 7,853,940; 8,305,376; 8,581,902; 8,817,028; 8,910,078; 9,129,083; 9,153,072; 9,262,863; 9,465,894; 9,646,412; 9,870,436; 10,055,083; 10,073,600; 10,235,493 and foreign patents, (e.g., EP 1,116,190 B1 and JP 3,517,643).

eDrawings® software is protected by U.S. Patent 7,184,044; U.S. Patent 7,502,027; and Canadian Patent 2,318,706.

U.S. and foreign patents pending.

## Trademarks and Product Names for SOLIDWORKS Products and Services

SOLIDWORKS, 3D ContentCentral, 3D PartStream.NET, eDrawings, and the eDrawings logo are registered trademarks and FeatureManager is a jointly owned registered trademark of DS SolidWorks.

CircuitWorks, FloXpress, PhotoView 360, and TolAnalyst are trademarks of DS SolidWorks.

FeatureWorks is a registered trademark of HCL Technologies Ltd.

SOLIDWORKS 2020, SOLIDWORKS Standard, SOLIDWORKS Professional, SOLIDWORKS Premium, SOLIDWORKS PDM Professional, SOLIDWORKS PDM Standard, SOLIDWORKS Simulation Standard, SOLIDWORKS Simulation Professional, SOLIDWORKS Simulation Premium, SOLIDWORKS Flow Simulation, SOLIDWORKS CAM, SOLIDWORKS Manage, eDrawings Viewer, eDrawings Professional, SOLIDWORKS Sustainability, SOLIDWORKS Plastics, SOLIDWORKS Electrical Schematic Standard, SOLIDWORKS Electrical Schematic Professional, SOLIDWORKS Electrical 3D, SOLIDWORKS Electrical Professional, CircuitWorks, SOLIDWORKS Composer, SOLIDWORKS Inspection, SOLIDWORKS MBD, SOLIDWORKS PCB powered by Altium, SOLIDWORKS PCB Connector powered by Altium, and SOLIDWORKS Visualize are product names of DS SolidWorks.

Other brand or product names are trademarks or registered trademarks of their respective holders.

#### COMMERCIAL COMPUTER SOFTWARE - PROPRIETARY

The Software is a "commercial item" as that term is defined at 48 C.F.R. 2.101 (OCT 1995), consisting of "commercial computer software" and "commercial software documentation" as such terms are used in 48 C.F.R. 12.212 (SEPT 1995) and is provided to the U.S. Government (a) for acquisition by or on behalf of civilian agencies, consistent with the policy set forth in 48 C.F.R. 12.212; or (b) for acquisition by or on behalf of units of the Department of Defense, consistent with the policies set forth in 48 C.F.R. 227.7202-1 (JUN 1995) and 227.7202-4 (JUN 1995)

In the event that you receive a request from any agency of the U.S. Government to provide Software with rights beyond those set forth above, you will notify DS SolidWorks of the scope of the request and DS SolidWorks will have five (5) business days to, in its sole discretion, accept or reject such request. Contractor/Manufacturer: Dassault Systemes SolidWorks Corporation, 175 Wyman Street, Waltham, Massachusetts 02451 USA.

### Copyright Notices for SOLIDWORKS Standard, Premium, Professional, and Education Products

Portions of this software © 1986-2018 Siemens Product Lifecycle Management Software Inc. All rights reserved.

This work contains the following software owned by Siemens Industry Software Limited:

D-Cubed® 2D DCM © 2019. Siemens Industry Software Limited. All Rights Reserved.

D-Cubed® 3D DCM © 2019. Siemens Industry Software Limited. All Rights Reserved.

D-Cubed® PGM © 2019. Siemens Industry Software Limited. All Rights Reserved.

D-Cubed® CDM © 2019. Siemens Industry Software Limited. All Rights Reserved.

D-Cubed® AEM © 2019. Siemens Industry Software Limited. All Rights Reserved.

Portions of this software © 1998-2019 HCL Technologies Ltd.

Portions of this software incorporate PhysX™ by NVIDIA 2006-2010.

Portions of this software © 2001-2019 Luxology, LLC. All rights reserved, patents pending.

Portions of this software © 2007-2019 DriveWorks Ltd.

© 2012, Microsoft Corporation. All rights reserved.

Includes Adobe® PDF Library technology.

Copyright 1984-2016 Adobe Systems Inc. and its licensors. All rights reserved. Protected by U.S. Patents 6,563,502; 6,639,593; 6,754,382; Patents Pending.

Adobe, the Adobe logo, Acrobat, the Adobe PDF logo, Distiller and Reader are registered trademarks or trademarks of Adobe Systems Inc. in the U.S. and other countries.

For more DS SolidWorks copyright information, see **Help > About SOLIDWORKS**.

### Copyright Notices for SOLIDWORKS Simulation Products

Portions of this software © 2008 Solversoft Corporation.



PCGLSS © 1992-2017 Computational Applications and System Integration, Inc. All rights reserved.

## Copyright Notices for SOLIDWORKS PDM Professional Product

Outside In® Viewer Technology, © 1992-2012 Oracle

© 2012, Microsoft Corporation. All rights reserved.

## Copyright Notices for eDrawings Products

Portions of this software © 2000-2014 Tech Soft 3D.

Portions of this software © 1995-1998 Jean-Loup Gailly and Mark Adler.

Portions of this software © 1998-2001 3Dconnexion.

Portions of this software © 1998-2017 Open Design Alliance. All rights reserved.

The eDrawings® for Windows® software is based in part on the work of the Independent JPEG Group.

Portions of eDrawings® for iPad® copyright © 1996-1999 Silicon Graphics Systems, Inc.

Portions of eDrawings® for iPad® copyright © 2003 – 2005 Apple Computer Inc.

## Copyright Notices for SOLIDWORKS PCB Products

Portions of this software © 2017-2018 Altium Limited.

## Copyright Notices for SOLIDWORKS Visualize Products

NVIDIA GameWorks™ Technology provided under license from NVIDIA Corporation. Copyright © 2002-2015 NVIDIA Corporation. All rights reserved.

# 1

## Welcome to SOLIDWORKS 2020

---

This chapter includes the following topics:

- **Top Enhancements**
- **Performance Improvements**
- **For More Information**



Model courtesy of Matt Lyle, SOLIDWORKS 2019 Beta Splash Screen Prize winner.


SOLIDWORKS® 2020 delivers many enhancements and improvements, most created in direct response to customer requests.

These enhancements help you speed up and improve your product development process – from concept design through manufactured products.

- **Workflow.** Refinements in design, simulation, manufacturing, and collaboration permit new workflows that improve time to market and product quality, and reduce manufacturing costs.
- **Performance.** Improvements in drawings and assemblies significantly speed up large assembly design and detailing.
- **Direct connection to the 3DEXPERIENCE® Platform.** Seamless integration with 3DEXPERIENCE applications provides scalability and flexibility to dramatically improve the way you develop concepts, design, and collaborate.

## Top Enhancements

The top enhancements for SOLIDWORKS® 2020 provide improvements to existing products and innovative new functionality.

Throughout this guide, look for the  symbol in these areas:

- |                               |   |
|-------------------------------|---|
| <b>Assemblies</b>             | <ul style="list-style-type: none"><li>• <b>Create and Edit Component Patterns in Large Design Review</b> on page 54</li><li>• <b>Create Mates to Reference Geometry in Large Design Review</b> on page 55</li><li>• <b>Envelope Publisher</b> on page 44</li><li>• <b>Flexible Components</b> on page 50</li></ul>                                  |
| <b>Detailing and Drawings</b> | <ul style="list-style-type: none"><li>• <b>Adding Hole Callouts in Section Views</b> on page 74</li><li>• <b>Chain Dimensions</b> on page 78</li><li>• <b>Detailing Mode</b> on page 86</li><li>• <b>Render Pipeline in Drawings</b> on page 89</li></ul>   |
| <b>Fundamentals</b>           | <ul style="list-style-type: none"><li>• <b>Improved Performance When Opening and Saving Files from a Previous Version</b> on page 32</li></ul>  |
| <b>Model Display</b>          | <ul style="list-style-type: none"><li>• <b>Body Compare</b> on page 121</li></ul>   |
| <b>Parts and Features</b>     | <ul style="list-style-type: none"><li>• <b>Creating an Offset Surface Without Failed Faces</b> on page 137</li><li>• <b>Repairing Missing References for Fillets and Chamfers</b> on page 135</li><li>• <b>Expanded Support for Mesh BREP Bodies in Features</b> on page 134</li><li>• <b>Decimating a Graphics Mesh Body</b> on page 127</li></ul> |
| <b>Routing</b>                | <ul style="list-style-type: none"><li>• <b>Create Multiple Connection Points</b> on page 172</li><li>• <b>Minimum Bend Radius</b> on page 174</li><li>• <b>Reimport Electrical Data</b> on page 175</li></ul>   |
| <b>Sketching</b>              | <ul style="list-style-type: none"><li>• <b>Applying Torsion Continuity Relations</b> on page 189</li></ul>  |

- [Silhouette Entities](#) on page 193
- SOLIDWORKS Composer**
  - [Importing Exploded, Saved, and Named Views from SOLIDWORKS Files](#) on page 71
  - [Support of MP4 Format for Animations](#) on page 72
- SOLIDWORKS Electrical**
  - [Leader Lines](#) on page 96
  - [Reimport Electrical Data for Wires, Cables, and Harnesses](#) on page 102
  - [Report Enhancements for Rows and Columns](#) on page 102
  - [User Rights Manager](#) on page 103
- SOLIDWORKS PDM**
  - [Bill of Materials Tab in Web2](#) on page 156
  - [Defining Child Reference State Conditions](#) on page 145
  - [Performance Improvements in Browsing](#) on page 146
  - [Search User Interface](#) on page 148
  - [Using AND, OR, and NOT Operators in Search](#) on page 153
- SOLIDWORKS Plastics**
  - [Geometry-Based Boundary Conditions](#) on page 165
  - [Mesh Enhancements](#)
- SOLIDWORKS Simulation**
  - [Draft and High-Quality Mesh Definition](#) on page 182
  - [Distributed Coupling for Pins and Bolts](#) on page 179
  - [Free Body Forces for Nonlinear Studies](#) on page 183
  - [Simulation Evaluator](#) on page 185
  - [Thermal Loads for Beams](#) on page 186
- Structure System**
  - [Pattern and Mirror Support](#) on page 208
  - [Options for Creating Primary Members Based on Points](#) on page 201
  - [Split Members](#) on page 205

## Performance Improvements

SOLIDWORKS 2020 includes the following performance and workflow improvements:

### Assemblies

- Assembly performance is optimized for some tools and workflows so full rebuilds of assemblies or graphics occur less often.
- Most assemblies and drawings that were saved in a previous version open nearly as fast as those saved in SOLIDWORKS 2020. You can use lightweight components and drawings without needing to convert them to the current version.

Previously, some assemblies and drawings that you did not save in the current version took longer to open and save. This was particularly true for assemblies and drawings with reference components in multiple configurations.

A system option, **Force referenced documents to save to current version** under **External References**, improves save performance. When you clear the option, only documents that you modified in the current session are saved. This reduces save times significantly on the first save of large assemblies and drawings.

With improved open and save performance, you can eliminate the need for running batch conversion tools such as the PDM File Version Upgrade Utility or the **Convert Files** task in the Task Scheduler.

## Detailing and Drawings

When you create a drawing from an open assembly, the creation of the first view may be faster than in previous releases.

## eDrawings

Performance is improved when you hover over and select entities using the **Measure** and **Markup Dimensions** tools.

## SOLIDWORKS PDM

- SOLIDWORKS PDM loads the data in the background, which improves the browsing responsiveness.

Browsing folders that have a large number of files is faster due to:

- Faster database queries for custom columns.
- Background loading and incremental loading of the data.

When you double-click a folder, SOLIDWORKS PDM loads data in this order:

1. All subfolders synchronously. You can browse subfolders while the remaining data loads in the folder.
2. Files with standard columns in the file list.
3. Information in custom columns. You can add more custom columns and maintain the same browsing speed.

When you select a file and switch between the Bill of Materials, Contains, and Where Used tabs, SOLIDWORKS PDM loads the data in the tabs in the background. When you switch to a different file or folder, the background loading stops and loading of the new file or folder starts.

Performance improves significantly for folders with a large number of files or for database servers with high latency.

- The SOLIDWORKS PDM task pane tree refreshes faster and the commands in the SOLIDWORKS PDM toolbar are correctly enabled in the task pane instantaneously when you select a file.
  - Data in the task pane tree loads in the background.
  - When you select a file in the task pane tree, calls to the database are eliminated.

In the FeatureManager design tree or in the graphics area, when you right-click a file and select **SOLIDWORKS PDM**, the menus are correctly enabled.

When you select a file in the graphics area or in the FeatureManager design tree, the file listed in task pane tree is selected and the commands in the SOLIDWORKS PDM toolbar are correctly enabled.

- You can perform the following actions faster:
  - Logging into the vault when you set a large number of files or folders for automatic caching.
  - Viewing the System History of a vault that includes a large number of items.
  - Opening a file from a folder that includes a large number of files.
  - Creating a new file or subfolder in a folder that contains large number of files.

## Simulation

- Multiple load cases. You can use an optimized solution for distributed and rigid remote loads.
- Linear/quadrature tetra. You can replace quadratic elements as linear elements in certain parts of geometry (especially in bulky areas with fewer surface irregularities) to boost solver speed and performance.

## SOLIDWORKS Visualize

SOLIDWORKS Visualize supports and defaults to **Live** rendering mode. This can improve performance and reduce memory consumption for final renders.


# For More Information

Use the following resources to learn about SOLIDWORKS:

**What's New in PDF and HTML** This guide is available in PDF and HTML formats. Click:

- **Help > What's New > PDF**
- **Help > What's New > HTML**

**Interactive What's New**

In SOLIDWORKS, click the  symbol to display the section of this manual that describes an enhancement. The symbol appears next to new menu items and the titles of new and changed PropertyManagers.

To enable Interactive What's New, click **Help > What's New > Interactive**.

**Sample files**

To open sample files for this book, go to  
`system_dir:\Users\Public\Public  
Documents\SOLIDWORKS\SOLIDWORKS  
2020\samples\whatsnew\chapter_name\file_name.`

For example, `C:\Users\Public\Public  
Documents\SOLIDWORKS\SOLIDWORKS  
2020\samples\whatsnew\sketching\Block.sldprt.`

**Online Help**

Contains complete coverage of our products, including details about the user interface, samples, and examples.

**Release Notes**

Provides information about late changes to our products, including changes to the *What's New* book, online help, and other documentation.



# 2

## User Interface


---

This chapter includes the following topics:

- **Changes to the CommandManager Menu**
- **Display Feature Names in a Different Language**
- **Drag Multiple Contiguous Features to a Folder**
- **Enhanced Large Tooltips for Toolbars**
- **File Types List**
- **Markups**
- **Searching for Materials**
- **Touch Mode**
- **Troubleshooting Enhancements**
- **Updated Help Menu**
- **View Recent Files**
- **Welcome Dialog Box**

## Changes to the CommandManager Menu

Many items have changed:

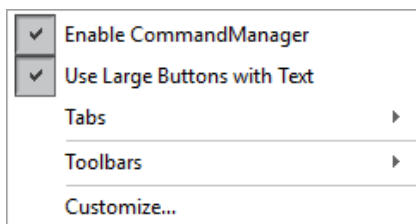

Item	Description of Change
<b>CommandManager</b>	Renamed to <b>Enable CommandManager</b>
List of CommandManager tabs	Moved under <b>Tabs</b>
List of toolbars	Moved under <b>Toolbars</b>
<b>Customize Menu</b>	Removed from the menu

To show toolbars in the CommandManager:

1. Right-click in the CommandManager.
2. Click **Toolbars** and then click a toolbar.

## Display Feature Names in a Different Language

In the FeatureManager® design tree, for features that use the default name, you can view a feature name translated into a different language. The translation displays in a tooltip when you hover over the feature.

**To display feature names in a different language:**

1. In the FeatureManager design tree, right-click a top-level assembly or part and click **Tree Display**.
2. Click **Show Translated Feature Name in Tooltip** and click a language.
3. In the FeatureManager design tree, hover over a feature that has a default name.

The tooltip displays the feature name and the translated feature name. For example, the French translation of **Shell1** is **Coque1**:





4. Optional: To hide the tooltips, under **Show Translated Feature Name in Tooltip**, click **Hide Tooltip**.

## Drag Multiple Contiguous Features to a Folder


You can select multiple contiguous features and drag the features to a folder in the FeatureManager design tree. You can drag features to change their order in a folder if the features do not have parent-child relationships. You can drag folders and features into another folder.


When dragging a feature out of a folder, you can drag the feature above a contiguous feature in the FeatureManager design tree.


**To drag multiple contiguous features to a folder:**

1. Open a part that has multiple features.
2. If the part does not have a folder, in the FeatureManager design tree, right-click a feature and click **Add to New Folder** .
3. In the FeatureManager design tree, select one or more contiguous features and drag the features to **Folder** .

When the pointer changes to , drop the features to the selected folder.

4. Expand **Folder**  and change the feature order.


When the pointer changes to , you can drag the features to the selected location.

5. Select multiple contiguous features from the **Folder**  and drag the features from the folder to a location above the folder in the FeatureManager design tree.

# Enhanced Large Tooltips for Toolbars

Enhanced large tooltips provide expanded information for tools in a toolbar. Some enhanced tooltips include images or animations.

For example, the **Bounding Box** large tooltip provides information about viewing the bounding box properties and includes an image of a bounding box.

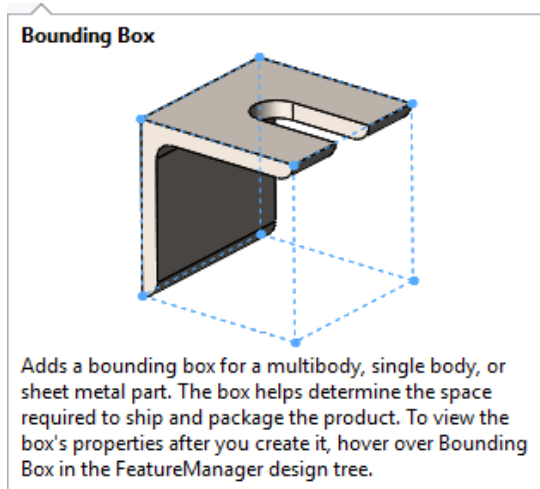

## To use enhanced large tooltips:

1. Click **Tools > Customize** and under **Tooltips**, click **Show tooltips**.
2. Under **Show tooltips**, select an option:

<b>Large tooltips with images</b>	Displays a brief description with the tooltip. Some tooltips may include an image or short animation.
<b>Large tooltips without images</b>	Displays a brief description with the tooltip.
<b>Small tooltips</b>	Displays the tool name.

3. Click **OK**.
4. Hover over a tool in a toolbar to view the enhanced tooltip.



# File Types List

The file types list in the Open dialog box is consolidated and reorganized. The list is wider to accommodate longer file names.


In the Save As dialog box, the list of files types for **Save as type** is reorganized.

# Markups



You can draw markups with a mouse on nontouch devices, display bounding boxes for markups, create markups in drawings, and use the context toolbar to access markup options.


To hide or show markups, click **Hide All Types** > **View Markups**  on the Heads-up View toolbar. Right-click a markup in the FeatureManager design tree or in the graphics area and click **Hide**  to hide markups.

## Markup Toolbar

The Ink Markup toolbar is renamed to the Markup toolbar. To view the toolbar, click **View** > **Toolbars** > **Markup** .

New options:





	<b>Color</b>	Specifies a color and thickness for the pen and mouse strokes.
	<b>Draw</b>	Uses a mouse to draw ink strokes.

The toolbar displays different options depending on the device. **Touch**  is not available for nontouch devices.

	
Markup toolbar for touch devices	Markup toolbar for nontouch devices

## Context Toolbar

The following options are available when you right-click a markup:

	<b>Edit Markup</b>	Enters edit mode.
	<b>Suppress</b>	
	<b>Orient</b>	Zooms to the markup.
	<b>Hide</b>	

**Export Markup**

Exports markups as one of the following file types: .pdf, .bmp, .jpg, .png, and .tif.

## Markup Tab for the CommandManager

To view the Markup tab for the CommandManager, right-click in the CommandManager and click **Tabs > Markup**.

## Markup Creation Information

Markups save the creation date and time stamp, and the creator ID. This information appears when you preview a markup and export a markup to a file.

## Markups for Drawings

For more information on markups for drawings, see [Creating Markups for Drawings](#) on page 83.

## Drawing Markups with a Mouse

1. On a nontouch device, open a part or assembly.
2. Click **View > Hide/Show > Markups**
3. Click **Tools > Options > System Options > FeatureManager**.
4. Under **Hide/show tree items**, select **Show** for **Markups**
5. In the FeatureManager design tree, right-click **Markups**

The Markup toolbar appears.

6. Click **Draw**
7. Optional: To change the color or the thickness of the line, click **Color**

## Exporting Multiple Markups

### To export multiple markups:

1. In the FeatureManager design tree, under **Markups** , **Ctrl** + select multiple markups.
2. In the context toolbar, click **Export Markup**


3. In the Export Markup dialog box, specify the file name and type, and click **Save**.

When you select `.pdf` as the file type, one `.pdf` file is created and each page contains one markup. When you export multiple markups, the order in which you select the markups is the order of the pages in the `.pdf` file.

When you select the other file types, each markup saves to an individual file in the specified folder. When you export multiple markups, the folder name is the name specified for **File name** in the Export Markup dialog box.

## Markup Previews

When you hover over a markup in the FeatureManager design tree, a markup preview appears. In the graphics area, a bounding box with orange edges surrounds the markup. When you select the markup, the preview closes and a bounding box with blue edges surrounds the markup.

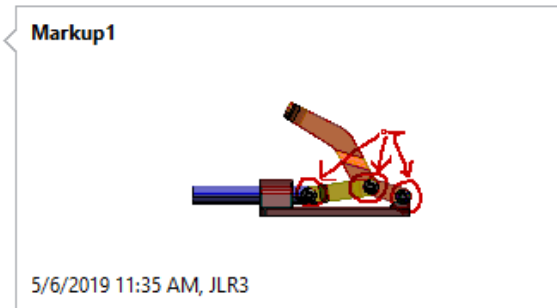

## Searching for Materials


You can find materials by using the **Search** box in the upper left corner of the Material dialog box.

### To search for materials:

1. From an open document, in the FeatureManager design tree, right-click **Material** and click **Edit Material**.

2. In the Material dialog box, enter an alphanumeric character or part of a material name in the search box.

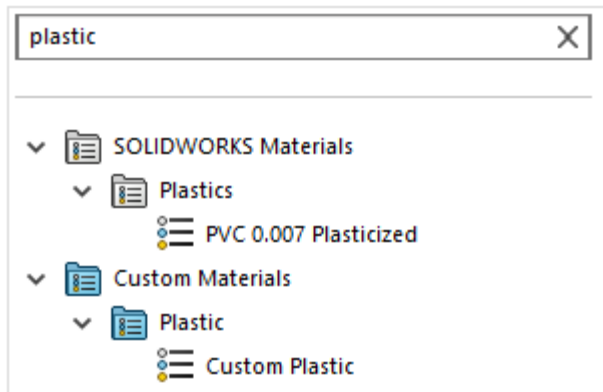

#### Material






This example searches for `plastic`. Matching results display materials in the material tree.

3. Select a material or click **X** to clear the search box.

## Touch Mode

On the Touch toolbar, **Undo**  appears after you perform an action. The **Escape** icon changed to . The icon for the active model tab displays at the bottom of the toolbar.

Model tabs:

-  **Model**
-  **Design Study**
-  **3D Views**
-  **Motion Study**

## Troubleshooting Enhancements

The SOLIDWORKS software provides more information about possible causes of crashes and known solutions you can use to avoid them in the future. It also makes it easier for you to supply error reports that will help the SOLIDWORKS development team diagnose and resolve problems for you.

In the Welcome dialog box, the Troubleshooting tab displays messages for known solutions to problems you have encountered, and how many times those problems have occurred. The solutions include contacting Technical Support about installing hotfixes, checking for updates to see if you need to apply service packs, and making sure the machine has a certified or tested graphics driver.



When the SOLIDWORKS software starts, it scans log files to identify crashes that have known solutions, and creates messages about those solutions in the `solutionmessages.xml` file. The file updates when it identifies additional problems and solutions, and when hotfixes and service packs are applied on the machine. The cumulative list of messages about problems and solutions, minus those solved by hotfixes and service packs that have already been applied, displays on the Troubleshooting tab.

#### To find solutions for crash fixes:

1. In the Welcome dialog box, click **Alerts > Troubleshooting**.
2. If there are crashes for this release of the SOLIDWORKS software on this machine, error messages display that tell you how many times the problems causing those crashes have occurred. The error messages also suggest solutions such as:
  - Contacting Technical Support about installing hotfixes.
  - Checking for updates to see if you need to apply service packs.
  - Making sure that the machine has certified or tested graphics drivers.


Optional. Click **Close** on the right side of the message to delete it.

3. If **Check for Updates** or **System Diagnostics** displays, select it and follow instructions for that option.

A separate tab provides information about recovered documents. To view it from the Welcome dialog box, click **Alerts > Document Recovery**.


## Updated Help Menu

On the **Help** menu, options are reorganized and renamed.

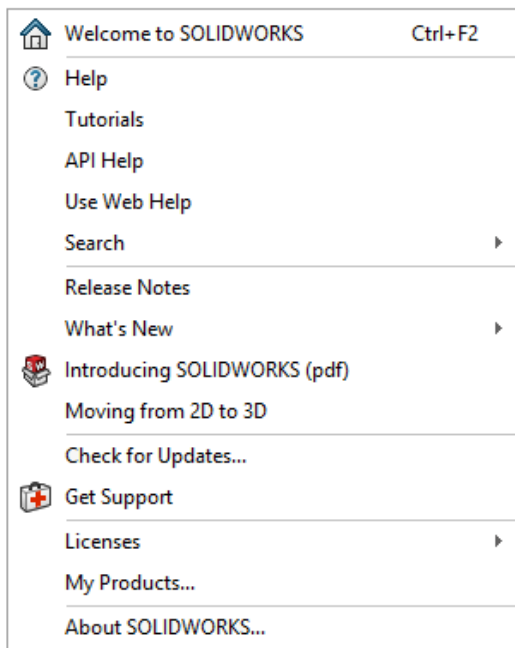

To view the menu, click **Help**.

**Activate Licenses, Deactivate Licenses, and Show Licenses** changed to **Activate, Deactivate, and Show**, and moved under **Licenses**.

**Get Support**  is added to the list of options.

SOLIDWORKS is removed from some of the option names. For example, **SOLIDWORKS Tutorials** changed to **Tutorials**.

# View Recent Files

You can view a list of recent files opened in the software in the following locations:

- Windows® **Start** menu: App list and tiles
- Search Windows: Search results for the SOLIDWORKS® 2020 software
- Windows taskbar

**To view recent files:**

1. From the Windows Start Menu, click **Settings** > **Personalization** > **Start**.
2. Verify that **Show app list in Start menu** and **Show recently opened items in Jump Lists on Start or the taskbar** are **On**.
3. Close the Windows **Settings** dialog box.
4. From the Windows Start Menu, right-click the SOLIDWORKS 2020 icon from the app list.

A list of files appears under **Recent**.

# Welcome Dialog Box

You can log in to SOLIDWORKS from the Welcome dialog box.

In the upper-right corner, click **Log In**.

# 3

## SOLIDWORKS Fundamentals

---

This chapter includes the following topics:

- **Application Programming Interface**
- **Changes to System Options and Document Properties**
- **Checking the 3D Printer Size**
- **Closing a Document When Saving a Copy**
- **Opening Documents**
- **Selection Sets**
- **Slicing Data for 3MF Export**
- **Specifying the Up Axis for View Orientation**

### Application Programming Interface

See *SOLIDWORKS API Help: Release Notes* for late-breaking updates.

SOLIDWORKS® 2020 API includes the ability to:

- Append a new selection list to a previously suspended selection list.
- Create and edit:
  - Mirrored components.
  - Fillets and chamfers using new methods.
  - Multibody part exploded views.
- Find missing references in fillets and chamfers and reassign them to new edges.
- Get or set:
  - More properties in derived part and pattern feature data objects.
  - Whether a sketch is editable.
  - Whether to convert width polylines to solid fill hatches when importing to part sketches.
- Slice models into 2D sketch sections.
- Sort a body cut list folder.
- Use 3D Interconnect functionality.
- Use improved mass property reporting.

# Changes to System Options and Document Properties

The following options are added, changed, or removed in the software.

## System Options

These system options are accessible at **Tools > Options > System Options**. The Access column lists which subarea of **System Options** that the option is located.

Option	Description	Access
<b>Include subfolders for drawings search in Pack and Go</b>	Moved to Pack and Go.	<b>External References</b>
<b>Allow creation of references external to the model</b>	Permits the creation of external references. Renamed from <b>Do not create references external to the model</b> .	<b>External References</b>
<b>Reference Component Type</b>	<p>Specifies the type of reference component:</p> <p><b>Any Component</b>      Creates an external reference to any component.</p> <p><b>Only Envelope Component</b>      Creates an external reference only to envelope components.</p> <p>Available when you select <b>Allow creation of references external to the model</b>.</p>	<b>External References</b>
<b>In the context of</b>	<p>Specifies the context of external references:</p> <p><b>Top level assembly</b>      Creates an external reference to components in the top-level assembly.</p> <p><b>Same subassembly</b>      Creates external references only to components in the same subassembly.</p> <p>Available when you select <b>Allow creation of references external to the model</b>.</p>	<b>External References</b>

Option	Description	Access
<b>Force referenced documents to save to current version</b>	For assemblies and drawings that are not saved in the current version, selecting this option saves all referenced documents to the current version of SOLIDWORKS when you save the assembly or drawing. Referenced documents are converted even if they are not modified in the current session. When cleared, only modified documents are saved in the current version. Clear the option to reduce save times or to allow users with earlier versions of the software to continue using the referenced documents.	<b>External References</b>
<b>Include slices</b>	Includes slicing information for 3D printing when you export to a .3mf file.	<b>Export &gt; 3MF</b>

## Document Properties

These document properties are accessible at **Tools > Options > Document Properties**. The Access column lists which subarea of **Document Properties** that the option is located.

Option	Description	Access
<b>All uppercase for dimensions and hole callouts</b>	Sets the default case used in new dimensions and hole callouts to all uppercase.	<b>Drafting Standard &gt; Uppercase</b>
<b>Add overall dimension to chain dimensions</b>	Automatically adds an overall dimension when you create a set of chain dimensions.	<b>Dimensions &gt; Linear</b>
<b>Add last reference dimension</b>	(Available if <b>Add overall dimension to chain dimensions</b> is selected.) Automatically adds a final reference dimension when you create a set of chain dimensions.	<b>Dimensions &gt; Linear</b>
<b>Show type in thread callouts</b>	Sets the default to include the thread Type in cosmetic thread callouts.	<b>Annotations</b>



## Checking the 3D Printer Size

You can select a 3D printer from a list to determine if a model fits inside the 3D printer. You can mark a 3D printer as a favorite to make the 3D printer available as a selection in the Print3D PropertyManager.

When you add a printer as a favorite, the following read-only information appears:

Option	Description
<b>Company</b>	Printer manufacturer.
<b>Model</b>	Model number for the printer.
<b>Bed Size of this 3D Printer</b>	<b>Height, Length, and Width</b> of the printer.
<b>Technology</b>	Printer type. For example, FDM, SLS, or SLA.
<b>Source URL</b>	3D printer list from the Wohlers Report 2019 provided by Wohlers Associates, Inc.

### To check the 3D printer size:


1. Open a part or assembly, and click **File** > **Print3D** .
2. On the Settings tab of the Print3D PropertyManager, click **3D Printer Name** , and click **Select Printer**.  
In the 3D Printers dialog box, a folder list alphabetized by company name appears.
3. Expand a folder to view a list of 3D printers, and select a printer.
4. Click **Add to Favorites**.

The printer is added to the **Favorites**  folder at the top of the folder list.

5. Close the dialog box.
6. In the PropertyManager, under **3D Printer Name** , select a printer.

7. For **Bottom plane of model**, in the graphics area, select a planar face or reference plane.

The printer appears as a transparent box around the model. Sections of the model that do not fit in the printer area appear in red.

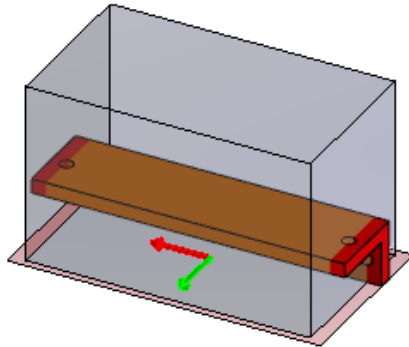

## Closing a Document When Saving a Copy

When you select **Save as copy and open** in the Save As dialog box, you can close the original document. If the original document has unsaved changes, the document remains open.

**To close the document when saving a copy:**

1. Open a model and click **File > Save As**.
2. In the Save As dialog box, click **Save as copy and open** and click **Save**.
3. When prompted by the **Save as copy and open** message, select **Close the original document**.

## Opening Documents

### Improved Performance When Opening and Saving Files from a Previous Version ★

In SOLIDWORKS 2020, most assemblies and drawings, that were saved in a previous version, open nearly as fast as those saved in SOLIDWORKS 2020. Also, you can make greater use of lightweight components and drawings without needing to convert them to the current version.

Previously, some assemblies and drawings, which had not yet been saved in the current version, took longer to open and save. This was particularly true for assemblies and drawings with reference components in multiple configurations.

A system option, **Force referenced documents to save to current version** under **External References** improves save performance. When you clear the option, only documents that have been modified in the current session are saved to the current version

of SOLIDWORKS. This reduces save times significantly on the first save of large assemblies and drawings.

For example:

1. Open SOLIDWORKS 2019 assembly with SOLIDWORKS 2019 parts in SOLIDWORKS 2020.
2. Add a mate in the top-level assembly.
3. Click **Save**.

When you clear this option, only the top-level assembly is saved because it is modified by adding a mate. When you select this option, the assembly and its references are all converted to 2020 when saving the assembly. This has been the behavior before SOLIDWORKS 2020.

With improved open and save performance, some customers may not need to run batch conversion tools such as the PDM File Version Upgrade Utility or the **Convert Files** task in the Task Scheduler.

## Open Modes from File Explorer or PDM Vault View

When you open SOLIDWORKS documents from File Explorer in Windows® or the PDM Vault View, you can access the Open dialog box before the file opens.

For example, you can search for a large assembly in PDM and then access the Open dialog box directly from the Vault View. The assembly prepopulates the Open dialog box and lets you change the open mode to Large Design Review.

Previously, to access the open modes, you had to bring up the Open dialog box and navigate again to the file you already found in File Explorer or PDM.

You can access the Open dialog box from File Explorer by right-clicking a **.SLDPRT**, **.SLDASM**, or **.SLDDRW** file and clicking **SOLIDWORKS > Open**. Earlier versions of the software support this method, however, you must install SOLIDWORKS 2020 to update the SOLIDWORKS Launcher beforehand.

If the SOLIDWORKS software is already open, you can access the Open dialog box from the PDM Vault View or File Explorer by holding **Alt** and dragging a **.SLDPRT**, **.SLDASM**, or **.SLDDRW** file into the graphics area. **Alt** and drag are not supported in earlier versions.

## Simplified Open Options


The Open and the Welcome dialog boxes have reorganized and renamed options.

Renamed options:

New Name	Previous Name
<b>Use Large Assembly Settings</b>	<b>Large Assembly Mode</b>
<b>Load hidden components</b>	<b>Do not load hidden components</b>
<b>Select Sheets</b>	<b>Select sheets to open</b>



## Large Assembly Settings

After opening an assembly, click **Large Assembly Settings**  in the Assembly tab of the CommandManager to enable or disable these settings.


For Assemblies system options, the following large assembly options are renamed:

New Name	Previous Name
<b>Use Lightweight mode and Large Assembly Settings when the number of components exceeds</b>	<b>Use Large Assembly Mode to improve performance when the assembly contains more than this number of components</b>
<b>Use Large Design Review mode when the number of components exceeds</b>	<b>Use Large Design Review when the assembly contains more than this number of components</b>

To access these options, click **Tools > Options > System Options > Assemblies**.

## Selection Sets

You can add and remove selected items to new or existing selection sets. You can add selected items to multiple selection sets.


In assemblies, only the selection sets for the assembly show when you click **Save Selection**. In parts, only the selection sets for the part show. To view selection sets, in the FeatureManager® design tree, expand **Selection Sets** .


You can drag a selected item from the FeatureManager design tree or from a selection set to another selection set. You cannot drag items from an assembly selection set to a part selection set.

## Adding a Selection to a Selection Set

**To add a selection to a selection set:**

1. Open a model and select multiple items in the FeatureManager design tree or graphics area.

2. Right-click the selections and click **Save Selection**.
  - To add an item to a new set, click **New Selection Set** .
  - To add an item to an existing set, click **Selection-Set#(##)** where **#** indicates the order of creation and **##** indicates the number of items in the set.

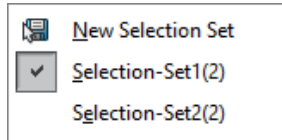


A check next to a selection set indicates that the selected item is a member of the selection set.

3. Expand **Selection Sets**  to show the selection set.

## Updating Entities in a Selection Set

### To update entities in a Selection Set:

1. In the FeatureManager design tree, select a selection set under **Selection Sets** .
  2. In the FeatureManager design tree or in the graphics area, **CTRL** + select or clear highlighted items.
  3. Continue to press **CTRL** and right-click the selected items, and click **Update Selection Set**.
- Selected items are added to the selection set.

## Slicing Data for 3MF Export



You can generate slices from precise SOLIDWORKS® geometry to export to a 3D Manufacturing Format (.3mf) file without saving the geometry to a mesh file.

Slices represent the highest fidelity of SOLIDWORKS geometry based on the minimum segment length, resulting in slices with the highest accuracy that a 3D printer can print.


### To slice data for 3MF export:

1. Open a part and click **File > Print3D** .
2. On the Settings tab, for **Bottom plane of model**, select a plane.

3. On the Preview tab, specify options:

Option	Description
 <b>Layer height</b>	Specifies the layer height of the striation lines.
<b>Generate slices (for 3MF export)</b>	Saves slicing information when you export to a .3mf file.  Available when you specify a bottom plane on the Settings tab.
 <b>Minimum edge length</b>	Specifies the smallest edge included in a polyline for a slice. This edge corresponds to the smallest linear segment that a 3D printer can print.
<b>Preview Slices</b>	Generates a preview of slices. Available when you specify a bottom plane on the Settings tab and a layer height on the Preview tab.  To interrupt the preview generation, close the PropertyManager.  If you change the bottom plane, layer height, or minimum edge length, click <b>Preview Slices</b> to regenerate the slices.

After you click **Preview Slices**, the slices appear in yellow on the part.

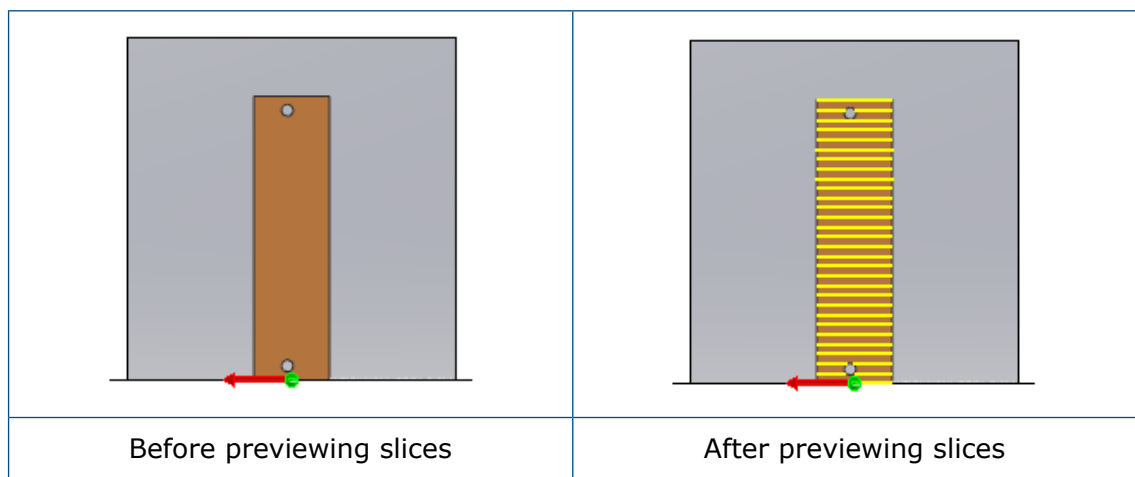

4. Click the Settings tab.
5. Expand the **Save To File** section.
6. For **Format**, select **3D Manufacturing Format (\*.3mf)** and click **Save File**.

7. In the Save As dialog box:
  - a) For **Save as type**, select **3D Manufacturing Format (.3mf)**.
  - b) Click **Options**.
  - c) In the **System Options - STL/3MF/AMF** dialog box, select **Include slices** to include slicing information in the exported file, and click **OK**.
  - d) Click **Save**.



The .3mf file contains slices generated from precise geometry. Use this file with a 3D printer that can read slice information.



## Specifying the Up Axis for View Orientation

You can specify the y-axis or the z-axis as the default up orientation for views. This option changes the view orientation for standard orthogonal, named, and child views.

To use this functionality, save the files in SOLIDWORKS 2020 or later.

### To specify the up axis for view orientation:

1. Open a model.
2. Click **View Orientation**  (View toolbar).
3. In the Orientation dialog box, click the **Up Axis**  flyout and select an option:

	<b>Apply Y-up views</b>	Uses the Y-axis as the up orientation for views.
	<b>Apply Z-up views</b>	Uses the Z-axis as the up orientation for views.

# 4

## Installation

---

This chapter includes the following topics:

- **Improved Installation Manager Download Performance**
- **Installing SOLIDWORKS PCB Viewer**
- **Installing Toolbox Software Without Installing Toolbox Data**
- **SOLIDWORKS File Utilities Replaces SOLIDWORKS Explorer**
- **Testing a Setup for a Push Deployment**

### Improved Installation Manager Download Performance

The download and extraction processes of the Installation Manager use parallel threading. The result is faster downloads. Users who are downloading more than one product will see the greatest benefit.

### Installing SOLIDWORKS PCB Viewer

You can download and install SOLIDWORKS® PCB Viewer using the Installation Manager, making it easier to install concurrently with SOLIDWORKS or other SOLIDWORKS products. This free PCB viewer is available without a license.

You can use the viewer to access, print, and search through all of your team's design files created in Altium Designer.

You can also add SOLIDWORKS PCB Viewer to your administrative image deployments.

You cannot install the SOLIDWORKS PCB Viewer on the same computer as SOLIDWORKS PCB.

# Installing Toolbox Software Without Installing Toolbox Data

If your environment has a PDM or shared Toolbox/Hole Wizard location, you can set client installations to not install or upgrade Toolbox data in that location.

Do this if:

- You did not yet set up the SOLIDWORKS PDM local view before installing the SOLIDWORKS software.
- The files in the location are in use and could block SOLIDWORKS installations from completing.
- The location is unavailable and could block SOLIDWORKS installations from completing.

When you set client installations to not install Toolbox data, the SOLIDWORKS software and settings point to the Toolbox/Hole Wizard location, but you must install the data in a central location later.

To install the SOLIDWORKS software without including Toolbox/Hole Wizard data, you must install SOLIDWORKS from an administrative image.

1. In the Administrative Image Option Editor, click **Settings**.
2. Expand **Toolbox/Hole Wizard Options**.
3. When asked if you want this client to install/upgrade the Toolbox files, select **No, install the Toolbox software without including the data files**.

At least one person, typically the SOLIDWORKS Administrator, must install or upgrade the Toolbox/Hole Wizard data in the central location or the software will not function properly. Anyone in the organization can handle this task with a single manual installation of the SOLIDWORKS software. If you manage Toolbox inside of SOLIDWORKS PDM, follow the steps outlined in the Toolbox section of the *SOLIDWORKS PDM Administrator Guide* to install or upgrade the Toolbox data.

## SOLIDWORKS File Utilities Replaces SOLIDWORKS Explorer

SOLIDWORKS Explorer has been replaced by SOLIDWORKS File Utilities, which lets you rename, replace, copy, and move SOLIDWORKS files while maintaining file references.

You can install SOLIDWORKS File Utilities from the Installation Manager, the Administrative Image Options Editor, and its own installation wizard. It is also available from <https://www.solidworks.com/sw/support/downloads.htm>.

## Testing a Setup for a Push Deployment

The Deploy Automatically tab in the Administrative Image Option Editor contains a test feature.

You can run a mock installation that exercises the systems used for the deployment, such as:

- Connecting to the target computer.
- Creating an install task on that computer.
- Completing the install task on that computer.
- Updating the status and logs on the administrative image.
- Detecting a program to run before or after the installation.

The test checks for file paths, validates permissions, and reports that the installation ended successfully. It does not install any software or modify the registry on the target system. If any one of the systems fails on any of the target computers, the test indicates which system failed.

Tooltips provide more information about failures. You can export the results to an `.xml` spreadsheet (or `.csv`), which is helpful for reviewing multiple failures or sharing results with other support personnel.

**To test a setup for a push deployment:**

1. Using the Installation Manager, create an **Administrative image**.
2. Start the Administrative Image Option Editor.

You can start the option after the Installation Manager completes creating the administrative image or double-click `sldAdminOptionEditor.exe` in the administrative image folder.

3. On the Setup tab, add one or more computers.
4. Click **Deploy Automatically**:
  - a) Supply a domain administrator's `username` and `password`.
  - b) Select one or more computers to test.
  - c) Click **Test**.
5. When the Setup Test appears, click **Run Test**.
6. Allow several minutes for the test to complete or click **Cancel Test** at any time.
7. Review and correct any setup problems.

# 5

## Administration

---


This chapter includes the following topics:

- **Selecting a SOLIDWORKS Simulation License with a SolidNetWork License**
- **SOLIDWORKS Rx Supports SOLIDWORKS Composer and SOLIDWORKS Electrical**
- **Specifying Support Information**

## Selecting a SOLIDWORKS Simulation License with a SolidNetWork License

SolidNetWork license users can control which of the SOLIDWORKS® Simulation licenses in their license pool to use when they add in SOLIDWORKS Simulation. They can also upgrade the SOLIDWORKS Simulation license without unloading the add-in in case they need a higher license type for more advanced studies.


1. To use a specific SOLIDWORKS Simulation license:
  - a) In the SOLIDWORKS, click **Tools > Add-Ins** and in the Add-in dialog box, select **SOLIDWORKS Simulation**.
  - b) On **SOLIDWORKS Simulation** (CommandManager), click the **Down** arrow ▼ to display a list of licenses on your server that can support Simulation.

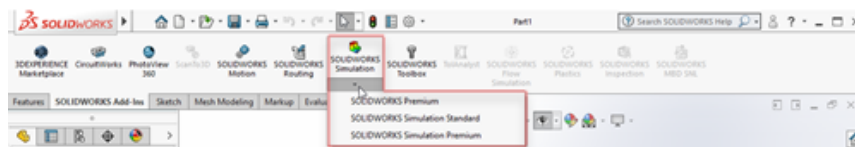

- c) Select the appropriate SOLIDWORKS Simulation license.



2. To check or change your current SOLIDWORKS Simulation license, click the **Down** arrow ▼ on **SOLIDWORKS Simulation** (CommandManager).

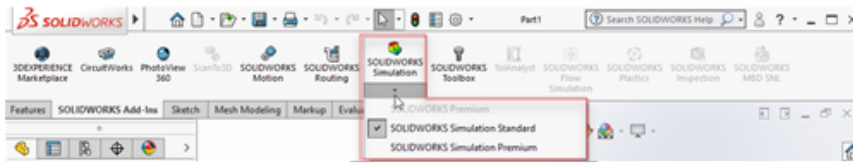

The license that is in-use displays a check mark. If more advanced license types are available, you can upgrade.

You cannot downgrade a SOLIDWORKS Simulation license. Disable the SOLIDWORKS Simulation add-in and add the license back in at a lower level.

3. Optional: To disable the add-in, click SOLIDWORKS Simulation (CommandManager) or clear it from **Tools > Add-Ins**.

The following cases still use license order:

- When SOLIDWORKS Simulation starts running.
- If SOLIDWORKS Simulation is added in **Tools > Add-Ins**.
- If the you click SOLIDWORKS Simulation without specifying a license from the pull-down list.

## SOLIDWORKS Rx Supports SOLIDWORKS Composer and SOLIDWORKS Electrical

SOLIDWORKS Rx is installed with SOLIDWORKS Electrical and SOLIDWORKS Composer.

The **Problem Capture** tab in SOLIDWORKS Rx collects files, videos, and settings for SOLIDWORKS Composer and SOLIDWORKS Electrical. In the **Capture** section, choose the application to capture. SOLIDWORKS Composer, SOLIDWORKS Electrical, or SOLIDWORKS display only if you installed them in the 2020 version of SOLIDWORKS, SOLIDWORKS Composer, or SOLIDWORKS Electrical.

If you select SOLIDWORKS Electrical or SOLIDWORKS Composer and click **Record Video**, SOLIDWORKS Rx:

1. Records the active SOLIDWORKS Electrical or SOLIDWORKS Composer session or starts a new session to record.
2. Lists the video in the **Package** section, along with system and other support information:
  - For SOLIDWORKS Electrical, this is the same information currently generated by the Support Information on the **Help** menu.
  - For SOLIDWORKS Composer, this information also includes logs and settings.
3. Lets you add more files to the **Package** section.

For example, for SOLIDWORKS Electrical, you can add .tewzip files.

4. Lets you package the files in the Package section into a .ZIP file and send it, along with a description of the problem, to your technical support contact.

# Specifying Support Information

Administrators can provide support information to users by using the Settings Administrator Tool.

To access the Settings Administrator Tool, you must first create an administrative image. See *SOLIDWORKS Online Help: Creating an Administrative Image from SOLIDWORKS Installation Manager*.

Support information appears when you click **Get support**  in the following locations:


- **Help**
- **Logged in** 
- Welcome dialog box under **Resources**
- SOLIDWORKS Error Report dialog box
- In SOLIDWORKS Rx, **Help**

## To specify support information:

1. Start the Settings Administrator Tool from an administrative image.
2. In the SOLIDWORKS Setting Administration dialog box, select an option on the Welcome page and click **Next** until you reach the Support Information page.
3. Specify the contact information:

---

### Open the SOLIDWORKS Support website

**Get Support**  opens this website if you do not specify contact information.

---

### Provide support contact information in a dialog box

Specifies contact information to show in the SOLIDWORKS Support dialog box:

- **Organization or person name**
- **Contact options:**
  - **Email**
  - **Phone number**
  - **Web address**
  - **Web address text**

- **Note**

To view the SOLIDWORKS Support dialog box, click **preview**.

---

# 6


## Assemblies

---

This chapter includes the following topics:


- **Envelope Publisher**
- **Exploded Views**
- **External References Options**
- **Flexible Components**
- **Isolating Interferences**
- **Large Design Review**
- **Mates**
- **Modify Configuration for Toolbox Components**
- **Patterns**
- **Performance Improvements for Assemblies**
- **Save as Copy with a Subset of Configurations**


### Envelope Publisher

You can use the **Envelope Publisher**  tool to include components from a top-level assembly as envelopes in a subassembly.

You can work in the subassembly using the published envelopes as reference components in isolation from the top-level assembly. The envelope components inherit changes from the top-level assembly.

Multiple subassemblies can have the same envelope. Subassemblies can contain only one group of envelopes published by **Envelope Publisher** .


When you select a subassembly as a destination for the envelope, an external reference is created to the parent assembly. The **Published Envelopes**  folder displays external reference symbols that indicate the reference state of the envelope.


**Envelope Publisher**  is available when an assembly contains subassemblies. The tool is not available in Large Design Review mode.

## Creating Envelopes for a Subassembly



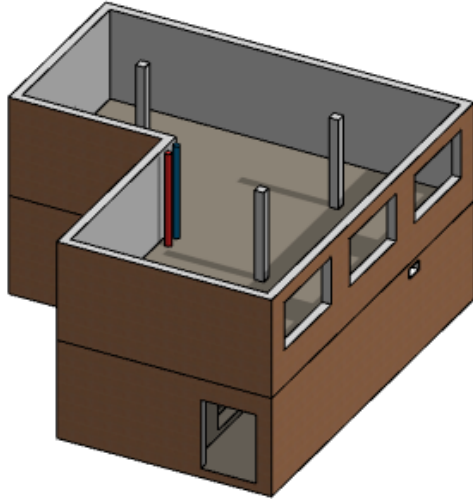


### To create envelopes for a subassembly:

1. Open `system_dir:\Users\Public\Public Documents\SOLIDWORKS\SOLIDWORKS 2020\samples\whatsnew\assemblies\envelope_publisher\EnvelopePublisher.SLDASM`.




2. Click **Tools > Envelope Publisher** .
 

If **Envelope Publisher** is not available, check the **External References** system options:

  - a) Click **Tools > Options > System Options > External References**.
  - b) Under **Assemblies**, select:
    - **Allow creation of references external to the model**
    - **Any component** for **Reference component type**
    - **Top level assembly** for **In the context of**
3. In the Envelope Publisher PropertyManager, for **Components to use as envelopes** , select the following components:
  - a) Under **Connectors** , select all the connectors.
  - b) Select **Ducting<1>**.
  - c) Under **Building<1>** subassembly, select **DoorSubAssy<1>** and **DoorSubAssy<2>**.
4. For **Destination subassemblies** , select **PipeSubAssy<1>**.
5. Optional: Change the envelope group name from the default name of **Envelope Group1**.
6. Click **Add group**, and click .
7. In the FeatureManager® design tree, right-click **PipeSubAssy<1>** and click **Open pipesubassy.SLDASM** .

8. Optional: If prompted, click **Rebuild**.

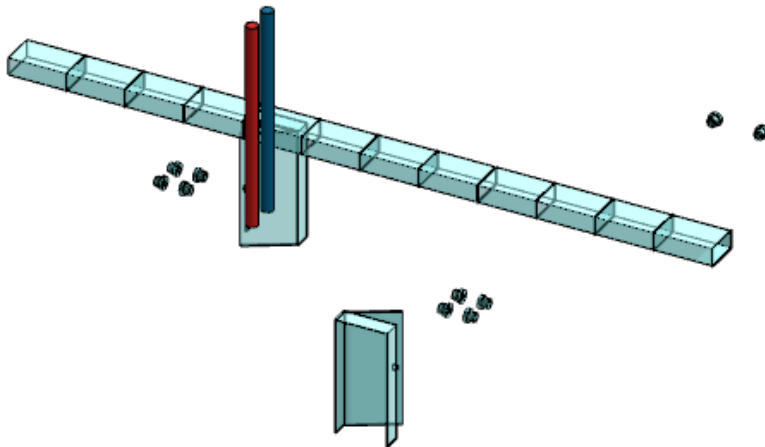

You can work with the envelope components in the subassembly.



## Viewing Envelopes


**To view envelopes:**

1. Click **View > Hide/Show**.
2. Select an option:

	<b>View Component Envelopes</b>	Displays envelopes that belong to components in the top-level assembly.
	<b>View Top Level Envelopes</b>	Displays envelopes that belong to the top-level assembly.

## Envelope Publisher PropertyManager



**To open the Envelope Publisher PropertyManager:**

In an assembly that contains a subassembly, click **Tools > Envelope Publisher** .

If **Envelope Publisher** is not available, check the **External References** system options:

1. Click **Tools > Options > System Options > External References**.
2. Under **Assemblies**, select:
  - **Allow creation of references external to the model**
  - **Any component** for **Reference component type**
  - **Top level assembly** for **In the context of**

## Add a Group / Edit Group

<b>Add or Edit Envelope Group</b>	Lists the group name.
	<b>Components to use as envelopes</b> Specifies the components to include in the envelope. Flexible subassemblies cannot be envelope components.
	<b>Destination subassemblies</b> Specifies the subassemblies to publish the envelopes. The published envelope creates external references to the parent assembly.  You cannot select the following subassemblies as a destination: <ul style="list-style-type: none"> <li>• Subassemblies that are a destination for a different envelope group.</li> </ul> For assemblies that contain multiple instances of a subassembly, you can use only one of the instances as a destination subassembly. <ul style="list-style-type: none"> <li>• Subassemblies that are a component in an envelope.</li> </ul>
<b>Add group</b>	Adds the envelope group.
<b>Reset</b>	Resets the PropertyManager fields.
<b>Done</b>	Saves changes to the envelope group.

## Envelope Groups

<b>Envelope Groups</b>	Lists envelope groups.
------------------------	------------------------

# Exploded Views



## Auto-Space Components in Exploded Views


You can enable **Auto-space components** for existing explode steps. You can select center, rear, or front of the bounding box for the order of auto-spaced components.

**Auto-space components** is renamed from **Auto-space components on drag**.





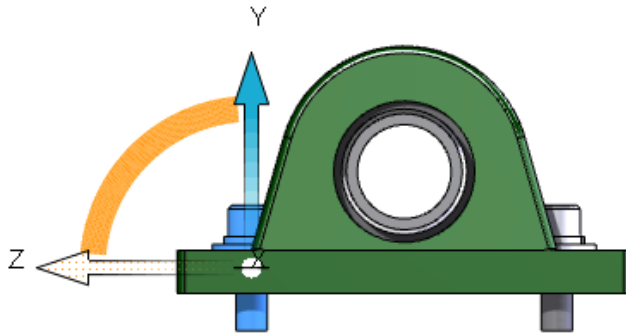

**To use Auto-space components in exploded views:**


1. Open `system_dir:\Users\Public\Public Documents\SOLIDWORKS\SOLIDWORKS 2020\samples\whatsnew\assemblies\explode\pillow_block.SLDASM`.

2. Click **Insert > Exploded View** .
3. In the PropertyManager, for **Explode Step Components** , select these components:
  - **flatwasher<1>**
  - **lockwasher<2>**
  - **socket head cap screw<2>**
4. Drag the **Y axis** to explode the components.



5. Under **Auto-space components**, select a bounding box option:

		
 <b>Bounding box center</b> Orders auto-spacing by the center of the bounding box.	 <b>Bounding box rear</b> Orders auto-spacing by the rear of the bounding box.	 <b>Bounding box front</b> Orders auto-spacing by the front of the bounding box.

6. Click **Add Step**.
7. Click .


# Reusing a Multibody Part Explode

You can reuse an exploded view from a multibody part in an assembly level exploded view. This behavior is similar to reusing a subassembly explode in an exploded view.

The reused explode step shows as fully exploded in the graphics area. If a multibody part has multiple exploded views, you can select the exploded view to use.

You cannot view individual steps reused from a multibody part. The individual steps are not animated when you use **Animate explode** or **Animate collapse**. The reused exploded view shows as a single step in the Explode PropertyManager.

**To reuse a multibody part explode:**

- 1. Open an assembly that contains a multibody part with an exploded view.
- 2. On ConfigurationManager, right-click an exploded view and click **Edit Feature**.
- 3. In the PropertyManager, for **Explode Step Components** , select the multibody part.
- 4. Under **Options**, click **From Part**.

The multibody part explodes in the graphics area. The exploded view from the multibody part is added as a step under **Explode Steps**.

- 5. Click .

# External References Options

You can select options for **In the context of** to allow creation of external references in a top-level assembly or a subassembly. You can select options for **Reference Component Type** to limit external references to any component or only envelope components.

When you edit a part in the context of an assembly, the part turns blue and the assembly in which the external reference is created turns purple in the FeatureManager design tree.

**To set external references options:**

- 1. Click **Tools > Options > System Options > External References**.
- 2. Under **Assemblies**, specify:

<b>Allow creation of references external to the model</b>	Permits the creation of external references. This option is renamed from <b>Do not create references external to the model</b> .	
<b>Reference Component Type</b>	<b>Any Component</b>	Creates an external reference to any component.
	<b>Only Envelope Component</b>	Creates an external reference only to envelope components.




<b>In the context of</b>	<b>Top level assembly</b>	Creates an external reference to components in the top-level assembly.
	<b>Same subassembly</b>	Creates external references only to components in the same subassembly.

3. Click **OK**.

## Flexible Components

You can define a part component as flexible to drive the geometry of flexible components by the assembly geometry.

For example, you model a spring in the context of an assembly where the length of the spring is driven by an external reference in the assembly. You insert the spring into a second assembly where the spring appears with an out-of-context reference. You can use the **Make Part Flexible**  tool to remap the out-of-context reference to the second assembly. As a result, the spring is driven by the second assembly without affecting the nominal length of the spring.

You can use **Make Part Flexible**  under the following conditions:


- A single part is selected.
- A part is in the top-level of the active assembly.
- A part has external references defined in the context of an assembly that is not the active assembly.


The external reference must be one of the following entity types:

Arc or cylindrical edges	Partial cylindrical faces	Sketch arcs or circles
Axes	Planar faces	Sketch lines (linear)
Cylindrical faces	Planes	Sketch points
Linear edges	Reference points	Vertices

The custom and configuration-specific properties of the flexible component are the same as these properties in the component's nominal state. Properties show the value from the nominal state. Select **Use mass property from rigid state** to apply the mass properties of the component in its rigid state to the activated flexible component.


The flexible component updates dynamically when an external reference changes.

In the FeatureManager design tree,  indicates flexible components.

To change a component from flexible to rigid, select the part and click **Make Part Rigid**  in the context menu. The remapped external references are deleted and the component returns to its nominal state.


## Adding a Flexible Component

**To add a flexible component:**

1. Open *system\_dir:\Users\Public\Public Documents\SOLIDWORKS\SOLIDWORKS 2020\samples\whatsnew\assemblies\flexible\_components\Destination\_Assembly.SLDASM*.
2. Click **Insert Components**  (Assembly toolbar) and select *system\_dir:\Users\Public\Public Documents\SOLIDWORKS\SOLIDWORKS 2020\samples\whatsnew\assemblies\flexible\_components\Spring.SLDPRT*.





3. Create a coincident mate between **Collar<1>** and the red face of **Spring<1>**.

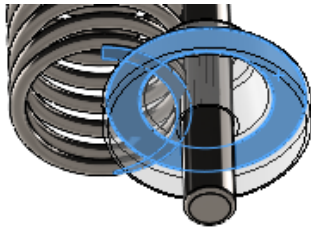


4. Click **View > Hide/Show > Axes** .

5. Create a concentric mate between the central axis of **Spring<1>** and the cylindrical shaft of **Shaft<1>**.

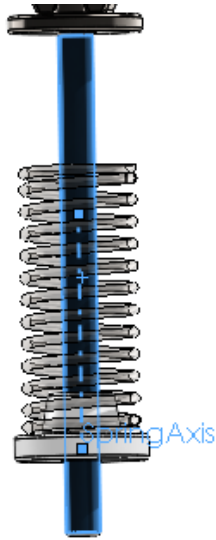


6. Click ✓.
7. In the FeatureManager design tree, right-click **Spring<1>** and click **Make Part Flexible**  in the context menu.

In the graphics area, a preview of the unattached reference entity appears.

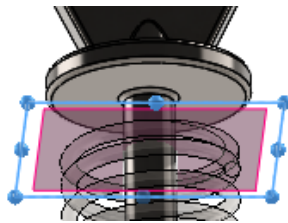

8. To reattach the reference entity, click a planar face on **Shaft<1>**.

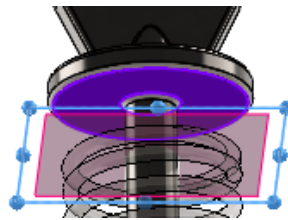

9. Click ✓.

10. In the graphics area, move **Collar<1>** up and down.




## Editing External References of Flexible Components



1. Right-click the component and click **Edit Flexible Part References**.
2. Modify the references listed in the Activate Flexible Component PropertyManager.

## Activate Flexible Component PropertyManager

### To open the Activate Flexible Component PropertyManager:

Open an assembly, right-click a part, and click **Make Part Flexible**  in the context toolbar.


### Flexible References


<b>External References in the selected component</b>	Lists the flexible references that you need to remap. When you select a reference, a preview appears in the graphics area. Select an entity of the same type in the graphics area to specify the reference.
	Indicates a reference that is not specified.
	Indicates a reference that is specified.
<b>Use mass property from rigid state</b>	Applies the mass properties of the component in its rigid state to the activated flexible component as overridden mass properties.

# Isolating Interferences


In the **Interference Detection** tool for assemblies and multibody parts, you can tag interference, components, or bodies for isolation after you exit the Interference Detection PropertyManager.

**To isolate interferences:**

- 1. Open an assembly or multibody part, and click **Interference Detection**  (Evaluate toolbar).
- 2. In the PropertyManager, click **Calculate**.
- 3. Under **Results**, right-click an interference and click **Isolate when done**.

Isolated interferences appear as .

When you select **Component View** for assemblies or **Body View** for multibody parts, you can click **Isolate when done** for the parent component, the child component, or the interference.

- 4. Click .
- The tagged interferences appear in the graphics area.
- 5. Click **Exit Isolate** on the Isolate pop-up toolbar.

# Large Design Review





## Create and Edit Component Patterns in Large Design Review



You can create and edit linear and circular component patterns when you edit an assembly in Large Design Review mode. You can edit pattern driven and sketch driven component patterns. This functionality is available for top-level assemblies only.



For a component pattern that is driven by an unavailable entity, **\*\*LargeDesignReview\*\*** shows as a prefix to the entity name in the PropertyManager.

### Available Functionality by Component Pattern

	Linear and Circular	Pattern Driven and Sketch Driven	Curve Driven and Chain
Create			
Delete			

		Linear and Circular	Pattern Driven and Sketch Driven	Curve Driven and Chain
Edit	Definition	✓		
	Patterned components	✓	✓	
	Instances to skip	✓	✓	

#### To create component patterns in Large Design Review Mode:

1. Click **Open** .
2. In the dialog box, select an assembly, and then in **Mode**, select **Large Design Review**.
3. Select **Edit assembly**.
4. Click **Open**.
5. Click **Linear Component Pattern**  (Assembly toolbar).
6. Specify options in the PropertyManager.

## Create Mates to Reference Geometry in Large Design Review ★

You can create mates to the reference geometry of components when you edit an assembly in Large Design Review.

In the FeatureManager design tree, you can view the following reference geometry for a component:

- Standard planes
- Origin
- Reference planes
- Axes - not temporary axes
- Reference points
- Coordinate systems




You can **Hide** or **Show** reference geometry in the top-level assembly and components.

You can create standard mates that reference the reference geometry. These mates are saved in the top-level assembly.

To use this functionality, save the assembly in SOLIDWORKS® 2020 and later.




#### To create mates to reference geometry in Large Design Review:

1. Click **Open**.
2. In the dialog box, select an assembly, and then in **Mode**, select **Large Design Review**.
3. Select **Edit assembly**.



4. Click **Open**.
5. Click **Mate**  (Assembly toolbar).
6. Select options in the Mate PropertyManager to create a mate to reference geometry.
7. Click .
8. In the FeatureManager design tree, expand **Mates**  for the top-level assembly to view the mate.

## Mates

### Flip Alignment of Width Mates








In the Mate PropertyManager, click **Aligned**  and **Anti-Aligned**  to flip the alignment of width mates. In the Copy with Mates PropertyManager and in the Quick Mates context toolbar, click **Flip Mate Alignment** .











**To flip the alignment of width mates:**

1. Open an assembly that contains a width mate.
2. In the FeatureManager design tree, expand **Mates** .
3. Right-click **Width**  and click **Flip Mate Alignment**.

### Quick Mates Context Toolbar

You can select the following mates and options from the Quick Mates context toolbar:


	<b>Lock rotation</b>	Available for concentric mates.
	<b>Flip Mate Alignment</b>	Available for mates that support the flip alignment option.
	<b>Limit Distance Mate</b>	Available options: <ul style="list-style-type: none"> <li> <b>Flip Dimension</b></li> <li> <b>Maximum Value</b></li> <li> <b>Minimum Value</b></li> <li> <b>Arc/Circle Measurements</b></li> </ul>

	<b>Limit Angle Mate</b>	Available options:  <b>Flip Dimension</b>  <b>Maximum Value</b>  <b>Minimum Value</b>	
	<b>Slot Mate</b>	Available options:  <b>Flip Dimension</b>  <b>Slot Position</b>	Available for <b>Distance Along Slot</b> and <b>Percent Along Slot</b> .
	<b>Width Mate</b>	Available options:  <b>Flip Dimension</b>  <b>Width Position</b>	Available for <b>Dimension</b> and <b>Percent</b> .

# Modify Configuration for Toolbox Components

You can modify the configuration for Toolbox components by using the Modify Configurations dialog box.

**To modify configurations for toolbox components:**

- In the FeatureManager design tree, right-click a toolbox component and click **Configure Component** .

In the Modify Configurations dialog box, you can create a configuration, switch to a different configuration, or suppress a component.

## Patterns

### Component Pattern with Variable Instances

You can vary the linear or angular spacing of individual instances of linear and circular component patterns to override the pattern spacing.

You can use these options in a callout to modify the spacing and direction of an instance:

<b>Distance from seed</b>	Specifies the absolute value from the seed component. Use only positive values. Available for linear component patterns.
---------------------------	---



**Angle from seed** Specifies the angle from the seed to the selected instance. Use only positive values.

Available for circular component patterns.



**Offset from nominal**

Specifies the relative value to the nominal position of the selected instance.

The nominal position of the instance is the location of the instance before the modification.




You can specify positive and negative values. For negative values, the absolute distance to the seed must be positive.


Available for linear and circular component patterns.

In the Linear Component Pattern and Circular Component PropertyManagers, **Instances to Skip** is renamed to **Instances to Override**. You can specify instances to skip in **Skipped instances** . Use **Modified instances**  to specify instances to modify.


## Modifying an Instance in a Linear Component Pattern

### To modify an instance in a linear component pattern:

1. Open `system_dir:\Users\Public\Public Documents\SOLIDWORKS\SOLIDWORKS 2020\samples\whatsnew\assemblies\patterns\Vary_Pattern.SLDASM`.
2. In the FeatureManager design tree, right-click **LocalPattern1**  and click **Edit Feature** .
3. In the PropertyManager, under **Instances to Override**, click in **Modified instances** . In the graphics area, pink selection orbs display on the pattern instances.

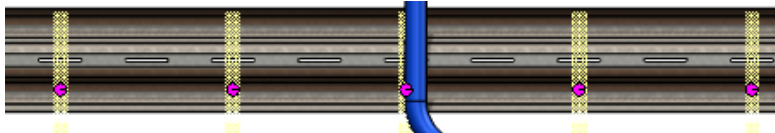



4. Click the selection orb for **4,1** and click **Modify Instance**.

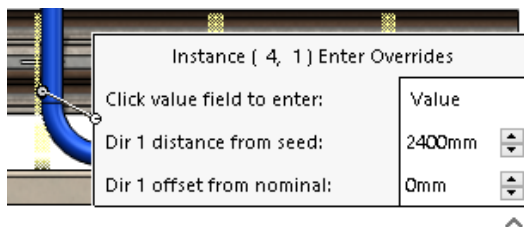


5. In the callout, modify the value for **Dir 1 offset from nominal** to -60mm and click outside of the callout.

A shadow instance appears in the new position.

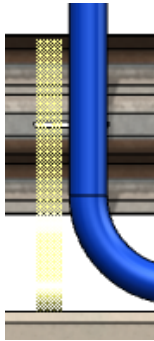

6. In the PropertyManager, click  .  
The bracket is no longer behind the pipe.

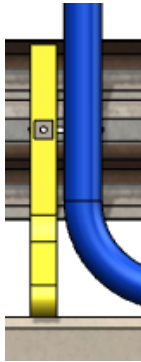






## Mirror Components PropertyManager


You can position a mirrored component by using the origin of that component. You can select multiple components in the component orientation field. You have more control over the orientation of copied components that are not opposite-hand versions.


New and changed options on the **Step 2: Set Orientation** page of the Mirror Components PropertyManager:

Mirror Type	Component origin	Mirrors a component instance about the component origin of the selected reference plane. This instance is not an opposite-hand version.
-------------	------------------	---

<b>Orient Components</b>	These options replace the <b>Reorient components</b> options.	
	 <b>X mirrored, Y mirrored</b>	X and Y axes mirror about the plane.
	 <b>X mirrored and flipped, Y mirrored</b>	X and Y axes mirror about the plane with the X axis direction reversed.
	 <b>X mirrored, Y mirrored and flipped</b>	X and Y axes mirror about the plane with the Y axis direction reversed.
	 <b>X mirrored and flipped, Y mirrored and flipped</b>	X and Y axes mirror about the plane with the X and Y axes direction reversed.
<b>Component Orientation Axis</b>	<b>Align to component origin</b>	Calculates the component orientation by mirroring and flipping about the X and Y axes of the component.
	<b>Align to selection</b>	<p>Calculates the component orientation by mirroring and flipping the component about the local X and Y axes. In the calculation, X is parallel to the mirror plane and Y is normal to the face or plane that you select in <b>Alignment Reference</b>.</p> <p>A second reference triad appears in the graphics area and shows the X and Y rotation axes for the seed and the mirrored component. The axes change as you click the orientation icons.</p>
	<b>Alignment Reference</b>	<p>Select an entity to align the up axis of the orientation axes. Available when you select <b>Align to selection</b>.</p> <p>You can select the following items as references:</p> <ul style="list-style-type: none"> <li>• Planes or planar faces that are perpendicular to the mirror plane.</li> <li>• Linear edges or linear sketch segments that are parallel to the mirror plane.</li> </ul> <p>Click <b>Flip alignment reference direction</b>  to flip the direction of the reference.</p>



Changes to the **Step 2: Set Orientation** page:

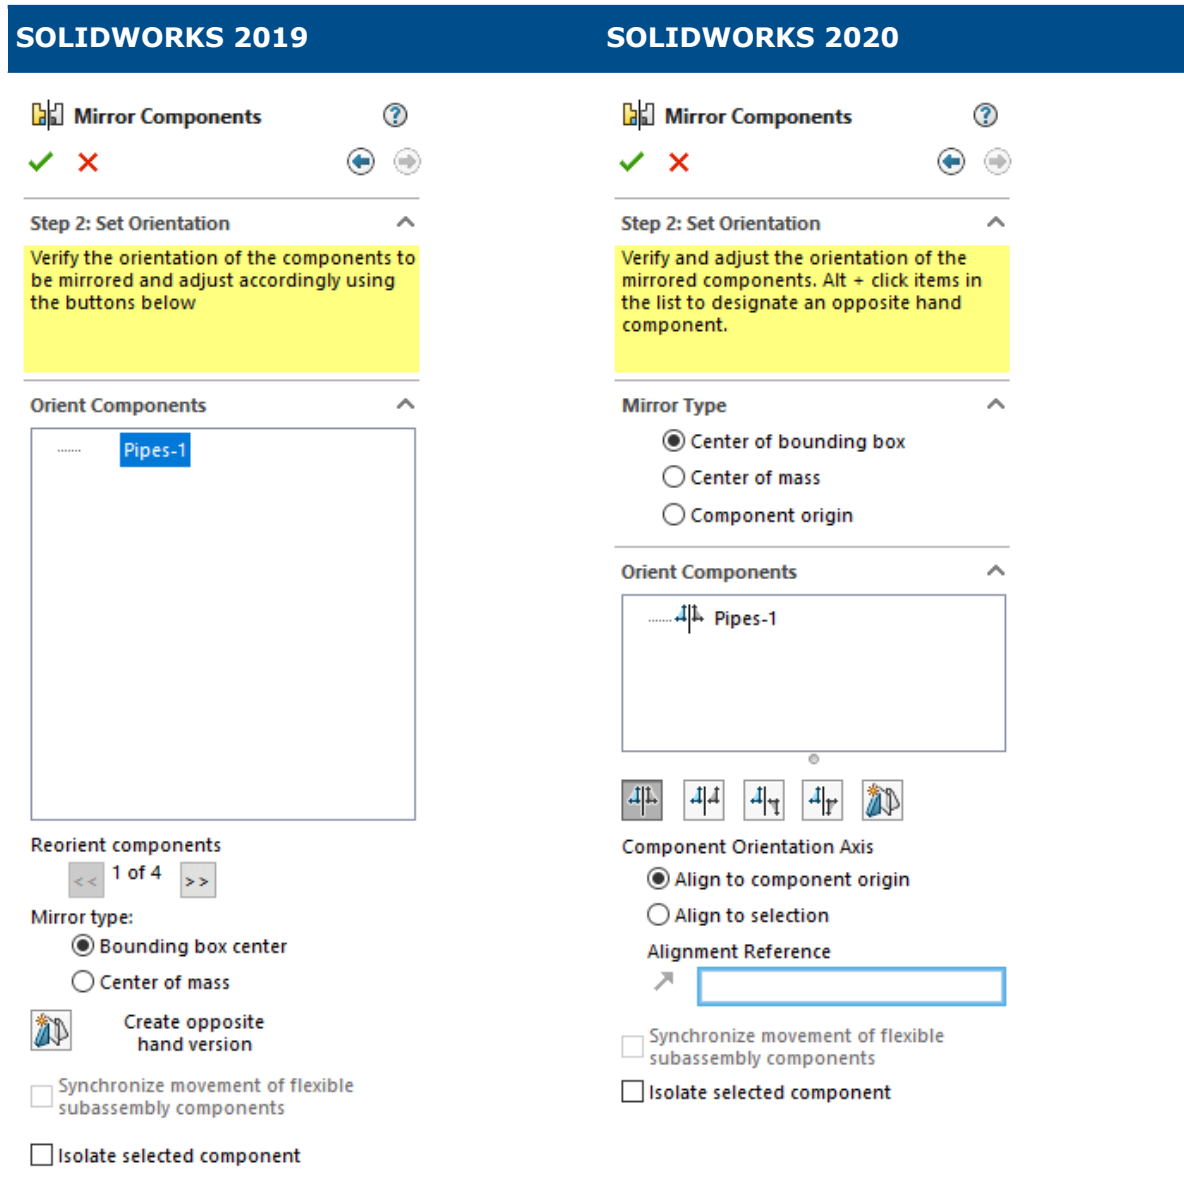- The **Mirror Type** section moved.
- The **Orient Components** box as well as the **Components to Mirror** box on the **Step 1: Selections** page of the PropertyManager are resizable.
- Multiple components can be selected for **Orient Components**. **Shift** + select to select all items between the first and last selected items. **Ctrl** + select to select individual components. **Alt** + select items to designate an opposite hand component.
- **Create opposite hand version**  moved to the right of the **Orient Components** options.


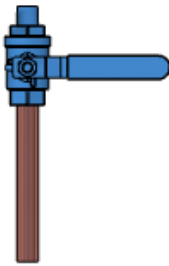

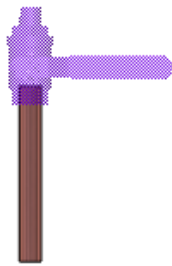

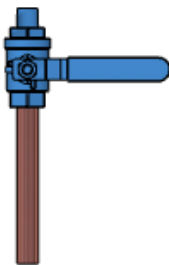

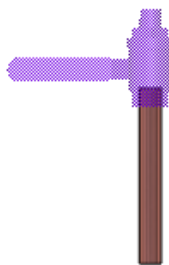

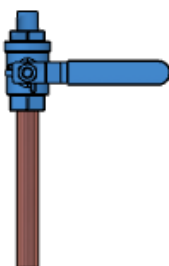

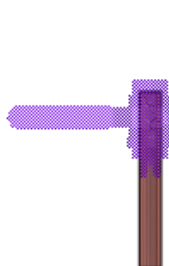

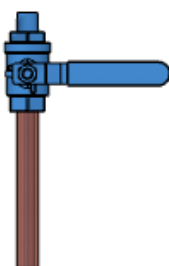

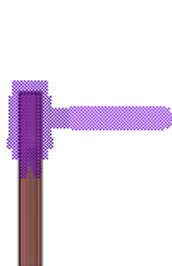


## Comparing Component Orientation Options

### To compare the component orientation options:




1. Open *system\_dir:\Users\Public\Public Documents\SOLIDWORKS\SOLIDWORKS 2020\samples\whatsnew\assemblies\mirror\_pattern\TopAssembly.SLDASM*.
2. Click **Linear Component Pattern > Mirror Components**  (Assembly toolbar).
3. Select **Mirror Plane** for **Mirror Plane** and select **Valve assembly<1>** for **Component to Mirror**.
4. Click **Next**  to **Step 2: Set Orientation**.
5. Under **Mirror Type**, select **Component origin**.

6. Under **Orient Components**, select a component orientation option.




	<p><b>X mirrored, Y mirrored</b> X and Y axes mirror about the plane.</p>			
	<p><b>X mirrored and flipped, Y mirrored</b> X and Y axes mirror about the plane with the X axis direction reversed.</p>			
	<p><b>X mirrored, Y mirrored and flipped</b> X and Y axes mirror about the plane with the Y axis direction reversed.</p>			
	<p><b>X mirrored and flipped, Y mirrored and flipped</b> X and Y axes mirror about the plane with the Y axis direction reversed.</p>			

## Comparing Mirror Type Options

To compare the Mirror Type options:

1. Open *system\_dir:\Users\Public\Public Documents\SOLIDWORKS\SOLIDWORKS 2020\samples\whatsnew\assemblies\mirror\_pattern\TopAssembly.SLDASM*.
2. Click **Linear Component Pattern > Mirror Components**  (Assembly toolbar).
3. Select **Mirror Plane** for **Mirror plane** and select **Valve assembly<1>** for **Component to Mirror**.
4. Click **Next**  to **Step 2: Set Orientation**.
5. Under **Orient Components**, select **X mirrored, Y mirrored** .

6. Under **Mirror Type**, select an option.
  - a) Optional: Click **View** > **Hide/Show** to view the bounding box, center of mass, or origins in the graphics area.
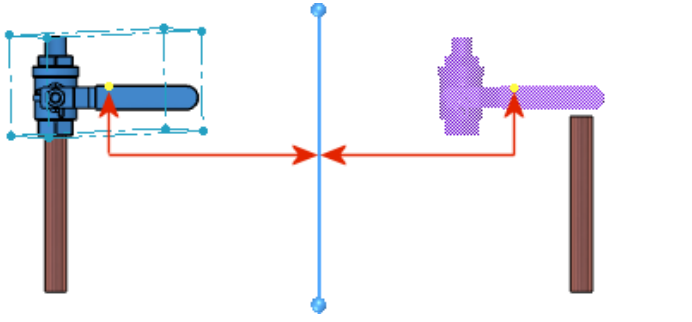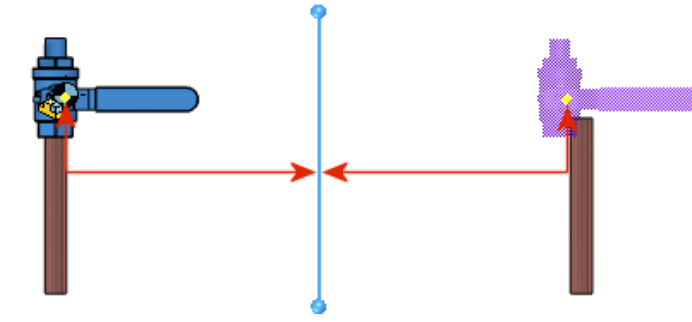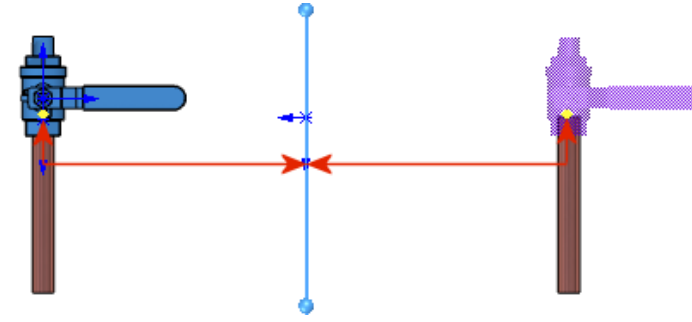
<p><b>Center of bounding box</b></p> <p>The distance between the mirror plane and the center of the bounding box is equal for the seed and the mirrored instance.</p>	
<p><b>Center of mass</b></p> <p>The distance between the mirror plane and the center of mass is equal for the seed and the mirrored instance.</p>	
<p><b>Component origin</b></p> <p>The distance between the mirror plane and the origin is equal for the seed and the mirrored instance.</p>	

## Pattern Driven Component Patterns

When a Pattern Driven Component Pattern uses a Hole Wizard feature as the driving feature, you can align the patterned instances to each hole axis.

In the Pattern Driven PropertyManager, under **Driving Feature or Component**, you can select an alignment method when you select a hole wizard feature as the driving feature:

---

<b>Align to holes</b>	Aligns instances to the Hole Wizard feature. Default alignment method for new pattern features.
-----------------------	--

---




<b>Align to seed</b>	Aligns instances to the seed instance. Default alignment method for existing pattern features.
----------------------	---


## Aligning Patterned Instances Using a Hole Wizard Feature

In the example, you pattern a rivet to a hole feature to connect 2 plates.

### To align patterned instances using a Hole Wizard feature:

1. Open `system_dir:\Users\Public\Public Documents\SOLIDWORKS\SOLIDWORKS 2020\samples\whatsnew\assemblies\patterns\RivetedPlates.SLDASM`.

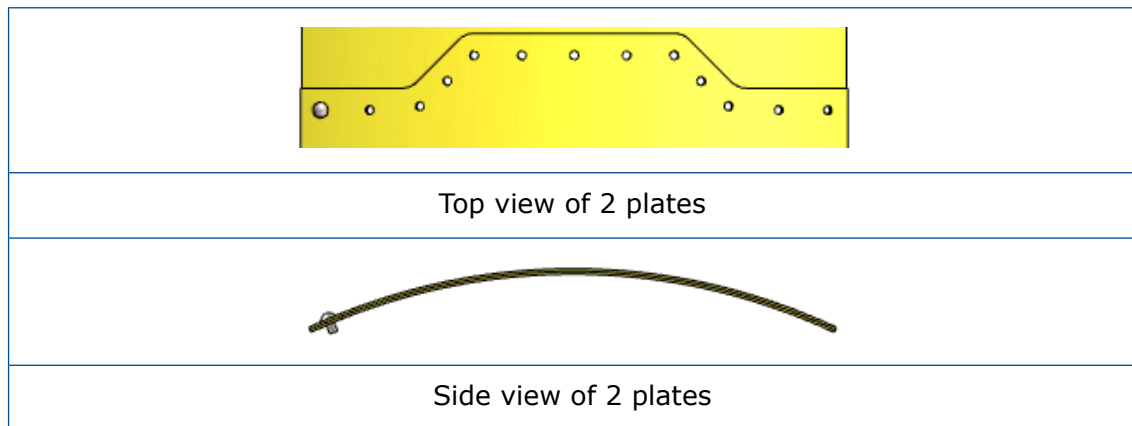

2. Click **Linear Component Pattern** > **Pattern Driven Component Pattern**  (Assembly toolbar).
3. In the PropertyManager, select the following items:
  - a) For **Components to Pattern**, select **round head rivets gb<2>**.




- b) For **Driving feature or component**, select the **04.0 (4) Diameter Hole1** feature.
- c) Click **Select Seed Position** and select the seed component.



4. Click **OK** ✓.

The pattern for **round head rivets gb<2>** matches the hole pattern.

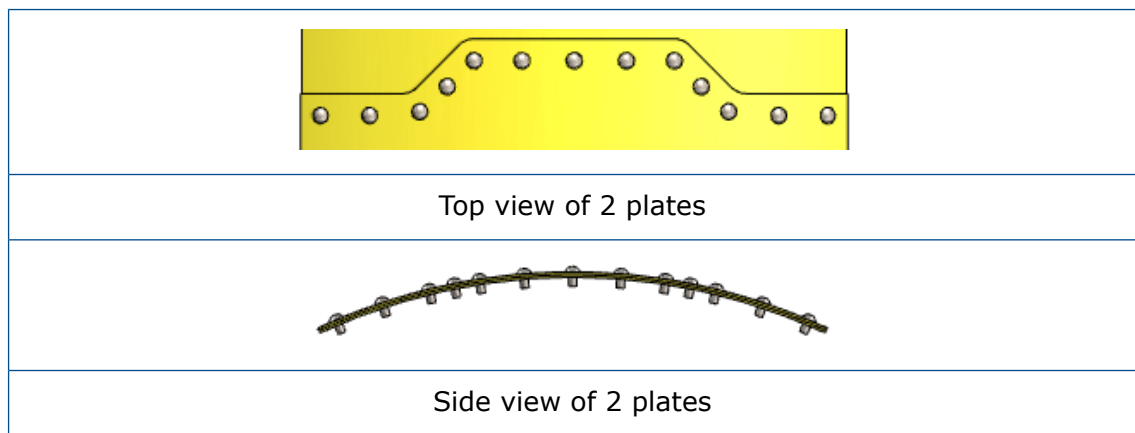

## Performance Improvements for Assemblies


Assembly performance is optimized for some tools and workflows so full rebuilds of an assembly or graphics occur less often.

## Save as Copy with a Subset of Configurations

You can save a copy of a part or assembly with a subset of configurations. When selecting configurations to save, the active configuration is selected by default. The parent configuration of a derived configuration is selected with the derived configuration. You cannot clear the check box for the active configuration or the parent configuration.

Linked display states remain in the copied model.

### To save as a copy with a subset of configuration:

1. Open a model, right-click a configuration in the ConfigurationManager, and click **Save Configurations**.
2. In the Save Configurations as a new Assembly/Part dialog box, select a configuration.  
To select all configurations, click .
3. Click **Save Selected**.
4. In the Save As dialog box, click **Save**.  
You cannot change the file type listed for **Save as type**.

# 7

## SOLIDWORKS CAM

---

This chapter includes the following topics:

- **Customization Settings**
- **Probing Routines**
- **Tab Cutting**
- **Tapered Multipoint Thread Tool**
- **Universal Post Generator**

SOLIDWORKS CAM is offered in two versions. SOLIDWORKS CAM Standard is included with any SOLIDWORKS license that has SOLIDWORKS Subscription Service.

SOLIDWORKS CAM Professional is available as a separately purchased product that you can use with SOLIDWORKS Standard, SOLIDWORKS Professional, and SOLIDWORKS Premium.

### Customization Settings

You can save and restore customization settings for a SOLIDWORKS CAM Technology Database.

The Customization Settings options are available in the Settings tab. Make sure the SOLIDWORKS software is not running when you save or restore settings.

### Probing Routines

You can use a **Probe** tool to speed up the setup and manufacturing process.

The defined routines area includes:

- Single Point
- Pocket
- Boss
- 3 Point Boss
- 3 Point Hole

The **Probe** tool is only available in SOLIDWORKS CAM Professional.

Previously, the probing cycles were controlled through a custom post processor using drilling cycles in SOLIDWORKS® CAM.

## Tab Cutting

You can create multiple tabs or micro-joints in parts for various fabrication workflows. The settings are available in the Contour tab.

The tabs or micro-joints are helpful when cutting parts in machines like a plasma, water jet, or laser. They keep small parts from tipping or falling through the cut process.

Previously, the **Avoid Area** options handled this functionality in SOLIDWORKS CAM.

## Tapered Multipoint Thread Tool

A multipoint tapered threading tool is available in the library. The tool lets the thread angle align with tapered pockets. You can define tapered threads as single point, user defined, or automatic.

Previously, you could only use straight threading tools in either single or multipoint configurations.

## Universal Post Generator

A free post editor is available. The editor adds template posts for turning that extend beyond milling.

# 8

## SOLIDWORKS Composer

---

This chapter includes the following topics:

- **SOLIDWORKS Composer**
- **SOLIDWORKS Composer Sync**

### SOLIDWORKS Composer


SOLIDWORKS® Composer™ software streamlines the creation of 2D and 3D graphical contents for product communication and technical illustrations.

#### 360 Degree Capture

When you create technical illustrations and high resolution images, you can capture a defined number of images of the model along a vertical axis performing a 360° clockwise rotation.

See *Composer Help: Working in Workshops > Technical Illustration Workshop > Multiple Tab* and *Working in Workshops > High Resolution Image Workshop > Multiple Tab*.

#### Basic Attach Type for Annotations

A basic attach type  is available for annotations.

See *Composer Help: Editing Actor Properties > Annotation Properties > Attach*.

#### BOM ID Callouts

A BOM table property lets you display BOM table entries only for geometry actors with visible callouts that display the BOM ID.

See *Composer Help: Editing Actor Properties > BOM Table Properties > Filter*.


#### Exponent Shape for Callouts

A callout property, **Exponent Shape**, displays a callout's quantity exponent with a colored circular background.

See *Composer Help: Editing Actor Properties > Annotation Properties > Callout exponent*.

## Importing Appearances from SOLIDWORKS Files


You have the option to import appearances from SOLIDWORKS files.

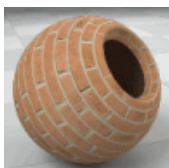

Previously, Composer silently imported all appearances whether you wanted them or not. See *Composer Help: Managing (Default) Document Properties > Advanced Properties > Properties > Input - Import*.

## Importing Exploded, Saved, and Named Views from SOLIDWORKS Files ★

You can import exploded, saved, and named views from SOLIDWORKS files.

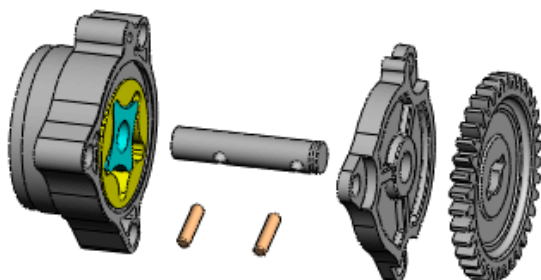

See *Composer Help: Managing (Default) Document Properties > Advanced Properties > Properties > Input - Import*.

## Inlaid Text for Linear Arrows

An **Inlaid Text** property displays text inside linear arrows.

See *Composer Help: Editing Actor Properties > Markup Properties*.

## Read-Only Mode Enhancement for Animation Library Templates

You can make edits when property values are read-only.

With the `MakeAngleAxisDistPtEditable` parameter for Animation Library XML templates, you can make the angle, axis, and distance properties of animated actors editable in the Animation Library workshop when property values are read-only. See *Composer Help > Creating Animations > Custom Animation XML Example*.

## Support of MP4 Format for Animations ★

You can save videos in FLV, MKV, and MP4 formats as well as AVI.

See *Composer Help: Working in Workshops > Video Workshop* and *Working with the Ribbon > File Menu*.

## Warning Message Before Breaking External Assembly Links

A warning message appears if you start an operation that will break external assembly links.

The warning message appears in a Composer project (.SmgProj file) or in a fully shattered product structure (.SmgXml file). It prompts you to confirm the operation. See *Composer Help: Importing and Opening Files > About Composer File Types > Breaking of External Assembly Links*.

## SOLIDWORKS Composer Sync

### Importing Appearances from SOLIDWORKS Files


You have the option to import appearances from SOLIDWORKS files.



Previously, Composer silently imported all appearances whether you wanted them or not. See *Composer Help: Managing (Default) Document Properties > Advanced Properties > Properties > Input - Import*.

### Importing Exploded, Saved, and Named Views from SOLIDWORKS Files ★

You can import exploded, saved, and named views from SOLIDWORKS files.

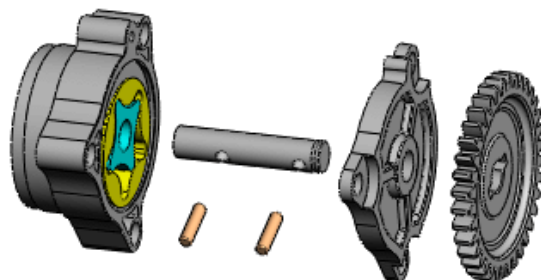

*See Composer Help: Managing (Default) Document Properties > Advanced Properties > Properties > Input - Import.*



# 9

## Detailing and Drawings

---

This chapter includes the following topics:


- **Adding Hole Callouts in Section Views**
- **Alternate Position Views**
- **Applying All Uppercase to Dimensions and Hole Callouts**
- **Chain Dimensions**
- **Cosmetic Threads**
- **Creating Markups for Drawings**
- **Custom Scales for Drawing Sheets and Views**
- **Design Library**
- **Detailing Mode**
- **Dimensioning Datum Targets**
- **Flag Notes**
- **Foreshortened Dimensions**
- **Link Child Views to Parent by Default**
- **Location for Saving a New Drawing**
- **Performance Improvements in Drawings**
- **Render Pipeline in Drawings**
- **Symbols on Sheet Formats**

### Adding Hole Callouts in Section Views


You can apply hole callouts to cross-sectioned holes and slots.


You can apply the callouts in section views, broken-out section views, and detail views. You can apply the callouts to these features:

- Hole Wizard holes and slots
- Advanced Holes
- Holes created with **Cut-Revolve**
- Holes and slots created with **Cut-Extrude**

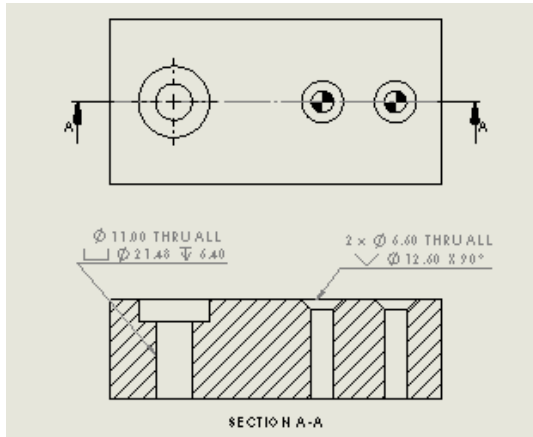


### To add hole callouts in section views:


1. Click **Hole Callout**  (Annotation toolbar) or **Insert > Annotations > Hole Callout**.

The pointer changes to .


2. Select any line segment of the cross-sectioned hole.
  - Click to select a side edge:

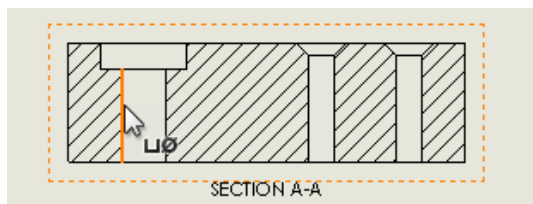

- **Shift** + click to select a top or bottom edge:

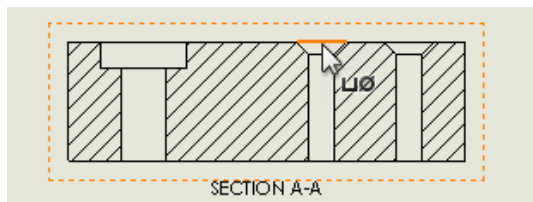

3. Click to place the callout.

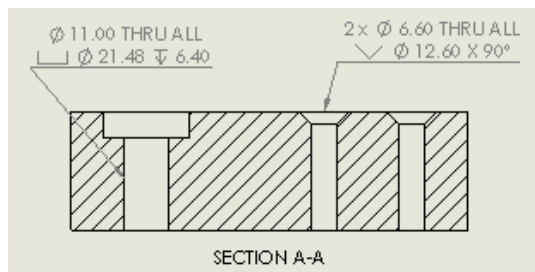

# Alternate Position Views

In part drawings, you can use **Alternate Position View** to overlay two configurations of a part in a single view. In assembly and part drawings, you can use **Edit Feature** to open a PropertyManager and define changes to the view.

## Creating Alternate Position Views - Parts

In part drawings, you can use **Alternate Position View** to overlay two configurations of a part in a single view. The two configurations must already exist in the part model before you create the alternate position view.


This is useful for showing one part that you make from another. For example, you might purchase standard junction boxes that have mounting tabs, and then machine the tabs off. You can create a drawing view of the as-machined configuration, and then add an alternate position view to show the as-purchased configuration.



In this example, the part model has two configurations:

- Buy\_01 for the as-purchased junction box (with tabs).
- Mod\_99 for the as-machined junction box (without tabs).


### To create alternate position views for parts:

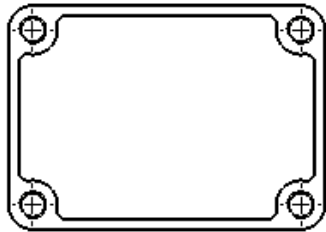1. Create a view of the as-machined junction box (Mod\_99).



2. Select the view and click **Alternate Position View**  (Drawing toolbar).
3. In the PropertyManager, for **Existing configuration**, select the configuration for the as-purchased junction box (Buy\_01).
4. Click .

Phantom lines show the tabs of the Buy\_01 configuration.

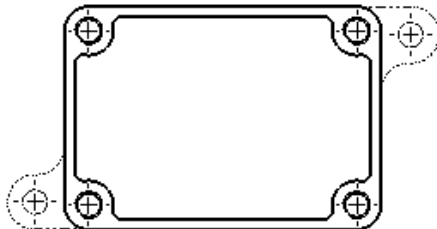


## Editing Alternate Position Views

In part drawings, you can replace the alternate position configuration with an existing configuration from the part model.

In assembly drawings, you can replace an alternate position configuration with an existing configuration from the assembly model, or you can define a new configuration on the fly.





In assembly and part drawings, you can use **Edit Feature** to open a PropertyManager and make changes to the view.

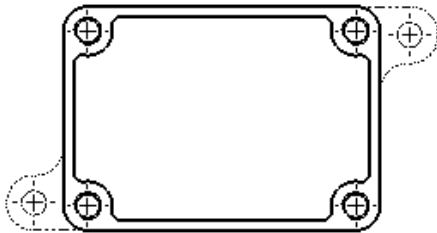In this example, the alternate position view shows the two tabs from the as-purchased configuration (Buy\_01).




You replace it with an as-purchased configuration that has different tab geometry (Buy\_02).

### To edit alternate position views for parts:

1. In the FeatureManager® design tree:
  - a) Expand **Sheet** , and then expand the **Drawing View**  that contains the alternate position view.
  - b) Right-click **Alternate Position**  and click **Edit Feature**.
2. In the PropertyManager, for **Existing configuration**, select a different configuration (Buy\_02) to use as the alternate view.
3. Click .

Phantom lines show the tabs of the Buy\_02 configuration.

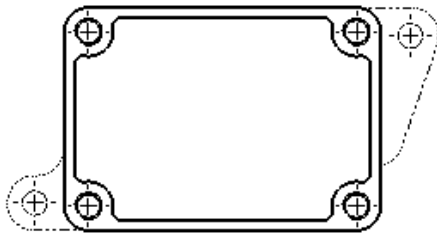

# Applying All Uppercase to Dimensions and Hole Callouts

You can set dimensions and hole callouts to display characters in all uppercase in the graphics area.

You can apply all uppercase to selected dimensions and hole callouts. In any dimension or hole callout PropertyManager, under **Dimension Text**, select **All uppercase**.

You can set the default as all uppercase for all new dimensions and hole callouts in a document. In any part, assembly, or drawing, click **Tools > Options > Document Properties > Drafting Standard**. Under **Uppercase**, select **All uppercase for dimensions and hole callouts**.

## Chain Dimensions

You can create a chain of associated dimensions measuring from one feature to the next.


You can create chain dimensions in drawings and in sketches in parts and assemblies. Chain dimensions are reference dimensions driven by the geometry. You cannot change their values or use the values to drive the model.

When you create chain dimensions, your first selection defines the starting edge of the chain. Subsequent selections are measured from one selection to the next. You can select items such as edges, vertices, circles, and midpoints.


## Creating Chain Dimensions

**To create chain dimensions:**

1. Click **Chain Dimension** (Dimension/Relations toolbar) or **Tools > Dimensions > Chain**.
2. Select the starting edge.

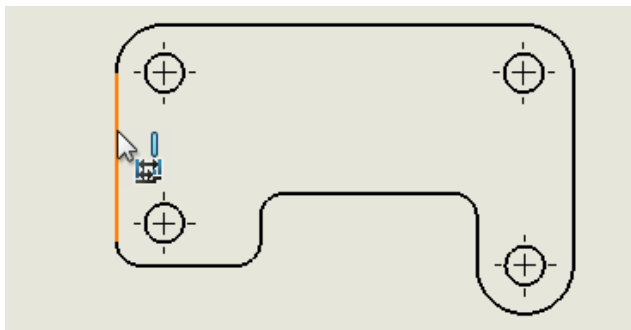

- Click features to add to the chain set.

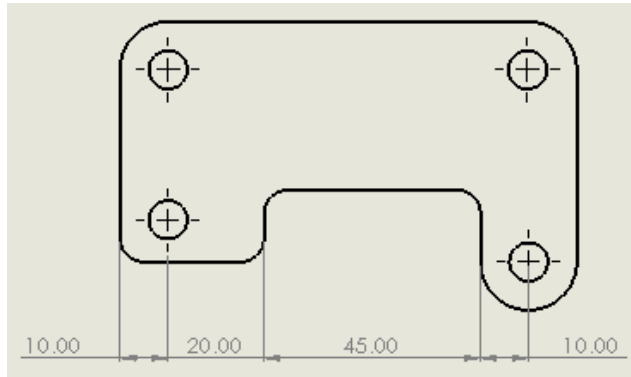

## Adding Dimensions to Existing Chain Dimensions

**To manually add an overall dimension to a set of chain dimensions:**

- Right-click any dimension in the set and click **Add Overall**.

**To add more dimensions to a set of chain dimensions:**

- Right-click any dimension in the set, click **Add to Chain**, and then select other items to add to the chain.

You can delete a dimension from a set of chain dimensions. The surrounding dimensions automatically adjust to prevent gaps in the chain.

**To automate some common chain dimension actions:**

- Click **Tools > Options > Document Properties > Dimensions > Linear**.
- Under **Chain Dimension**, select options:

Option	Description
<b>Add overall dimension to chain dimensions</b>	Automatically adds an overall dimension when you create a set of chain dimensions.
<b>Add last reference dimension</b>	(Available if <b>Add overall dimension to chain dimensions</b> is selected.) Automatically adds a final reference dimension when you create a set of chain dimensions.


## Converting Between Baseline and Chain Dimensions

You can convert baseline dimensions to chain dimensions and vice versa.

**To convert a chain dimension to a baseline dimension:**

- Right-click any dimension in the set and click **Convert to Base**.


The dimensions change to a baseline:

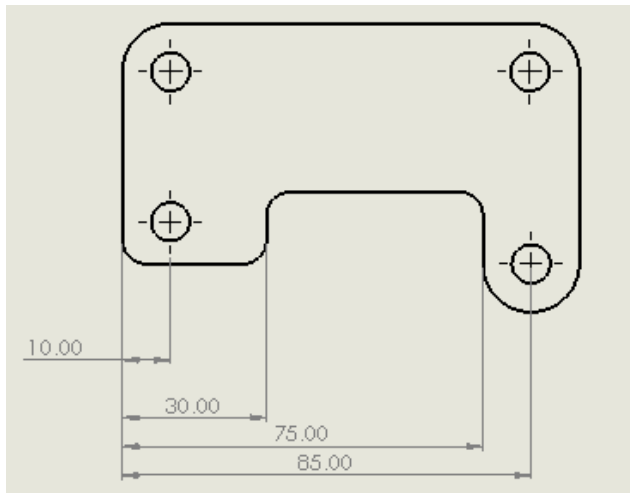

**To convert a baseline dimension to a chain dimension:**

- Right-click any dimension in the set and click **Convert to Chain**.

The dimensions change to a chain:

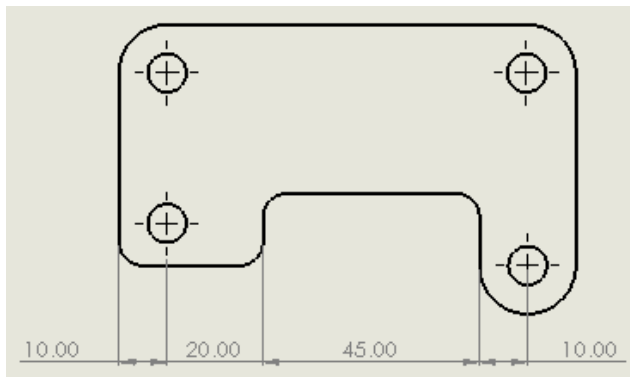


## Cosmetic Threads


### Adding Callouts for Non-Hole Wizard Holes

You can add cosmetic thread callouts to holes not created with the Hole Wizard.


In a side view of a hole, use the **Smart Dimension** tool to add the thread callout as defined in the Cosmetic Thread feature in the source part or assembly.

1. Click **Smart Dimension**  (Dimensions/Relations toolbar) or **Tools > Dimensions > Smart**.

2. Select the two silhouette edges of the cosmetic thread.

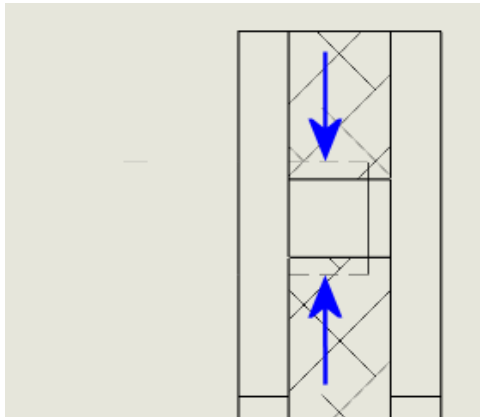

3. Click to place the dimension.  
The hole callout appears.

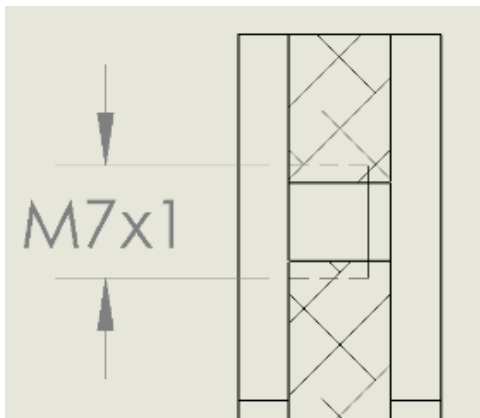


## Adding Callouts for External Threads

In drawings, you can add cosmetic thread callouts to external cosmetic threads.


The thread callout is defined in the Cosmetic Thread feature of the source part or assembly. You use the **Smart Dimension** tool to add the callout in a side view or section view of the external thread.


### To add the callout:

1. Click **Smart Dimension**  (Dimensions/Relations toolbar) or **Tools > Dimensions > Smart**.




2. Select the two silhouette edges of the cosmetic thread.

The pointer changes to  when it is over a silhouette edge of a cosmetic thread.

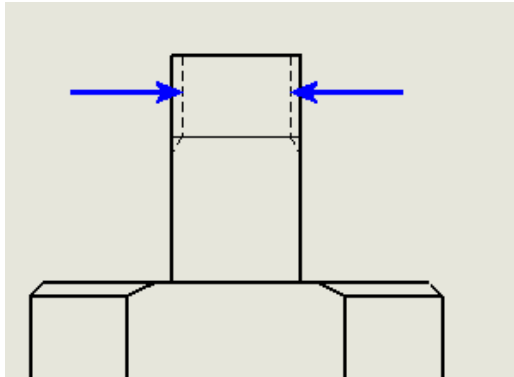

3. Click to place the dimension.

The thread callout attaches to the outer geometry of the cylinder.

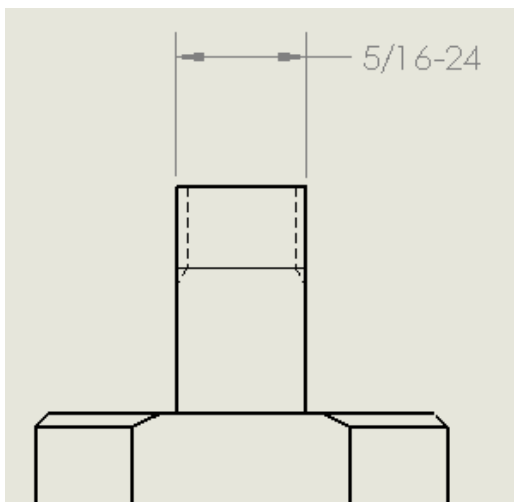

## Simplifying Callouts

In parts, assemblies, and drawings, you can exclude the thread **Type** (such as **Machine Thread** or **Straight Pipe Tapped Thread**) from callouts for cosmetic threads.

### To simplify callouts:

In the Cosmetic Thread PropertyManager, under **Thread Callout**, clear **Show type**.


### To set the default for Show type:





Click **Tools** > **Options** > **Document Properties** > **Annotations** and select or clear **Show type in thread callouts**.

# Creating Markups for Drawings

You can add markups to drawings on touch and nontouch devices.







All markups show under **Markups**  in the FeatureManager® design tree.

These options are available for an active sheet when you right-click **Markup**  in the FeatureManager design tree:

	<b>Edit Markup</b>	
	<b>Orient</b>	Zooms to the markup.
	<b>Hide</b>	
	<b>Export Markup</b>	Exports markups as one of the following file types: .pdf, .bmp, .jpg, .png, and .tif.

For more information on markup changes, see [Markups](#) on page 22.

## To create markups in drawings:

- On a nontouch device, open a drawing, and click the Markup tab in the CommandManager.  
If the Markup tab is not available, right-click in the CommandManager and click **Tabs > Markup**.
- Click **Markup**  on the Markup tab.  
In the FeatureManager design tree, a new markup shows under **Markups** .
- Click **Draw**  (Markup toolbar) to add markup content using the mouse.
- Click **Exit Markup**  to save the markup.
- To export the markup, right-click **Markup**  and click **Export Markup** .
- In the dialog box, click **Save**.

# Custom Scales for Drawing Sheets and Views


Workflow is improved for setting custom scales for drawing sheets and views.

## Setting Custom Scales for Drawing Sheets


The scale list on the status bar includes an option to set a custom scale for drawing sheets.

**To set custom scales for drawing sheets:**

1. In the status bar, click the scale.

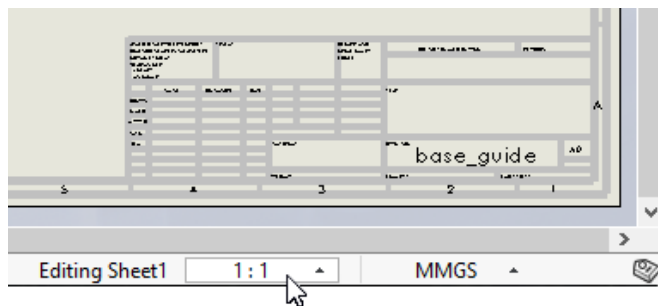

2. In the list, click **User Defined**.

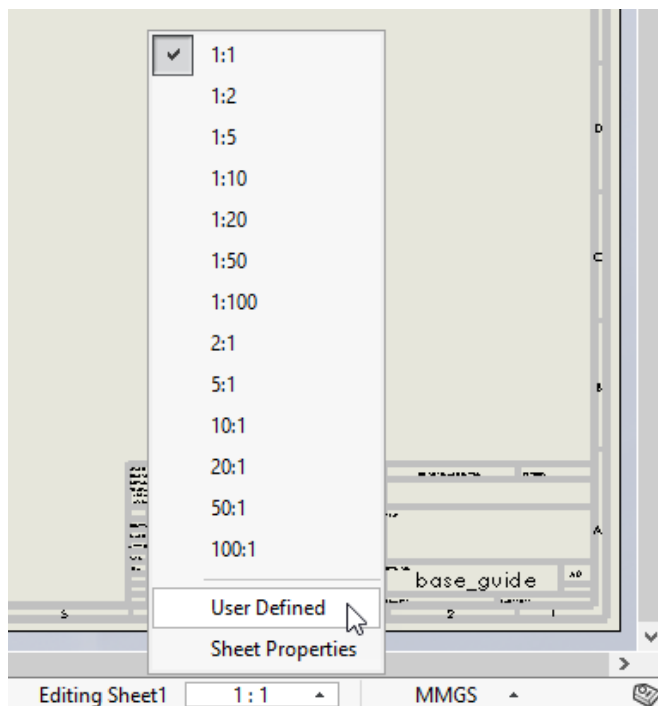

3. In the dialog box, enter a scale in the format x:x or x/x.
4. Click **OK**.


## Setting Custom Scales for Drawing Views


In the Drawing View PropertyManager, you can select **Use custom scale** and immediately enter a custom scale.

Previously, after selecting **Use custom scale**, you had to click in the box, scroll up, select **User Defined**, and then enter the scale in another box.

### To set custom scales for drawing views:

1. In a drawing, select an existing view or insert a new view.
2. In the PropertyManager, under **Scale**, select **Use custom scale**.
3. In the box, enter a scale in the format  $x:x$  or  $x/x$ .

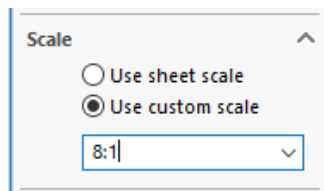

You can also click  and select a predefined scale from the list.

## Modifying the List of Available Scales

You can control which scales appear in the list that you access from the status bar and Drawing View PropertyManager. The same list is used for both drawing sheets and drawing views.

The list is defined in a file named `drawingscales.txt`, which you can edit to add and remove scales. The file contains instructions for editing the list.

The default file location is:

`install_dir\SOLIDWORKS\lang\language.`

### To specify a different location for the file:

1. Click **Tools > Options > File Locations**.
2. Under **Show folders for**, select **Drawing Scale Standards**.
3. Set the file location and click **OK**.

## Design Library

When you save a note that contains symbols and linked values to the Design Library, the software stores those symbols and values within the note. When you insert the note from the Design Library into another drawing, the stored symbols and values display correctly.

The stored symbols and values are not linked to the original note from the original document.

Previously, the software did not store the symbols and linked values in the Design Library note and they displayed an error when inserted into another drawing.

This functionality is supported for notes added to the Design Library in SOLIDWORKS® 2020 or later. Notes added to the Design Library in earlier releases still show errors.

## Detailing Mode ★

You can use Detailing mode to open large drawings quickly. The model data is not loaded, but you can add and edit annotations within the drawing.

Detailing mode is useful if you need to make minor edits to drawings of large assemblies or drawings with many sheets, configurations, or resource-intensive views.

Detailing mode is available for drawings saved in SOLIDWORKS 2020 and later.

### Creating Dimensions and Annotations

In Detailing mode, you create dimensions and annotations just as you would in Resolved mode.

**Exception:** You cannot create dimensions or annotations that require model information, such as hole callouts, cosmetic threads, or links to model properties.

If a drawing is open in Detailing mode and you change and save an associated part or assembly, then an out-of-date message appears.

The **Resolve Drawing** tool always appears in the CommandManager so you can resolve the drawing at any time.

### Saving

You can save your changes to the existing drawing file without exiting Detailing mode. Saving in Detailing mode does not require a special save format.

- If you save the drawing in Detailing mode, and then close it and reopen it, you can continue to edit the items you created in Detailing mode.
- If you save the drawing in Resolved mode, the dimensions and annotations you created in Detailing mode are resolved and saved. Then if you close the drawing and reopen it in Detailing mode, the ability to edit the resolved dimensions and annotations is limited. You can only change their position or delete them.

### Capabilities Available in Detailing Mode

You can create the following dimensions and annotations:

- |                                       |  |
|---------------------------------------|--|
| • Notes, including notes with leaders | • Weld callouts  |
| • Linear and circular note patterns   | • Geometric tolerances   |
| • Surface finish symbols              | • Datum feature symbols  |
| • Revision symbols                    | • Datum target symbols   |
| • Revision clouds                     | • Radial and linear dimensions, including use of the <b>Smart Dimension</b> tool |
| • Locations labels                    | • Ordinate dimensions  |
| • Balloons                            | • Angular running dimensions   |
| • Magnetic lines                      |  |

In addition, you can do the following:

- Change the position, rotation, and labels of drawing views.
- Copy or cut drawing views and paste them onto the same or other sheets within the same drawing.
- Within annotations, add links to the displayed values of dimensions and other linkable annotations.
- Insert sketch blocks.
- Add general and revision tables. You cannot add other table types.
- Select displayed geometry, such as model edges and sketches. Use **Select Other** to find other selectable items. You cannot select model faces in any drawing views.
- Save the file as a PDF/DXF file, or print as a PDF.

## Limitations

- You cannot create new drawing views.
- You cannot create centerlines, center marks, or hatching.
- You cannot use the **Undo** tool.
- Draft quality section views cannot be selected or exported to DXF/DWG.
- Detailing mode is not available for detached drawings.



## Opening Drawings in Detailing Mode

You can use the **Open** tool to open drawings in Detailing mode.


In Detailing mode, you can add and edit dimensions and annotations within the drawing, but the model data is not loaded.

Detailing mode is available for drawings saved in SOLIDWORKS 2020 and later.

### To open drawings in Detailing mode:

1. Click **Open**  (Standard toolbar) or **File > Open**, or press **Ctrl+O**.
2. In the dialog box, in **Files of type**, select **SOLIDWORKS Drawing (\*.drw; \*slddrw)**.
3. Browse to select a drawing.
4. In the dialog box, for **Mode**, select **Detailing** .
5. Click **Open**.


When a drawing is in Detailing mode:

-  appears on the top node of the FeatureManager design tree.
- **[Detailing]** is appended to the file name in the top bar of the SOLIDWORKS window.

# Dimensioning Datum Targets

In part and assembly models, you can use dimensions to control the position and shape of datum targets.

## Positioning Datum Targets Without Using Sketches

You can use the **Smart Dimension**  tool, without a sketch, to place driving and driven dimensions on datum targets. You can use driving dimensions to control the position of the attachment point of the datum target's leader.

## Datum Target Shape Dimensions

You can add dimensions directly to the datum target shape. You can drag to modify the position of these dimensions.

In the Datum Target PropertyManager, select **Show dimensions**.

# Flag Notes

## Flag Note Bank

The Flag Note Bank appears only on drawings that have flag notes.

## Sorting Flag Notes

To sort a stack of flag notes, right-click and select **Sort Stack**. For a stack of balloons that includes flag notes, the software sorts flag notes separately after it sorts the other balloons.

# Foreshortened Dimensions

## Arrow Styles

Two new arrow styles are available for foreshortened dimensions.

Click **Tools > Options > Document Properties > Drafting Standard > Dimensions > Linear**. Under **Foreshortened**, the new options are:

<b>Straight</b>	
<b>Single arrow</b>	

## Drafting Standards

Foreshortened dimensions are available for all drafting standards. Previously, they were only available for the ANSI drafting standard.

## Link Child Views to Parent by Default

When you create a projected view, the drawing view property **Use named configuration** is set to **<Link to parent>** by default. Previously, the property was set to **Default**.

This behavior applies only to projected views created in SOLIDWORKS 2020 or later.

## Location for Saving a New Drawing

When you save a new drawing, the default folder location in the Save or Save As dialog box is the folder where the model in the drawing's first view is saved.

You can override this behavior by specifying a default folder in **Tools > Options > File Locations > Show folders for > Default Save Folder**.

## Performance Improvements in Drawings

When you create a drawing from an open assembly, the creation of the first view may be faster than in previous releases.

## Render Pipeline in Drawings

Drawings and drawing annotations benefit from the graphics architecture introduced in SOLIDWORKS 2019, which implemented graphics acceleration and image quality scaling across graphics cards.

This architecture provides a more responsive, real-time display especially for large models. It takes advantage of modern OpenGL (4.5) and hardware-accelerated rendering to maintain a high level of detail and frame rate when you pan, zoom, or rotate large models. These performance improvements scale up with the higher-end graphics cards not fully supported in previous versions of the SOLIDWORKS software.

## Symbols on Sheet Formats

You can include geometric tolerance and surface finish annotations on sheet formats. The annotations cannot include leaders.



# 10

## eDrawings

---

This chapter includes the following topics:


- **Manufacturing Models in the 3DEXPERIENCE Marketplace|Make**
- **eDrawings Performance**
- **Quality**
- **SOLIDWORKS Drawings Support**
- **Support for Configuration-Specific \$PRPSHEET Properties**
- **Text Scale in 3D Views**
- **Virtual Reality**

eDrawings® Professional is available in SOLIDWORKS® Professional and SOLIDWORKS Premium.

## Manufacturing Models in the 3DEXPERIENCE Marketplace|Make

You can upload .stl files from eDrawings to the 3DEXPERIENCE Marketplace|Make for manufacturing. This helps you find vendors to provide you manufacturing quotes.

**To manufacture models in 3DEXPERIENCE Marketplace|Make:**


1. In eDrawings, open an .stl file.
2. Click **Upload model for manufacturing to Marketplace** .
3. Click **OK** to accept the warning that the document will be uploaded to the DS server.
4. In the 3DEXPERIENCE Marketplace|Make dialog box, click **Get a quote** and follow the instructions.

## eDrawings Performance

Performance is improved when you hover over and select entities using the **Measure** and **Markup Dimensions** tools.

## Quality

When you open a SOLIDWORKS or eDrawings part or assembly in eDrawings:

- 2D annotations, general tables, and BOMs in the **Notes**  folder of the FeatureManager® design tree:
  - Behave the same as in the SOLIDWORKS software, with the same orientation and positioning.
  - Remain parallel to the screen when you rotate or zoom models.
- You can move tables anywhere in the graphics area.
- Cosmetic threads remain visible. (Only for SOLIDWORKS part/assembly files when you set **Graphics boost** to **Fastest speed**.)

Improvements in 2D notes include:

- Ability to zoom and turn notes on/off
- BOM display. Corrected background paper alignment, sizing, and highlighting plane.
- Color
- Geometric tolerance symbols. Corrected position, rotation, box lines, and specific angles for general tolerances.
- Surface finish symbols. Corrected symbol lines, text position, angle, and display.
- Text. Corrected mirrored notes, italics, angle, font, and note positioning.

Improvements in **Unassigned Items** and annotations:

- BOMs. Rotation with model and corrected background paper size.
- Notes. Corrected angle and positioning, notes move with model, zooming, and ability to turn notes on/off.

Improvements to general tables:

- Table lines and text are synced.
- Text is properly aligned.
- Tables move when you rotate models.
- Ability to show/hide tables.
- Background paper is properly sized.

These improvements apply to .SLDPRT, .SLDASM, .EPRT, and .EASM files.

## SOLIDWORKS Drawings Support

When you open SOLIDWORKS drawings from hyperlinks (even if the links have spaces in the path or file name), the drawings open properly in eDrawings.

## Support for Configuration-Specific \$PRPSHEET Properties

When you change a configuration-specific property in a source file (.SLDPRT or .SLDASM), the \$PRPSHEET property in the linked drawing displays the updated value. You do not need to open and save the drawing in the SOLIDWORKS software.

This improvement applies to the following:

- SOLIDWORKS Quick View
- eDrawings Desktop including the integration in SOLIDWORKS PDM Desktop client
- eDrawings Web Viewer embedded in SOLIDWORKS PDM Web2 client

## Text Scale in 3D Views

When you publish a SOLIDWORKS model with 3D views to eDrawings, text remains at the same scale.

In SOLIDWORKS, clear **Always display text as the same size** in the Annotation Properties dialog box and set the **Text scale** for the 3D views. All 3D views in the eDrawings file retain the same text scale as in the SOLIDWORKS file.

This applies to .eprt and .easm files.

## Virtual Reality


With Virtual Reality (VR), you can explore models at a 1:1 scale.


Using HTC VIVE™ and VIVE Pro™ VR headsets, you can walk around and through your model in VR. You can examine each part in assemblies and take apart assemblies one part at a time.





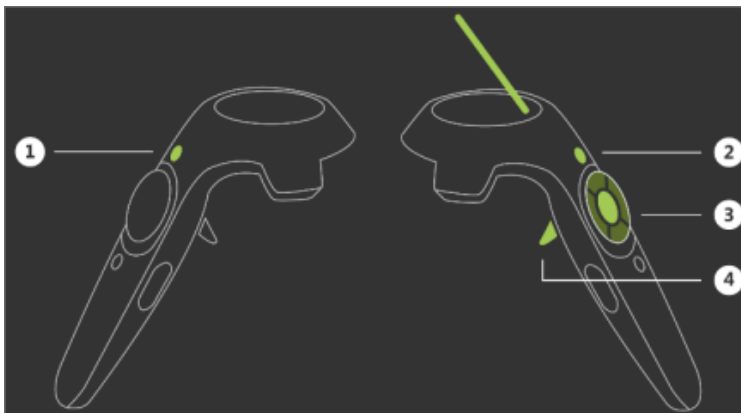

Computers with Microsoft Windows® 10 1709 and later using Valve SteamVR™ support VR in eDrawings.

### Controller Interaction

The controller supports additional functionality when you interact with models.




Button	Functionality
	Creates an exploded view of the model from the nondominant hand controller.

Button	Functionality
	Resets the view and model.
	<p>Scales/rotates the component. When you select the component (button 4) and hold down button 3, the scale or rotation is continuous. Previously you had to click multiple times to scale or rotate.</p> <ul style="list-style-type: none"> <li> Places the component.</li> <li> Changes the scale.</li> <li> Rotates the component.</li> </ul> <p>When the component is not selected, button 3 teleports you to the location that you are pointing to with the dominant hand controller.</p>
	<p>Selects the component with a single click. You can focus on manipulating the component with button 3 without holding down button 4 simultaneously. If you click button 4 again, the component returns to its original position. Previously you had to hold down button 4 to keep the component selected.</p>

## Custom Floor and Sky Environments

You can add image files to create custom floor and sky environments in VR. Requirements include:

- Floor. Must be .png or .jpg files.
- Sky. Equirectangular .png or .jpg files. Skies must be equirectangular. Images must have an aspect ratio of 2:1. Cube maps are not supported.

To add image files for custom floors and skies, click **VR Options**  (if you have a VR model open) or **Tools > VR Options**. In the dialog box, browse to a folder that includes the image files and click **OK**.



Floor



Sky


## Environment Pane

You can change the **Floor Scale** in the Environment  pane.


## Image Quality

Image quality in VR has improved with:

- Full screen anti-aliasing
- Larger draw distances
- Realistic reflections and transparencies on models

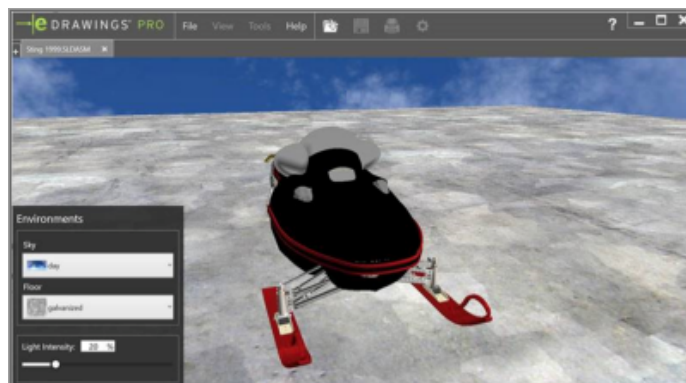

2019

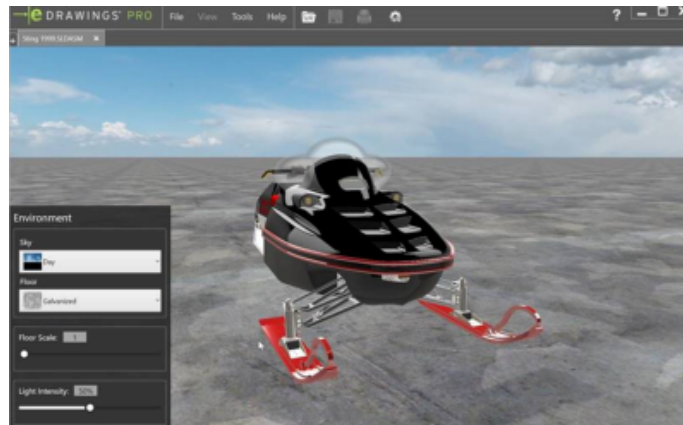

2020

## Model Display

You can display models with:


- Ambient occlusion
- Dynamic shadows
- Non-RealView appearances

## Opening Models

You can open multiple models in VR in eDrawings. Although you can view only one model at a time in the VR headset, you can switch between models on the desktop. eDrawings can have either VR or non-VR documents open, but not both at the same time. To switch between VR and non-VR documents, close all current documents in eDrawings.

## Warning Messages

Warning messages help you use VR properly. They appear when:

- A laptop is not plugged into a charger when you click **Play**  to view the model in a VR headset.
- The VR headset is not plugged in.

# 11

## SOLIDWORKS Electrical

---



This chapter includes the following topics:

- **Leader Lines**
- **Minimum Bend Radius and Bend Factor**
- **Project Viewer**
- **Reimport Electrical Data for Wires, Cables, and Harnesses**
- **Report Enhancements for Rows and Columns**
- **User Rights Manager**




SOLIDWORKS® Electrical is a separately purchased product.

### Leader Lines

You can create leader lines with blocks and notes in 2D panel layouts and harness drawings.



To create a leader line, on the Draw tab, under **Annotation**, click **Block leader**  or **Text leader** .

#### Annotation

	<b>Text leader</b>	Opens the <b>Text leader</b> section under the Command panel.
	<b>Block leader</b>	Opens the <b>Block leader</b> section under the Command panel.
	<b>Leader styles</b>	Sets the leader style.



### Text Leaders

**To create text leaders:**

- On the Draw tab, under **Annotation**, click **Text leader** .
- On the Cabinet layout tab, under **Annotation**, click **Text leader** .

## Text Leader

You can draw leader lines freehand or by defining the coordinates in the **Text leader** section.


	Closes the section.
<b>Message</b>	Prompts you to create a text leader.
<b>Enter coordinates</b>	Defines the starting point of the leader line.
	Validates the input.

## Graphical Properties


When you select a text leader in the graphics area, the Properties panel displays the text leader line properties under the **General**, **Overall**, **Leaders**, and **Text** sections. You can set the following properties:

<b>Arrowhead</b>	Specifies the arrowhead type such as closed, dot, and oblique.
<b>Justify</b>	Specifies the text alignment.
<b>Attachment type</b>	Specifies the text attachment direction as horizontal or vertical.
<b>Horizontal landing</b>	Shows the horizontal landing line of the leader.

**With  
horizontal  
landing**

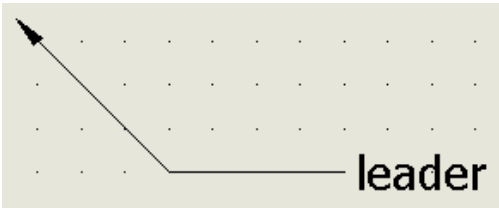


**Without  
horizontal  
landing**

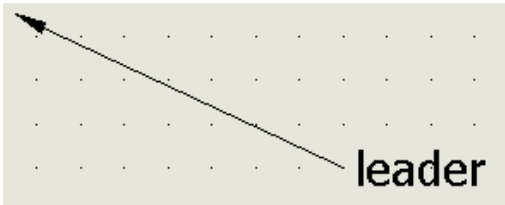

## Grips

When you select a leader, four grips appear at the following positions:



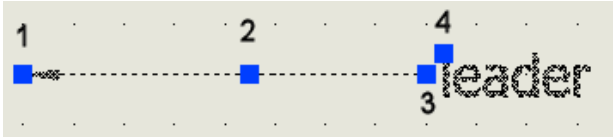





Callout	Description
1	Arrowhead
2	Start point of the landing line
3	End point of the landing line
4	Text position

## Block Leaders

### To create block leaders:

- On the Draw tab, under **Annotation**, click **Block leader** .
- On the Cabinet layout tab, under **Annotation**, click **Block leader** .

### Block Leader

	Closes the section.
<b>Message</b>	Prompts you to create a block leader.
<b>Enter coordinates</b>	Defines the starting point of the leader line.
	Validates the input.

### Graphical Properties


When you select a block leader in the graphics area, the Properties panel displays the block leader properties under the **General**, **Overall**, **Leaders**, and **Block** sections. You can set the following properties:

<b>Block Source</b>	Sets the block source such as slot, circle, and box.
---------------------	--


**Horizontal landing**

Shows the horizontal landing line of the leader.

**With  
horizontal  
landing**

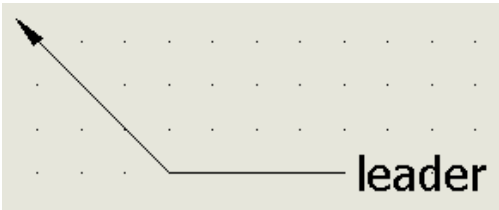


**Without  
horizontal  
landing**

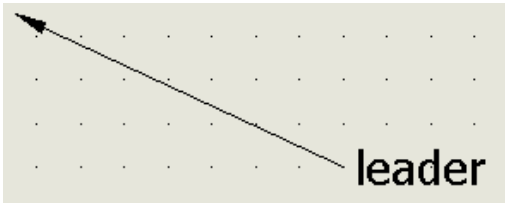

Grips

When you select a leader, four grips appear at the following positions:

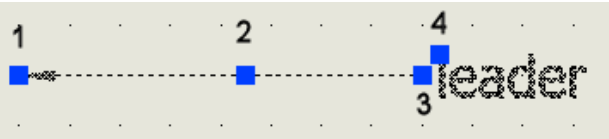

Callout	Description
1	Arrowhead
2	Start point of the landing line
3	End point of the landing line
4	Text position


Leader Styles Manager





You use **Leader styles** to create, delete, edit, and set the current leader.

**To use the Leader Styles:**

- On the Tools tab, under **Drawing styles**, click **Leader styles** .

Leader Styles Manager

	<b>New</b>	Creates a new leader style.
---	------------	-----------------------------

	<b>Rename</b>	Opens the Rename dialog box to rename the leader style.
	<b>Delete</b>	Deletes multiple leader styles. You cannot delete the current style or the leader style used in the open document.
	<b>Properties</b>	Displays the leader style properties.
	<b>Set as current</b>	Sets the selected leader style as current for the open document.

## Minimum Bend Radius and Bend Factor

You can create a route part if the bend radius of the cable, core, or wire is less than the minimum bend radius.

You can define the minimum bend radius and the bend factor for cables and wires in SOLIDWORKS Electrical Schematics. The **Bend Radius (Diameter x Bend Radius Factor)** defines the minimum bend radius. The **Bend radius (x Diameter)** field is renamed to **Bend Radius Factor**.

In an electrical segment, the software considers the individual minimum bend radius for the cable and core.

To define the bend radius and bend factor:

- For wires, right-click a wire in schematic view, click **Wire style > Properties**, and enter a value for **Bend Radius Factor** and **Bend Radius (Diameter x Bend Radius Factor)**.
- For cables, right-click a cable in schematic view, click **Cable properties**, click the cable name, and enter a value for **Bend Radius Factor** and **Bend Radius (Diameter x Bend Radius Factor)**.













The **Bend Radius Factor** and **Bend Radius (Diameter x Bend Radius Factor)** are interdependent. If you enter the value in one field, the value in the other field updates correspondingly.

## Project Viewer

You can view SOLIDWORKS Electrical projects in the Project Viewer window.

To open Project Viewer, click **Projects manager > Preview** . The software displays the selected SOLIDWORKS Electrical project in read-only format.

## View

	<b>Projects manager</b>	Opens the projects manager window.
	<b>Previous</b>	Displays the previous page.
	<b>Next</b>	Displays the next page.
	<b>Properties</b>	Opens the properties dialog box of the selected record.
	<b>Reports</b>	Opens the reports manager window.
	<b>Zoom Extents</b>	Zooms to display the drawing extents.
	<b>Rectangular Zoom</b>	Zooms to display an area specified by the rectangular window.
	<b>Dynamic Zoom</b>	Real-time zoom.
	<b>Real-time Pan</b>	Moves the view when you click and move the mouse.
	<b>Print</b>	Opens the print manage window.
	<b>Export DWG files</b>	Exports the drawings in DWG format.
	<b>Export PDF file</b>	Exports the drawings in PDF format.

## Filters

You can filter a specific document or component. When you open Documents tab, the software displays the **Document Search** and when you open Components tab, the software displays the **Component Search**.

## Side Panel

<b>Documents</b>	Lists the project documents.
<b>Components</b>	Lists the components, which are sorted by location.

## Preview Zone

Displays the drawings present in the selected Documents or Components tab. Click a drawing to open it in the viewer zone.

## Viewer Zone

Displays the selected drawing. The software displays one drawing at a time. The drawings are read-only and you can only use zoom commands.

# Reimport Electrical Data for Wires, Cables, and Harnesses

You can remove unused sketch segments from wires, cables, and harnesses.

If you remove a wire or core from electrical routes, cables or harnesses in SOLIDWORKS Electrical Schematics, when you reimport that model, the software removes the wire or core from the model in SOLIDWORKS Electrical 3D.

If you delete a wire style from a route assembly in SOLIDWORKS Electrical Schematics, when you reimport that model, the software deletes that particular route assembly from SOLIDWORKS Electrical 3D.

## Routing Parameters

You can set the routing parameters to create electrical harnesses from the Route harnesses PropertyManager.



<b>Enhanced large assembly performance</b>	Suppresses all the 3D parts of large assemblies to enhance performance.
<b>Manual harness</b>	Adds the components to the harness and creates guidelines. Select this to manually finish the harness.
<b>Generate fan-outs</b>	Creates fan-outs for multipin connectors. This option is enabled when you select <b>Manual harness</b> .

# Report Enhancements for Rows and Columns

You can add a column that specifies the row number and controls the row height in reports.

## Row Height in Reports

You can set the row height. The software ensures that the row height is not less than the font size.

To control the row height, on the Project tab, click **Reports**  > **Properties**  > **Report configuration edition** > **Styles** and set the **Row height**.

This functionality applies to **Header**, **Content**, and **Total**.

## Row Style

<b>Automatic</b>	Applies the default value for the row height.
<b>Minimum height</b>	Applies the minimum height entered in <b>Row height</b> . Applicable for multiple lines in a row.
<b>Fixed height</b>	Applies the fixed height entered in <b>Row height</b> . Applicable for a single line in a row.

## Row Height

Enter the row height.

## Row Number Column in Reports

You can add a column in a report that specifies the row number of the report entity.

You can configure the row number and define a base number in the report template. The row numbers are consecutive and auto assigned in the report manager and report drawings.

The row numbers are still consecutive when you apply the following operations:

- **Filter**
- **Sort**
- **Merge**
- **Break**

Use the following variables to keep row numbers consecutive after a break:

- **REPORT\_ROW\_GLOBAL**. Applies consecutive row numbers to the entire row.
- **REPORT\_ROW**. Applies consecutive row numbers to each report table that has breaks.

## User Rights Manager

You can archive custom user profiles, customize the feature grid, control the deletion rights of user profiles, and create a user-defined profile from the **User rights manager**.

## Archive Environment

You can archive and unarchive the environment, user-defined profiles, and linked features.

A notification appears when there is a mismatch between the number of profiles during archiving and unarchiving.







## Feature Grid

Administrators can export the feature grid list to a `.csv` file.

## User Profile Customization

Administrators can create new custom profiles and user groups from system profiles, edit custom profiles, and manage user rights in the **Feature grid**.

### User Profile

	<b>New Profile</b>	Opens the Create profile dialog box, where you enter the profile name. This option is enabled when you select an existing system profile. The new profile copies the feature list of the selected profile.
	<b>Edit Profile</b>	Edits the rights of system and custom profiles.
	<b>Reset to Default</b>	Sets the rights of the custom profile to the default rights of the system profile from which it was referenced.
	<b>Apply Changes</b>	
	<b>Show empty profiles</b>	Displays the profiles without groups and users.
		Lets you organize the custom profiles.

# 12

## SOLIDWORKS Flow Simulation

---

This chapter includes the following topics:


- **Altitude**
- **Fan Derating**
- **Logical Expressions in Formula Dependency**

SOLIDWORKS® Flow Simulation is a separately purchased product that you can use with SOLIDWORKS Standard, SOLIDWORKS Professional, and SOLIDWORKS Premium.

### Altitude

You can use **Altitude** to set the atmospheric pressure and temperature.

**Altitude** makes it easier to conduct what-if or optimization analyses.

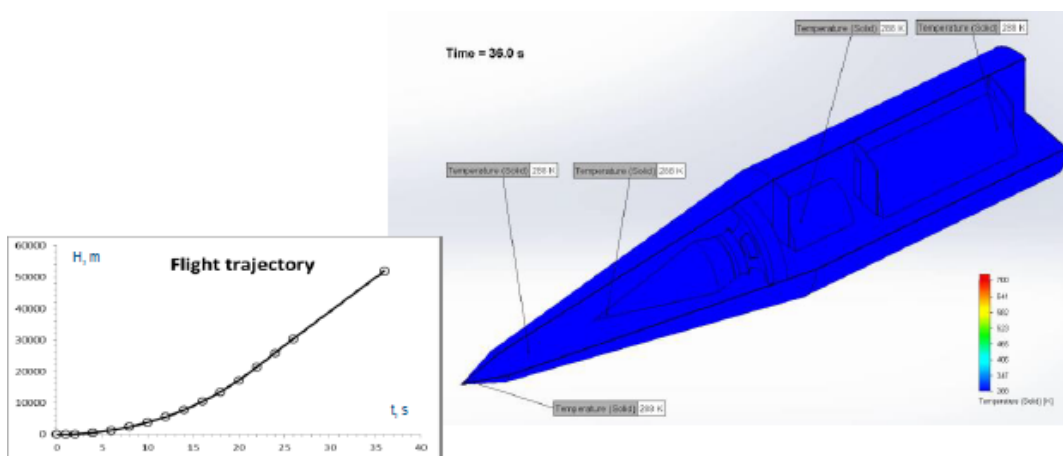


### Fan Derating

Fans are often set to run below their maximum capacity to reduce noise and increase their lifetime, but still achieve their thermal cooling requirements. Fans run at less than maximum capacity by reducing their RPMs, which derates the fan curve. The **Derating** factor simulates this reduction of the fan curve.



$$\Delta P_d = DF^2 \cdot \Delta P$$


$$\dot{m}_d = DF \cdot \dot{m}$$

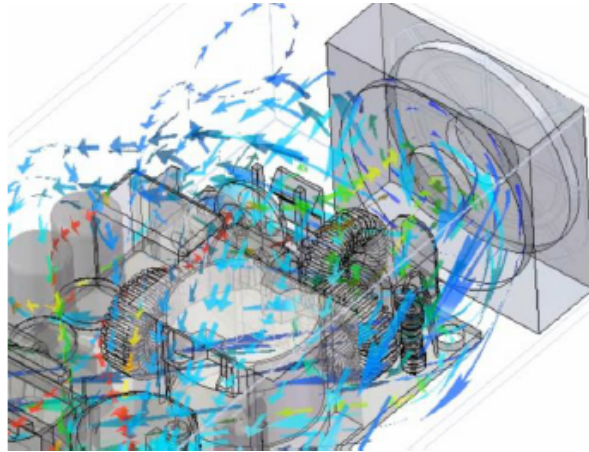

## Logical Expressions in Formula Dependency

Boundary conditions depend on coordinates, time, and monitor parameters, such as goals. You can define sophisticated dependencies using conditional and Boolean expressions such as IF, AND, OR, XOR, NOT, >, <, and =.

For example, you can set the value of a heat source dependent on two different temperature sensors, defined as temperature goals, so that the dissipated power is downgraded depending on the temperature at the sensors.

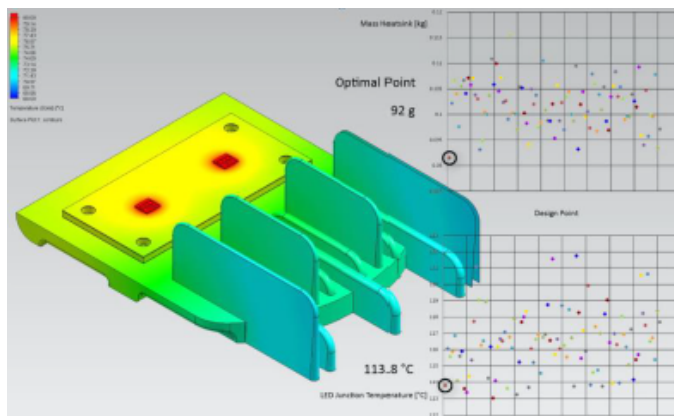

# 13

## SOLIDWORKS 3D Interconnect

---

This chapter includes the following topics:

- **Importing DXF and DWG Files**
- **Importing IFC Files**
- **Inserting CAD Files into Active SOLIDWORKS Files**

### Importing DXF and DWG Files

SOLIDWORKS 3D Interconnect supports importing BREP data from DXF or DWG files.

In the DXF/DWG Import dialog box, under **Import to a new part as**, click **3D curves or model** and click **Finish**. The software imports the BREP data from the DXF or DWG file. You can do the following on the imported body:

- Edit feature
- Update model
- Break link

### Importing IFC Files

SOLIDWORKS 3D Interconnect can import IFC files.

Imported IFC files have a hybrid body-mode feature that quickly converts complex faceted shapes to mesh bodies. This includes shapes such as humans, trees, and furniture. IFC files convert simple shapes like walls, roofs, beams, and columns into precise solid and surface bodies that you can directly use for modeling references. This functionality improves performance and reliability for large, imported IFC files and lets you model directly against major structural elements of buildings in the SOLIDWORKS software.

### Inserting CAD Files into Active SOLIDWORKS Files

You can insert non-native (\*.catpart, \*.ipt, \*.par, \*.prt) or neutral (\*.iges, \*.igs, \*.jt, \*.sat, \*.step, \*.stp) CAD files into an active SOLIDWORKS part or

assembly file. You can also drag a non-native or neutral CAD file into an active SOLIDWORKS part or assembly file.

## SOLIDWORKS Part Files

To insert a non-native or neutral CAD file into an active SOLIDWORKS part, click **Insert** > **Part**.

When you drag the CAD files into the active SOLIDWORKS part file, a prompt appears:  
**Are you trying to make a derived part?**

- Click **Yes** to insert the part as a derived part feature.
- Click **No** to open the part in a new window as a new document.

## SOLIDWORKS Assembly Files

To insert a non-native or neutral CAD file into an active SOLIDWORKS assembly, click **Insert** > **Component** > **Existing Part/Assembly**.

# 14

## SOLIDWORKS Manage

---

This chapter includes the following topics:

- **Adding Conditions to a Process Stage**
- **Adding Related Records**
- **BOM Editing**
- **Copy Manual Quantities of BOM**
- **Creating a Subprocess**
- **Custom Procedures**
- **Customized Affected Item List**
- **Dashboard Viewer**
- **Editing the Project Task Subject**
- **Export Feature of BOM Compare Tool**
- **Inactive Configuration Part Numbering**
- **Integration into Microsoft Outlook**
- **Interactive Capacity Planning and User Workload Dashboards**
- **Main User Interface Controls for Records**
- **Object Notes**
- **PDM Options Tab**
- **Plenary Web Client**
- **Process Task Assignment Controls**
- **Project Gantt Charts**
- **Send to Process**
- **View Hidden Controls in the Workflow Designer**

SOLIDWORKS® Manage is an advanced data management system that extends the global file management and application integrations enabled by SOLIDWORKS PDM Professional.

SOLIDWORKS Manage is the key element in providing Distributed Data Management.

## Adding Conditions to a Process Stage

You can add conditions to a process stage, which helps SOLIDWORKS Manage to evaluate the field values of affected items. It also prevents the **Send to Next Stage** action, if conditions are not fulfilled.

Adding conditions in SOLIDWORKS Manage is similar to defining conditions for SOLIDWORKS PDM transitions. You can use the same Conditions node for stage conditions that you use for Decision controls.

**To add conditions to a process stage:**

1. In the Process configuration administration tool, go to the Workflow Properties page.
2. Select a process stage where you want to add a condition.
3. Select the **Condition** node.
4. Click **New**.
5. Create the required condition.
6. Click **Save** and close.

## Adding Related Records

You can add related records to the existing affected items, including assembly child records, parent records, and references.

**To add related records:**

1. Create a new process or edit an existing process.
2. Add one or more affected items.
3. Right-click an affected item and click **Add related records**.
4. Click **BOMs**, **Where Used**, or **References** icons.
5. Select the check box for each line item.

Use the search and filter features to accelerate the process.

6. Optional: Click **Add** to add records.
7. Close the dialog box.

The restriction for adding records from a single object still applies.

## BOM Editing

In the dialog box called Open BOM in new window, enhancements include check out and editing controls.

The controls let you edit the lower-level BOMs faster.

The **Open BOM** icon added to the BOM tab controls lets you edit the BOM of a record without opening the property card.

## Copy Manual Quantities of BOM

When you edit a BOM using the Copy From dialog box, you can copy manual quantities by selecting **Copy Manual Quantities**.

## Creating a Subprocess

While sending multiple items through a process, you can split the selected items into a connected subprocess.

You can create a subprocess only if you enable it in the process object. The subprocess retains the history of the parent process. You have flexibility to keep some items in the parent process and send others to the subprocess.

### To create a subprocess:

1. Select items in a process.
2. Right-click and click **Create sub-process**.  
A new process is created, which includes the affected items.
3. Optional: To view affected items that are split into a subprocess, select **Show sub-process**.
4. Optional: To view the subprocesses and hierarchy of the processes, click the Sub-process tab.

## Custom Procedures

An option on the Search tool lets specific users or groups run administrator-defined queries of the database without accessing the database management applications.

Users can define customized procedures, which can include input parameters.

## Customized Affected Item List

You can customize the grid where you view the affected items. You can add fields and apply conditional highlighting.

The enhancement provides similar customization capabilities available in the Bill of Materials (BOM) variants. You can add detailed information for each affected item.

## Dashboard Viewer

The Dashboard Viewer lets organizations display a dashboard on a community monitor that updates periodically.

The application:

- Is available in the SOLIDWORKS Manage program group.

- Provides access to configured dashboards only.
- Can display dashboards in full-screen mode.
- Can refresh at regular intervals.
- Always keeps available data up-to-date.
- Requires a login credential.
- Requires at least one Viewer license.

## Editing the Project Task Subject

You can edit the subject of multiple project tasks to provide additional information.

You can add project-specific information, such as a project number, to the subject line to help users search and view the tasks related to a project. This information can appear before or after the original text.

### To edit the project task subject:

1. Open a project record.
2. Optional: Go to the Planning tab and select the Tasks tab.
3. Go to the Tasks tab, if enabled.
4. Select and right-click a task or group of tasks to update.
5. Click **Subject**.
6. In the dialog box, select one or more options.

The following table describes the options available in the dialog box.

Area	Description
<b>Add/Remove</b>	<b>Add</b> amends the subject text. <b>Remove</b> removes previously added text.
<b>Position</b>	<b>Before</b> places the text before the existing text. <b>After</b> places the text after the existing text.
<b>Text</b>	<b>Part Number</b> adds a part number. <b>Text</b> adds text to the subject.

7. Click **Apply**.

- Subject labels indicate the position of the original text.
- The position of the labels does not change if you change your selection in the Position area.

## Export Feature of BOM Compare Tool

The BOM Compare tool has an **Export** button that lets you export the comparison information to a Microsoft® Excel file.

The spreadsheet contains:

- Information on all records that are compared.
- A comparison of the two sides of the formatted output.

When you export the comparison information, the Microsoft® Excel file automatically creates the right and left sides of the comparison on a single sheet.

## Inactive Configuration Part Numbering

Administrators can assign part numbers to inactive configurations.

Administrators can use the root file's name with the name of the configuration. This makes it less confusing for users because they can see the configuration name.

## Integration into Microsoft Outlook

The integration of SOLIDWORKS Manage into Microsoft® Outlook helps to use message data effectively.

With the integration, you can:

- Link incoming emails directly to records to provide a complete history and improved visibility.
- Create records based on a message. For example, an organization can convert a customer request into a process or a case for evaluation.

## Interactive Capacity Planning and User Workload Dashboards

The dashboard of the Project Planning tool has two role-based user interfaces.

Dashboard	Description
<b>Interactive Capacity Planning</b>	Provides project managers with insights for scheduling work.
<b>User Workload</b>	Provides data for a project resource across all projects.



# Main User Interface Controls for Records

The **Go to Record** option lets users of a desktop client navigate between records efficiently.

**Back** and **Forward** buttons let users go back and forth between records.

## Object Notes

The Object Notes feature lets administrators provide users with conceptual information about an object and steps to perform a task. The Object Notes feature is similar to Process Notes.

Highlights:

- Administrators can add different notes for individual field groups.
- Administrators must enable Object Notes before adding the notes.
- After administrators add information in Object Notes, it appears in every record within that particular object.
- The data of notes is available in rich text format. Administrators can copy and paste notes from other applications such as Microsoft® Word.
- Object Notes are not available for Process and Project objects.

The data of Object Notes is specific to a field group. Adding notes to one field group does not copy it to another field.

## Adding Object Notes

Administrators can add notes from the Administration tool.

### To add Object Notes:


1. In the Administration tool, edit an object.
2. To add notes to the SOLIDWORKS PDM objects, go to the Fields wizard page and click **Object Notes**.
3. To add notes to the Document and Records objects:
  - a) On the Options tab, select **Enable Object Notes**.
  - b) Click **Save** to enable the object notes.
4. In the Field Group dialog box, click the Object Notes tab.
5. Add notes and click **Save**.

## Viewing Object Notes

After Administrators add Object Notes, users can view them from a Field Group.

### To view Object Notes:

1. Open a record for which the Administrator has enabled Object Notes and loaded data into the Field Group.

2. Click  at the upper-right corner of the Property Card window to view the notes.

## PDM Options Tab

The PDM Options tab provides options that affect files in a SOLIDWORKS PDM vault.

### To view the PDM Options tab:

1. In the Process Configuration wizard, on the Workflow Properties page, select the Output node.
2. Click the PDM Options tab.

The tab includes the following options:

Option	Description
<b>Do not increment version of PDM files</b>	<p>Prevents the creation of a new version each time an output updates SOLIDWORKS PDM variables or changes the status in SOLIDWORKS Manage. It is similar to the SOLIDWORKS PDM transition option to <b>Overwrite Latest Version</b>.</p> <ul style="list-style-type: none"> <li>• This setting applies to the SOLIDWORKS Manage output only.</li> <li>• Use <b>Overwrite Latest Version</b> to prevent SOLIDWORKS PDM from creating a new version if: <ul style="list-style-type: none"> <li>• SOLIDWORKS Manage changes the state of the SOLIDWORKS PDM workflow.</li> <li>• The SOLIDWORKS PDM transition updates a variable.</li> </ul> </li> <li>• If you include a large number of affected items in the process, it takes a longer time to complete.</li> </ul>
<b>Permissions: Use permissions from the logged in user</b>	Uses permissions granted to the logged-in user.

Option	Description
<b>Permissions: Use permissions from the following user</b>	<p>Allows a user logged in to the PDM vault to use permissions granted to the user whose credentials are available in the <b>User Name</b> and <b>Password</b> fields.</p> <div> <p>If you use permissions granted to another user:</p> <ul style="list-style-type: none"> <li>• You have these permissions only until you change the state.</li> <li>• You do not require transition permission in the SOLIDWORKS PDM workflow.</li> <li>• Your name appears in the history and in the data card variables.</li> </ul> </div>

## Plenary Web Client

The SOLIDWORKS Installation Manager includes the Plenary Web Client.

The enhancements made in the Plenary Web Client facilitate integration with a connected SOLIDWORKS PDM vault.

You can check in, check out, and send SOLIDWORKS PDM data to processes that have PDM outputs.

UI Elements	Description
<b>Search all</b> pane	Provides preview and advanced search tools and is available in the right pane.
<b>Projects</b> module	Lets you interact with project records.

## Process Task Assignment Controls

When you create processes with predefined tasks, you can control the ownership and assignment of the tasks.

You can configure the ownership and assignments in the process object to make reassigning easier.

## Project Gantt Charts

The performance of Gantt chart tools and functionality provides improved visual feedback and connection to Microsoft® Project.


Users can view PERT chart, Network diagrams, and Load and Schedule charts.

The functionality is also available in the Plenary Web Client.


## Send to Process

The **Send to Process** functionality lets you select a process for the selected record.

You can perform the following functions with **Send to Process**:

- Click  to view the Send to Process dialog box.
- Click ▼ to view a list of available processes and select a process.

## View Hidden Controls in the Workflow Designer

The  icon on the Process Wizard page of the **Workflow Designer** displays hidden controls.

If administrators hide controls on the workflow in the Advanced tab by mistake, they can click the icon to view the controls.

# 15

## SOLIDWORKS MBD

---

This chapter includes the following topics:


- **3D PMI Compare**
- **Annotations Folder**
- **DimXpert**


SOLIDWORKS® MBD is a separately purchased product that you can use with SOLIDWORKS Standard, SOLIDWORKS Professional, and SOLIDWORKS Premium.

### 3D PMI Compare

The **3D PMI Compare** tool performs a more thorough analysis of reference dimensions to identify more similarity scenarios based on geometry. It also checks annotation notes, reference dimensions, and geometric tolerances.

### Annotations Folder ★

In assemblies and parts, annotations appear in subfolders under the **Annotations**  folder in the FeatureManager® design tree.

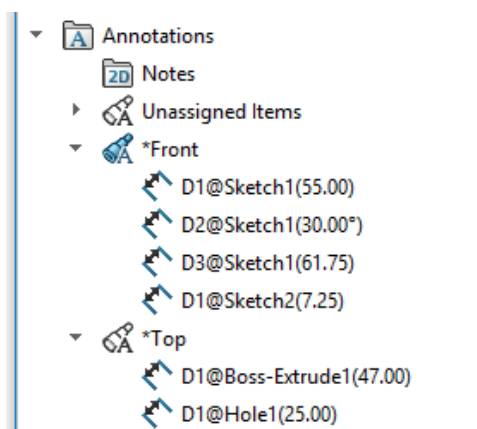


From the folder, you can sort the annotations and highlight them in the graphics area.



When you select an annotation in the FeatureManager design tree, it is highlighted in the graphics area.


# Sorting by Annotation View

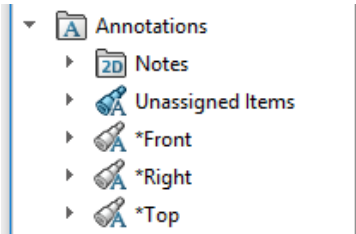By default, annotations appear in subfolders that correspond to the view they belong to, such as **Unassigned**, **Front**, **Right**, and **Top**.



# Sorting by Annotation Type

You can sort annotations by type, such as **Smart Dimensions**, **Weld Symbols**, and **Balloons**. Right-click **Annotations**  or a view subfolder and select **Sort by Annotation Type**. If you sort the **Annotations**  folder, all annotations are sorted into annotation type subfolders.

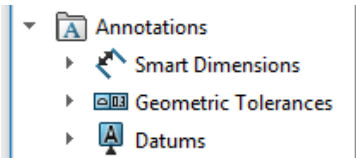

If you sort a view subfolder, only the annotations within that subfolder are sorted. To return to the original order, right-click the same folder and clear **Sort by Annotation Type**.

# DimXpert

## Annotation Name Format

Names of DimXpert annotations follow a new format.  
The new format adds @*feature\_name*(*value*) to the previous format.

### Examples

New Format	Previous Format
DistanceBetween3@Plane6(7.5)	DistanceBetween3
Radius3@Fillet Pattern1(5)	Radius3
CounterBore1@Hole Pattern1(8)	CounterBore1

## Pipe Threads and Compound Holes

You can create DimXpert hole callouts for pipe threads and many types of compound holes.

The DimXpert hole callout file has new elements to support new hole types. See

`system_dir:\Program Files\SOLIDWORKS  
Corp\SOLIDWORKS\lang\language\txcalloutformat.txt.`

# 16

## Model Display

---

This chapter includes the following topics:

- **Body Compare**
- **Comparing Bodies**
- **Body Compare PropertyManager**

### Body Compare



You can use **Body Compare** to compare two groups of bodies that are colocated in the same part or assembly. For example, you can compare a CAD model against a scan file, mesh file, or another CAD model.

For models that you reverse engineer, use **Body Compare** to compare these models to the original scan to find differences. For manufactured parts, you can scan the part and compare the scan to the source CAD model.



The deviations display on the source body to indicate where the two bodies do not match. When creating a body, select **Unmatched color** in the Body Compare PropertyManager to show where the source and the compare bodies do not match.


### Comparing Bodies


#### To compare bodies:

1. Open `system_dir:\Users\Public\Public Documents\SOLIDWORKS\SOLIDWORKS 2020\samples\whatsnew\model_display\Gear.SLDPRT`.
2. In the FeatureManager design tree, expand the **Solid Bodies**  folder.  
If you do not see the folder, take the following steps:
  - a) Click **Tools > Options > System Options > FeatureManager**.
  - b) Under **Hide/show tree items**, select **Show** for **Solid Bodies**  and click **OK**.




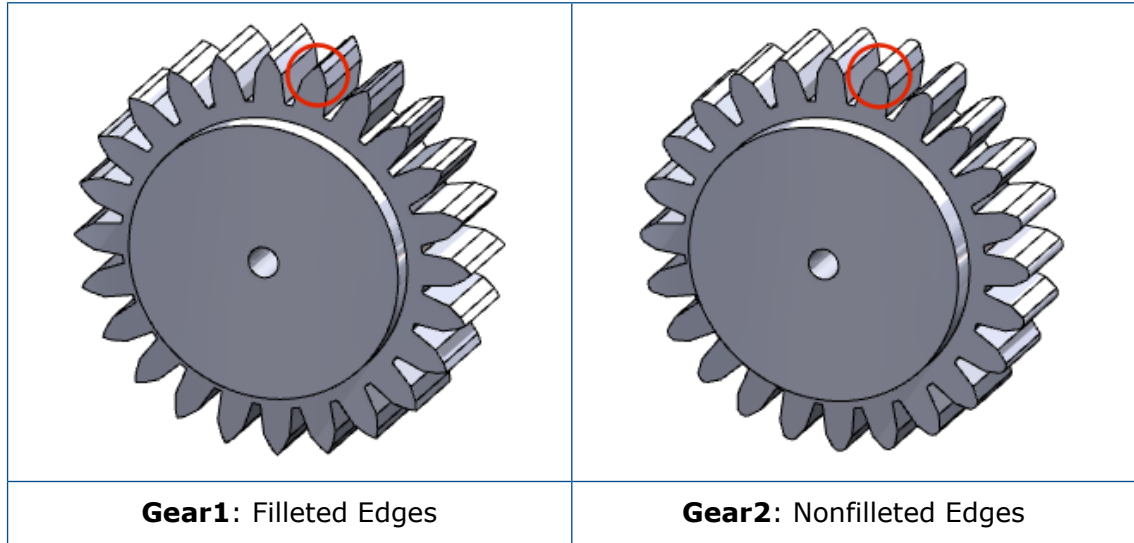

3. Compare the edges of the gear teeth for **Gear1** and **Gear2**.
  - a) After viewing the filleted edges of **Gear1**, right-click **Gear1** and click **Hide** .
  - b) Right-click **Gear2** and click **Show**  to view the nonfilleted edges.



4. Click **View > Display > Body Compare** .
5. In the PropertyManager, set the following options:
  - a) For **Source Bodies**, select **Gear1**
  - b) For **Compare Bodies**, select **Gear2**
  - c) Move the **Legend Threshold** slider so the top and bottom numbers in the legend are approximately 1.00mm.

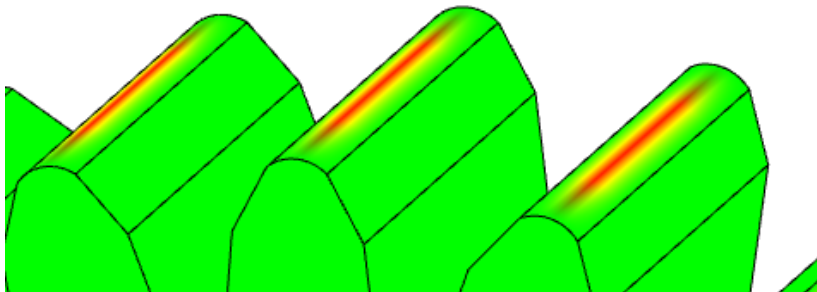In the graphics area, the red and yellow colors indicate where **Gear1** and **Gear2** do not match.



6. Click .
7. To clear the **Compare Body Legend**, in the graphics area, right-click the legend and click **Body Compare** .

To open the Body Compare PropertyManager, right-click the legend and click **Body Compare Properties**.

# Body Compare PropertyManager







## To open the Body Compare PropertyManager:

Click **View > Display > Body Compare** . You can also select **Body Compare** from the Evaluate and Mesh Modeling tabs in the CommandManager.


**Body Compare** is not available if the part is a single body or if the assembly contains only one body component.

Specify options to compare bodies:

## Bodies to Compare

	<b>Dynamic Help</b>	Displays detailed help when you hover over the controls.
	<b>Source Bodies</b>	Specifies the source bodies from a scan, a mesh file, or a CAD model. Bodies can be any type: classic BREP bodies, mesh BREP bodies, or graphics bodies. Classic BREP and mesh BREP can be solid or surface bodies. Specify the display of the source bodies:
		<b>Current View</b>
		<b>Hidden Display</b>
		<b>Transparent Display</b>
		<b>Wireframe Display</b>
	<b>Compare Bodies</b>	Specifies the CAD model bodies to compare. Bodies can be any type: classic BREP bodies, mesh BREP bodies, or graphics bodies. Classic BREP and mesh BREP can be solid or surface bodies.

## Color Settings

	<b>Legend Threshold</b>	Specifies the absolute value of deviation allowed by the scale. Move the slider to change the distances.
	<b>Show Legend on Screen</b>	Displays the legend after closing the Body Compare PropertyManager.

**Accuracy**

Improves the accuracy of the body compare.

Higher accuracy might impact performance.

This slider is disabled when the compare bodies are graphics mesh bodies.


**Unmatched color**

Identifies areas on the compare bodies that do not match the source bodies.

For example, you compare bodies where the compare body is not a complete reproduction of the source body. The unmatched color appears in areas where there is no corresponding geometry on the source bodies. Either the geometry is missing or is too far away.

Click **Edit Color** to select a color.

---

After you create a body compare analysis, the analysis remains on display in the graphics area. To close the analysis, right-click in the graphics area and click **Body Compare** . To modify the analysis options, right-click in the graphics area and click **Body Compare Properties**.

# 17

## Parts and Features

---

This chapter includes the following topics:

- **Graphics Mesh and Mesh BREP Bodies**
- **Holes**
- **Repairing Missing References for Fillets and Chamfers**
- **Surfaces**

### Graphics Mesh and Mesh BREP Bodies

#### Adding Coordinate Axes, Reference Axes, and Reference Planes


You can add coordinate axes, reference axes, and reference planes to a graphics mesh body or a mesh BREP body by selecting facets, fins, or vertices. You use facets as planar references, facet fins as linear edge references, and facet vertices as point references.



Coordinate axes, reference axes, and reference planes are useful when you create a model based on a graphics mesh body or a mesh BREP body and you want to add geometry. This functionality is available for parts and assemblies.


Before adding coordinate axes, reference axes, and reference planes, turn on the Selection Filter toolbar to select facets, facet fins (edges), and facet vertices in the graphics area. For **Cylindrical/Conical Faces** in the Reference Axis PropertyManager, use **Paint Select Facet** or **Tangent Select Facet** to select groups of facets.

**To add a reference plane between two facets:**

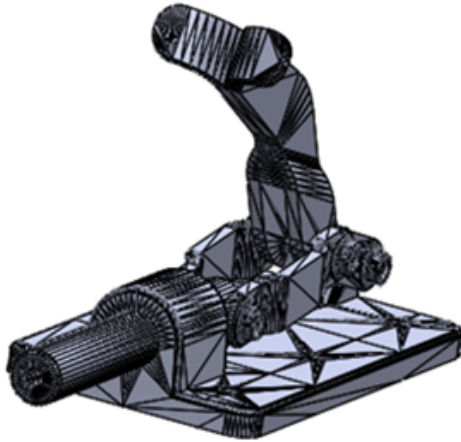
1. With a graphics body open, click **Plane**  (Reference Geometry toolbar) or **Insert > Reference Geometry > Plane**.



2. Click **Toggle Selection Filter Toolbar**  (Standard toolbar) or press **F5**.
3. Click **Filter Mesh Facets**  to select only triangular facets.
4. In the graphics area:
  - a) Select a facet for the **First Reference** as shown.

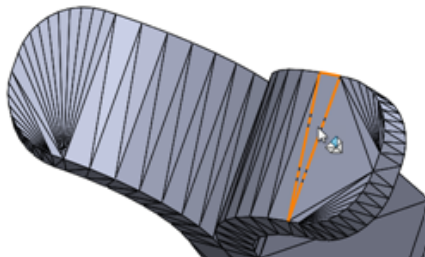


- b) Select another facet for the **Second Reference** as shown.

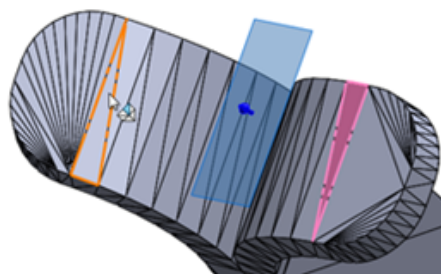




The **Mid Plane** option is automatically selected for the first and second references in the PropertyManager.

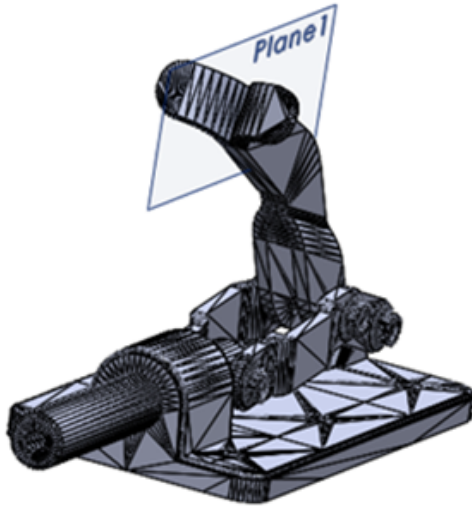5. Click .



## Decimating a Graphics Mesh Body ★

The **Decimate Mesh**  tool reduces the facet count in graphics mesh bodies. A lower facet count makes it easier to modify a graphics mesh body.

You can reduce the facet count for an entire body or a group of facets in the body. To select a group of facets, you can use the **Paint Select Facets**  tool or the **Tangent Select Facets**  tool.

This tool does not support mesh BREP bodies.

### To decimate a graphics mesh body:


1. Before you open a graphics mesh file, specify these system options in **Tools > Options > Import**:
  - a) For **File Format**, select **STL/OBJ/OFF/PLY/PLY2** and click **Import as Graphics Body**.
  - b) For **Unit**, select **Millimeters**.
  - c) Click **OK**.

2. Open `system_dir:\Users\Public\Public Documents\SOLIDWORKS\SOLIDWORKS 2020\samples\whatsnew\parts\piggy_bank.STL`.



3. Click **Insert** > **Mesh** > **Decimate Mesh**.
4. Hover over the body.

A tooltip displays the total number of facets and vertices in the body.

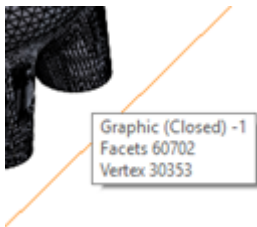

5. In the graphics area, select the graphics mesh body.  
The PropertyManager lists the graphics mesh body in **Selections** and displays the total facet count in the body.


## 6. In the PropertyManager:

- a) Under **Facet Reduction**, for **Percentage Reduced By** ↓%, enter 80.

When you enter a percentage value, the tool automatically calculates the number of facets that the graphics mesh body is reduced to in **Reduced Facet Count** ↓#. This number is 12140.

- b) Click **Calculate**.

A progress dialog reports decimation status. When the process is complete, a preview of the decimated body generates. The body does not decimate much.

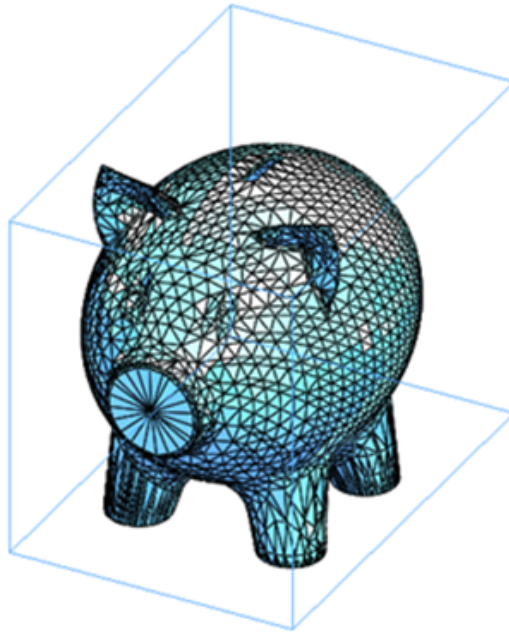

- a) Click **Reset** to remove the preview and restore the body to its previous state.


- b) For **Maximum Error Tolerance**  $\epsilon$ , enter 25mm.

This option sets the maximum deviation tolerance between the original and resulting mesh. Increasing this value allows for more notable decimation.


- c) Click **Calculate**.

- d) Click ✓.



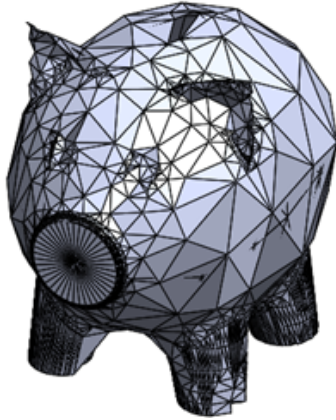

The facets in the graphics mesh body are substantially less dense than the original body.

7. Click **Undo**  on the Standard toolbar to restore the graphics mesh body to its previous state.


Keep the model open to continue with the next task where you use **Paint Select Facets** to decimate a group of facets.


## Using Paint Select Facets to Decimate a Facet Group

You can use the **Paint Select Facets** tool to select a wide or narrow area of facets in the body.


### To use Paint Select Facets to decimate a facet group:

1. Using the same graphics mesh body, `piggy_bank.STL`, zoom to the left ear of the model.

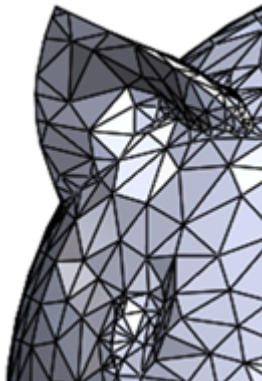

2. Click **Insert > Mesh > Decimate Mesh**.
3. In the Decimate Mesh Body PropertyManager, under **Selections**, click **Paint Select Facets** .
4. In the Paint Select Facets dialog box, adjust the radius of the selection circle to `.60`.  
You can adjust the radius by clicking the **Up** and **Down** arrows.


5. Drag the pointer to select all facets in that ear.

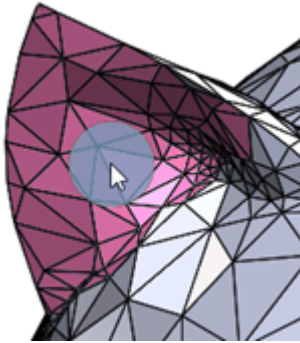

6. Click  to close the Paint Select Facets dialog box.

The Decimate Mesh Body PropertyManager displays a total facet count for **Facet Group <1>**.

7. Reduce this facet count by half in the PropertyManager:

- a) For **Percentage Reduced By** , enter 50.
- b) For **Maximum Distance Deviation**  $\epsilon$ , enter 25mm.

This option sets the maximum deviation tolerance between the original and resulting mesh. Increasing this value allows for more notable decimation.

- c) Click **Calculate**.


A progress dialog reports decimation status. When the process is complete, a preview of the decimated body generates.

- d) Click .



Keep the model open to continue with the next task where you use **Tangent Select Facets** to decimate a group of facets that are tangent to a seed facet.

## Using Tangent Select Facets to Decimate a Facet Group


You can use the **Tangent Select Facets** tool  to select facets that are tangent from a seed facet.

### To use Tangent Select Facets to decimate a facet group:

1. Using the same graphics mesh body, `piggy_bank.STL`, zoom to the right ear of the model.



2. Click **Insert > Mesh > Decimate Mesh**.
3. In the graphics area:
  - a) Right-click and click **Tangent Select Facets**.
  - b) Select one or more facets in an area where you want to reduce the facets in the ear. These facets are the seed facets.

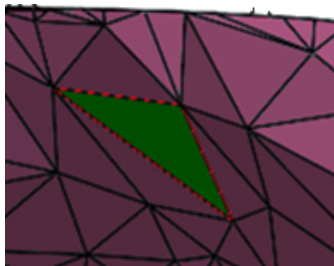


## 4. In the Tangent Select Facets dialog box:

- a) Leave **Angle Tolerance** at its default value.

A facet is included in a facet group only if the angle between its normal and the normal of a seed facet is less than or equal to the angle tolerance. You can adjust the **Angle Tolerance** by moving the slider or clicking the **Up** and **Down** arrows.

- b) Click **Adjacency Limit** and enter 10.

Only facets within the specified number from a seed facet are included in the facet group. For example, in this case, the tool only selects facets within 10 facets of the seed facet. You can click the **Up** or **Down** arrow to adjust how far to propagate adjacent facets to the seed facet.

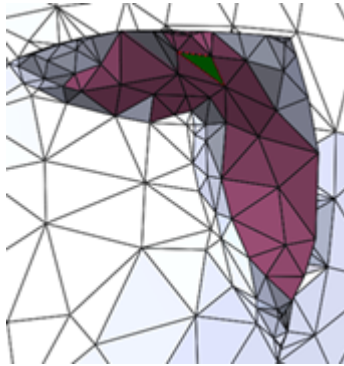

- c) Click  to close the Tangent Select Facets dialog box.

The Decimation PropertyManager displays a total facet count for **Facet Group <1>**.

## 5. Reduce this facet count by half in the PropertyManager:

- a) For **Percentage Reduced By** , enter 50.


- b) Set **Maximum Distance Deviation**  $\epsilon$  to 25mm.

This option sets the maximum deviation tolerance between the original and resulting mesh. Increasing this value allows for more notable decimation.

- c) Click **Calculate**.

A progress dialog reports decimation status. When the process is complete, a preview of the decimated body generates.


- d) Click .

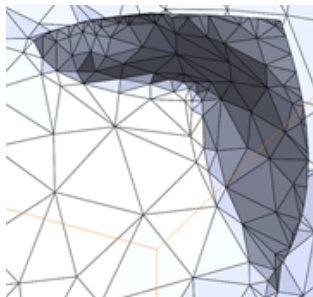

## Expanded Support for Mesh BREP Bodies in Features ★

More features support mesh BREP bodies:

- **Shell**
- **Fillet**
- **Draft**
- **Chamfer**
- **Delete Face**
- **Fill Face**
- **Mutual Trim**
- **Surface Knit**
- **Delete Hole**

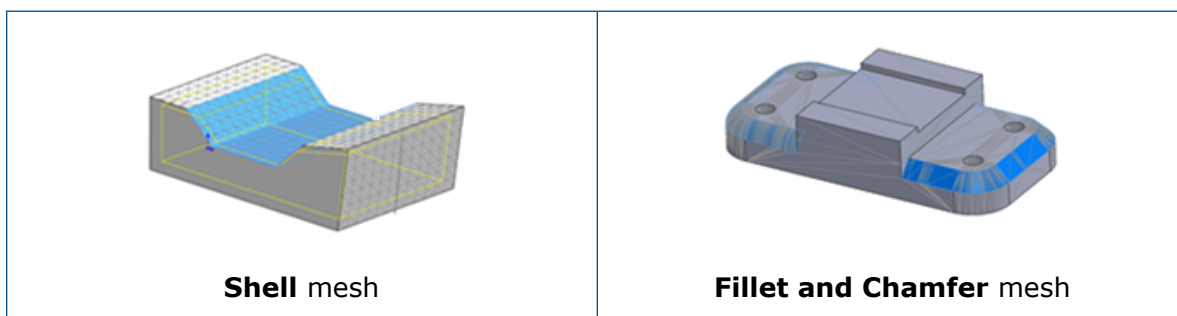

The **Insert** menu includes a submenu for **Mesh** specific tools:

- **Convert to Mesh Body**
- **Segment Imported Mesh Body**
- **Surface from Mesh**
- **3D Texture**
- **Decimate Mesh**

## Holes


### Defining Hole Depth to Tip or Shoulder

You can define the end condition of a hole to the depth of the tip or to the depth of the shoulder. The options are available for all **Hole Wizard** features (including the **Hole Wizard Assembly** feature) and **Advanced Hole** types with the following end conditions:

- **Blind**
- **Up to Vertex**
- **Up to Surface**
- **Offset to Surface**

For legacy holes, the options are only available for holes with drill types such as simple, tapered, counterbore, countersunk, and counter drilled holes.

After creating the hole feature, you can switch between the two options. Hole callouts in drawings display dimensions based on the depth of the end condition.

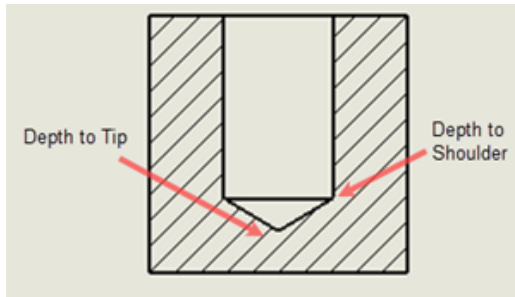

Previously, the end condition of a hole was calculated only up to the full diameter of the shoulder.

## Hole Wizard

Continuing improvements are available in the **Hole Wizard**.

For example:

- Thread depths are recalculated. Threads cannot be deeper than the hole, regardless of whether **Automatically calculate blind hole depth** is selected or cleared.
- **Show custom sizing** does not switch between selected and cleared in unexpected ways.
- Changes to **Head Clearance** are correctly reflected in the PropertyManager and Toolbox.

Additional improvements have been made in areas such as updating the tolerance of the fit between holes and shafts, and handling the **Near side countersink** option.

## Repairing Missing References for Fillets and Chamfers ★


You can repair fillet and chamfer features that are missing edges.


When you edit fillet or chamfer features that have errors, all missing references display at the top of the **Items to Fillet** or **Items to Chamfer** box in the PropertyManager. You can right-click missing references to zoom to their location, repair individual or all missing references, or clear the list of missing references.

To repair, the software attempts to reattach missing references when the missing reference location in the model contains a valid physical edge, face, or loop. If it only repairs a subset of the missing references, the number of repaired edges display.


### To repair missing references:

1. Open `system_dir:\Users\Public\Public Documents\SOLIDWORKS\SOLIDWORKS 2020\samples\whatsnew\parts\repair_references.SLDPRT`.

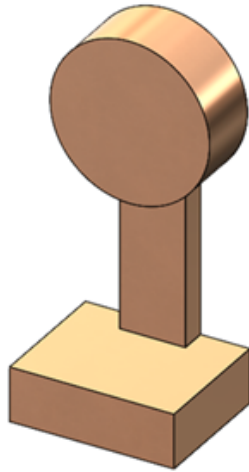


2. When prompted to rebuild, click **Don't Rebuild**.
3. Close the What's Wrong dialog box.
4. In the FeatureManager design tree, right-click **Fillet 1** and click **Edit Feature** .
5. In the PropertyManager, right-click in **Items to Fillet** and click **Repair All Missing References**.


All missing references are repaired except for **\*\*Missing\*\*Edge<8>**.

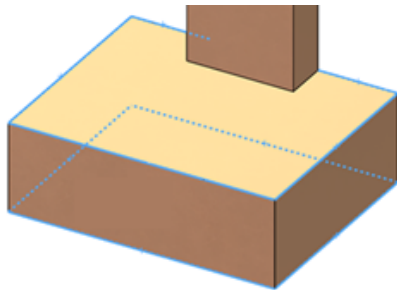


At the base of the model, the missing reference ghost is highlighted.

6. Under **Items to Fillet**, right-click **\*\*MissingEdge\*\*<8>** and click **Clear All Missing References**.
7. Click .

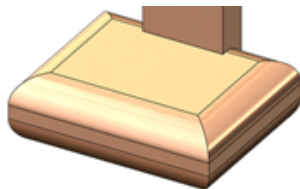


8. Right-click **Fillet 2** and click **Edit Feature** .

9. Under **Items to Fillet**, right-click **\*\*MissingEdge\*\*<1>** and click **Zoom to Selection**.

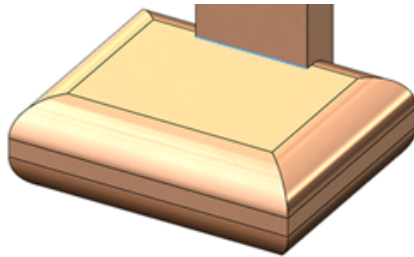

10. Right-click in **Items to Fillet** and click **Repair All Missing References**.


11. Click .

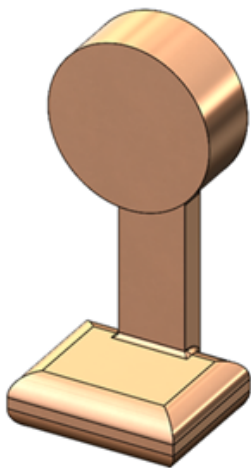

The tool repairs all fillet references at the base of the model.

## Surfaces

### Creating an Offset Surface Without Failed Faces

The **Offset Surface**  tool identifies faces on a surface it cannot offset, and lets you create an offset surface without them.

When the tool starts to create an offset surface and encounters failure, it lists faces it cannot include in the offset surface. Those faces might fail because of one or more of the following:

- Their offset surface includes an area with a radius of curvature that is less than the offset distance.
- They self-intersect.
- They conflict or interfere with nearby faces.
- The offset surfaces are not connected, for example, because the offset has broken references or is based on faces from multiple parts.




If you click **Remove All Failing Faces** in the PropertyManager, the tool creates an offset surface with gaps caused by removing the failed faces. You can repair the gaps by manually adjusting the offsets of the failed faces and adding them back individually into the offset surface. An alternative if the tool fails is to reduce the offset distance, and run the tool again.


Previously, the **Offset Surface** tool failed when it could not create an offset for one or more faces of a surface. The tool did not identify which faces caused the failure, which made the offset surface difficult to complete.

**To create an offset surface without failed faces:**

1. Open `system_dir:\Users\Public\Public Documents\SOLIDWORKS\SOLIDWORKS 2020\samples\whatsnew\parts\tree_gate.SLDPRT`.



2. Click **Offset Surface**  (Surface toolbar) or **Insert > Surface > Offset**.
3. Select the model by clicking **Edit > Select All**.
4. In the PropertyManager, for **Offset Distance**, enter 10mm.

**Flip Offset Direction**  toggles the offset direction of the surface between outward to inward. This example uses the outward direction, which increases the thickness of the model and is the default direction.


5. Click .

A message displays that it is unable to offset the selected surfaces. When the tool completes the analysis, the PropertyManager lists and highlights the failing faces in **Offset Parameters**.

6. Click **Remove All Failing Faces**.


The PropertyManager removes the failing faces from **Offset Parameters** and the model updates in the graphics area.

7. Click .

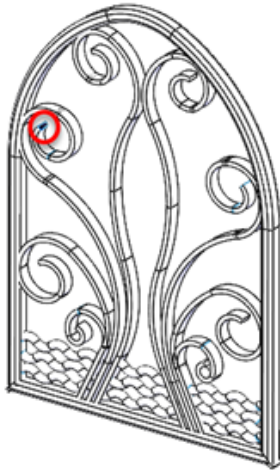

The tool creates a **Surface-Offset** feature with missing faces, as noted in red.

8. In the graphics area, zoom to the missing faces.

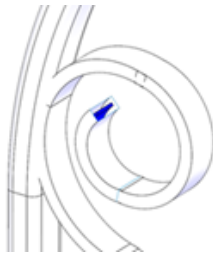

You can use other surfacing techniques to repair these gaps and then use the feature to create additional surfaces.

## Specifying the Thicken Direction


You can thicken a surface by specifying a direction other than normal to a face. This option is available for **Thicken** and **Thicken-Cut** features.


In the Thicken PropertyManager and Thicken Cut PropertyManager, you can specify the following entities as a **Direction** from the graphics area:


- Linear sketch entities
- Sketch points
- Reference planes
- Reference axis
- Linear edges
- Pair of vertices
- Cylindrical faces
- Conical faces
- Points in reference geometry
- Planar faces

**To specify the thicken direction:**

1. Open `system_dir:\Users\Public\Public Documents\SOLIDWORKS\SOLIDWORKS 2020\samples\whatsnew\parts\thicken_surface.SLDPRT`.

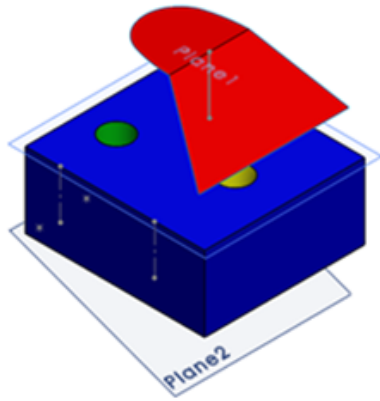


2. Click **Thicken**  (Features toolbar), or **Insert** > **Boss/Base** > **Thicken**.
3. In the PropertyManager:
  - a) For **Surface to Thicken**, select **Surface-Trim 2** in the flyout FeatureManager tree.
  - b) For **Thickness**, type 50mm.
  - c) Click in **Direction of Thicken**.

4. In the graphics area, select an entity to use as a direction and click .
- Examples of direction of thicken:


---

The thicken surface is parallel to the linear sketch entity.

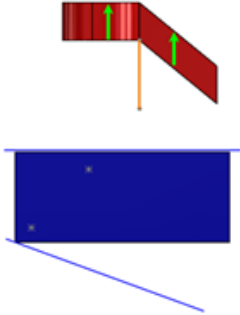


---

The thicken surface is parallel to a line drawn between the two sketch points.

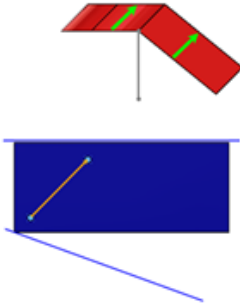


---


The thicken surface is normal to the reference plane.

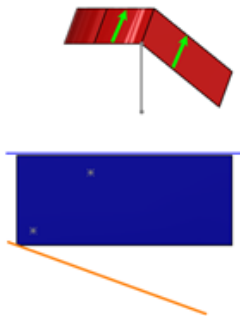

The thicken surface is normal to the reference axis.

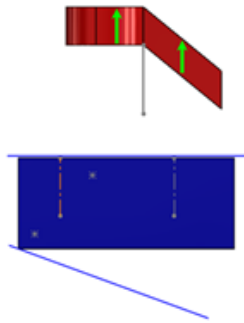

The thicken surface thickens on both sides of the selected entity.

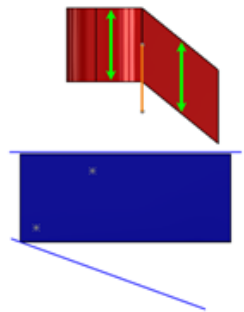

# 18

## SOLIDWORKS PCB

---

This chapter includes the following topics:

- **Duplicate Designators**
- **Integration with SOLIDWORKS PDM**
- **Rigid-Flex Support in SOLIDWORKS PCB**

SOLIDWORKS PCB is a separately purchased product.

### Duplicate Designators

ECAD-MCAD collaboration supports the use of duplicate pad designators in the footprint library and free pads in the PCB Editor in SOLIDWORKS PCB and Altium Designer.

### Integration with SOLIDWORKS PDM

The SOLIDWORKS PDM-based design and data management workflow for electronic design uses SOLIDWORKS PDM Professional.

You can:

- Create SOLIDWORKS PCB projects and design files using SOLIDWORKS PDM.
- Design file check-in, check-out, and automated versioning of all electronic files through the SOLIDWORKS PDM File Explorer.
- Create data cards and Where Used items for design files.
- Centralize the storage of electronic design data under the control of the SOLIDWORKS PDM vault.
- Notify the workflow processes at specific milestones.
- Use a formal release process with electronic approvals and sign offs.

#### SOLIDWORKS PCB-PDM Connector

The SOLIDWORKS PCB-PDM Connector integrates SOLIDWORKS PCB and SOLIDWORKS PDM to extend SOLIDWORKS PDM-based design methodology.

The integration lets you:

- Synchronize SOLIDWORKS PCB/PDM variables and parameters.
- Create a SOLIDWORKS PDM-based Bill of Materials.
- Integrate projects and documentation check-in, check-out, and archive.

- Generate virtual data cards and Where Used items for electronics parts.

## Rigid-Flex Support in SOLIDWORKS PCB

The **Rigid-Flex** support enables you to design rigid and flex portions of the board. The ECAD-MCAD collaboration enables you to modify the flex entities and create new bends in mechanical designs to suit the enclosure.

You can:

- Define advance layer stack-ups using **Layer Stack Manager**.
- Use board planning mode.
- Insert **Split Lines**.
- Insert **Bending Lines**.
- Create **Layer Stack Legend** tables.
- Remove routing obstacles.
- Enable 3D folded view.
- Enable 3D folded clearance.
- Support ECAD-MCAD Collaboration.

# 19

## SOLIDWORKS PDM

---

This chapter includes the following topics:

- **Defining Child Reference State Conditions**
- **Logging Out from Windows Explorer**
- **Performance Improvements in Browsing**
- **Performance Improvements in the SOLIDWORKS PDM Add-in**
- **Performance Improvements**
- **Reordering Columns in Search Results**
- **Resizable Dialog Boxes**
- **Scaling the Paper Size in Print Task**
- **Search User Interface**
- **Searching in Multiple Variables**
- **Using AND, OR, and NOT Operators in Search**
- **Warning Users When Transitioning Files**
- **Web2 Enhancements**

SOLIDWORKS® PDM is offered in two versions. SOLIDWORKS PDM Standard is included with SOLIDWORKS Professional and SOLIDWORKS Premium, and is available as a separately purchased license for non-SOLIDWORKS users. It offers standard data management capabilities for a small number of users.

SOLIDWORKS PDM Professional is a full-featured data management solution for a small and large number of users, and is available as a separately purchased product.

## Defining Child Reference State Conditions

You can define conditions on the state of immediate child references to control the parent file transition.

When you define conditions, you can transition the parent file if:

- Its child references are not selected for transitioning with the parent file and are already in a state that meets the defined condition.
- Its child references are selected for transitioning with the parent file and, after transition, are in a state that meets the defined condition.
- The warning, **Child references do not meet the state conditions**, is not set to blocking.



By default, when this warning is not set to blocking, only those parent files that fulfill the child reference state condition are selected for transition.

To change the state of the parent file, in the Do Transition dialog box, select **Change state**.

The warning is set to blocking by default for new and upgraded users.

This helps avoid situations such as approving an assembly when the referenced parts are not approved or when the assembly uses obsolete parts.

#### To define child reference state conditions:

1. In the Administration tool, click a workflow transition.
2. In the transition's Properties dialog box, in the Conditions tab:
  - a) Select **<Click here to add a condition>**.
  - b) In the conditions list, select **Child Reference State**.
  - c) Expand **Comparison** and select a comparison operator.
  - d) Under **Value**, select the state if you selected the **Text Equal To** or **Text Not Equal To** comparison operator.

For the **Text Compare** operator, enter the value in the *workflow name.state name* format. You can also use wildcard characters to specify the pattern.

- e) Under **Configuration / Path**, enter the wildcard characters to specify the file name or file path pattern.  
Leave **Configuration / Path** blank to apply the condition to all immediate child reference files.

3. Click **OK** and save the workflow.

## Logging Out from Windows Explorer

You can see the name of the logged in user in the File Explorer and log out from Windows® Explorer.

To see the name of the logged in user, hover over .

#### To log out from Windows Explorer:

1. Click .
2. Click **Log Out**.

## Performance Improvements in Browsing

SOLIDWORKS PDM loads the data in the background, which improves the browsing responsiveness.

Browsing folders that have a large number of files is faster due to:

- Faster database queries for custom columns.

- Background loading and incremental loading of the data.

When you double-click a folder, SOLIDWORKS PDM loads data in this order:

1. All subfolders synchronously. You can browse subfolders while the remaining data loads in the folder.
2. Files with standard columns in the file list.
3. Information in custom columns. You can add more custom columns and maintain the same browsing speed.

When you select a file and switch between the Bill of Materials, Contains, and Where Used tabs, SOLIDWORKS PDM loads the data in the tabs in the background. When you switch to a different file or folder, the background loading stops and loading of the new file or folder starts.

Performance improves significantly for folders with a large number of files or for database servers with high latency.

## Performance Improvements in the SOLIDWORKS PDM Add-in

The SOLIDWORKS PDM task pane tree refreshes faster and the commands in the SOLIDWORKS PDM toolbar are correctly enabled in the task pane instantaneously when you select a file.

- Data in the task pane tree loads in the background.
- When you select a file in the task pane tree, calls to the database are eliminated.

In the FeatureManager design tree or in the graphics area, when you right-click a file and select **SOLIDWORKS PDM**, the menus are correctly enabled.

When you select a file in the graphics area or in the FeatureManager design tree, the file listed in task pane tree is selected and the commands in the SOLIDWORKS PDM toolbar are correctly enabled.

## Performance Improvements

You can perform the following actions faster:

- Logging into the vault when you set a large number of files or folders for automatic caching.
- Viewing the System History of a vault that includes a large number of items.
- Opening a file from a folder that includes a large number of files.
- Creating a new file or subfolder in a folder that contains large number of files.

## Reordering Columns in Search Results

You can reorder the columns in the search results of the embedded search and the Search tool. SOLIDWORKS PDM saves the changes to the column ordering.

## Resizable Dialog Boxes

The following dialog boxes are now resizable:

- Edit Variable
- Serial Number - New Serial Number
- Indexing Settings
- Cold Storage Schema
- Dialog boxes in **Data Import/Export** node such as XML Variable Alias Sets, Export Rule, and Import Rule
- File Type Properties
- Customizable Columns
- Dialog boxes in **Bill of Materials** node such as BOM, Item BOM, Weldment BOM, and Weldment Cut List
- Edit Template
- Dialog boxes in **Dispatch** such as Administrative Actions and Properties

## Scaling the Paper Size in Print Task

When configuring the **Print** task, you can select **Scale to fit** or **Scale**. When you select **Scale**, you can select **Allow the user to change the scale** to let users change the scale at run time.

## Search User Interface ★

You can perform a search with the quick search box in the File Explorer without setting up a search card.

The quick search box is available in the File Explorer as a part of the SOLIDWORKS PDM menu bar.

With the quick search box, you can:

- Define your search string using sample text.
- Select a string from a list of the previous five searches when you click in the quick search box.
- Use AND, OR, and NOT operators in the search string.
- Click in the quick search box, type, and select any string from the list of previously matching searches.
- Use the following keys:

<b>Ctrl + F</b>	Selects the search field
Arrow keys + <b>Enter</b>	Selects the search string
<b>Enter</b>	Starts the search
<b>Esc</b>	Closes the search

# Customizable Variables - New Variable List Dialog Box

You can use this dialog box to specify the variables that you can search from the quick search for specific users or groups.

**To display Customizable Variables dialog box:**

- 1. In the Administration tool, expand **Lists**.
- 2. Right-click **Quick Search Variable List** and click **New List**.

## Name

Enter the name of the new variable list.

## Variables

<b>Add</b>	Adds the administrator-defined variables. <div>You can add up to five variables.</div>
<b>Delete</b>	Deletes the selected variable.
Up and down arrows	Moves the listed variables up and down.

## Selected Variable

<b>Variable</b>	Displays a selected variable and lets you select a variable to replace the selected variable.
<b>Name</b>	Displays the name of the selected variable.

## Users

Lists users and lets you select the users who can select the variables in quick search.

## Groups

Lists groups and lets you select the groups whose members can select the variables in quick search.

## Using Quick Search

You can search faster using the quick search. The quick search box is available in the SOLIDWORKS PDM menu bar.

### To use quick search:

1. In the File Explorer, navigate to the vault or folder to search.
2. Press **Ctrl + F** to access the quick search box.
3. Click the list arrow in the quick search box to specify the search settings.

Search in All Folders		Q	▼
<b>Search For</b>			
<input checked="" type="checkbox"/>	File/Folder Name		
	Keywords		
	Description		
	FileName		
<input checked="" type="checkbox"/>	Comment		
<b>Search In</b>			
	Current Folder		
	Current Folder & Subfolders		
<input checked="" type="radio"/>	All Folders		
<b>Search Variables In</b>			
	Latest Version		
	All Versions		

4. From **Search for**, **Search in**, and **Search variables in**, select the appropriate search categories.

You can select multiple options to search for.

<b>Search for</b>	<b>File/Folder name</b>	Searches for the names of files or folders that match the search string.
	Administrator-defined variables	A list of administrator-defined variables. Searches for the value of selected variables in the data card fields.
<b>Search in</b>	<b>Current Folder</b>	Searches for the string in the current folder.
	<b>Current Folder &amp; Subfolders</b>	Searches for the string in the current folder and its subfolders.
	<b>All Folders</b>	Searches for the string in all folders.
<b>Search variables in</b>	<b>Latest version</b>	Limits the search to the latest version.
	<b>All versions</b>	Searches for the string in all versions.

The **Latest version** and **All versions** options are available based on the following settings in the Administration tool:

- Whether variables are selected in the Quick Search Variable Lists or not.
- Selection of **Always work with latest version of files**.

5. In the quick search box, enter the search strings and press **Enter**.  
The search results appear in the same window.
6. Click **Close Search** to clear the search results and to return the file list.

## Searching in Multiple Variables

You can search for a value in multiple selected variables using the Edit-box control in a search card.

In the File Explorer, when you search for a value, SOLIDWORKS PDM considers OR as the implicit operator, and returns a match if it exists in any variable value.

### To specify a multiple-variable edit-box control on the search card:

In the Card Editor, click **Edit** (Controls toolbar), and click in the card to place the edit box.

**Edit-box properties**

☒ Multi-variable

Value

Album | Approved by | Approved On | Description

Included variable

- ☐ \_SW\_Last\_Saved\_With\_
- ☒ Album
- ☒ Approved by
- ☒ Approved On
- ☐ Artist
- ☐ Assembly No.
- ☐ Attachments

Variables...

Flags

- ☐ Read-only
- ☐ Show in Explorer
- ☐ Multiline
- ☐ Updates all configurations

**Default Values**

Input formula

> ...

### Multi-variable

Lets you select multiple variables from the existing variables defined in the vault.

When you select the variables, the edit box displays the variables separated by | in alphanumeric order.

### Default Values

Lets you define the variable values.  
By default, SOLIDWORKS PDM considers the OR condition for the default values. The values can be the same or unique.

**At run time, when you edit default values with Multi-variable selected, the default values in the single variable edit box (for example, in the Cards tab) are not updated automatically.**

## Creating a Search Card to Search Within Multiple Variables

You can create a search card that lets you search for values in multiple variables when you open it in the File Explorer.

### To create a search card to search within multiple variables:

1. Create a search card.
2. Add controls to the card.
3. In the Card Editor, click **Edit** (Controls toolbar).
4. Click in the card to place the edit box.
5. Select **Multi-variable**.
6. From the list, select the variables to include.
7. Select the appropriate flags.
8. Click **Default Values** and select the variables you selected in step 6.
9. Assign values to the variables.  
The default values appear in the card controls.
10. Save the card.

## Using AND, OR, and NOT Operators in Search



SOLIDWORKS PDM supports AND, OR, and NOT operators in input search criteria in edit-box type fields on search cards.

You can use these search operators in any search card, Web2 search, the SOLIDWORKS PDM Search tool, and quick search.

Rules:

- Search strings are case-insensitive.
- Operators are case-sensitive and must be capitalized.
- For variables of a numeric or date type, the valid operators are: =, !=, <, <=, >, >=.
- Rules for using escape symbol:



Search for String with	Input String
Double quotation marks	String with an escape symbol \. For example, to search for "speaker", enter the string as \"speaker\"
Double quotation marks that are a part of an explicit search	String with an escape symbol \. For example, to search for 3" pipe, enter the string as "3\" pipe".
Numeric constant followed by "	String with or without escape symbol. For example, to search for a length value such as 3", enter the search string as 3\" or 3".

- In case of multiple operators used in a search, SOLIDWORKS PDM evaluates the search operators in this order: (), NOT, AND, and OR.
- You can use AND, OR, and NOT search operators or their equivalent symbols &, |, ! respectively.
- You can search for text, integer number, float, and date type data.
- You can use the AND and OR operators with or without the :. For example, for AND operator, use AND, AND:, &, or &:.
- The search field supports \* and ? as wildcard characters.
- You can use = to search for an exact string. For example, to search for a Tools string, enter the search string as =Tools.
- In case of a string that contains more than one word, you can use "" to search for the string in the same order of words. For example, to search for pipe tools, enter "pipe tools".

When you upgrade to SOLIDWORKS PDM 2020, the previously saved searches are upgraded to follow the new search rules while maintaining the previous behavior and search results.

## AND (&) Operator

Searches for results that include both the term before and the term after the operator.

Search String Examples	Description
term1 AND term2 TERM1 & TERM2	Returns the match that includes term1 and term2. Terms may appear in any order in the results.
AND: term1 term2 &: term1 term2	Examples of valid search results: <ul style="list-style-type: none"> <li>• term1 term2</li> <li>• term2 term1</li> <li>• term3 term1 term2</li> </ul>

Search String Examples	Description
<code>(" term1 term2 ")</code> OR <code>AND</code> <code>(" term1 term2</code>	<p>is the implicit operator for the SPACE character.</p> <p>Returns the match that is enclosed in the parentheses and that contains <code>term1</code> and <code>term2</code>.</p> <p>Examples of valid search results:</p> <ul style="list-style-type: none"> <li><code>(term1 term2)</code></li> <li><code>(term2 term1 term3)</code></li> </ul>
<code>(" "term1 term2" ")</code> OR <code>(" "term1 term2"</code>	<p>is the implicit operator for the SPACE character.</p> <p>Returns the match that is enclosed in the parentheses and that contains the string <code>term1 term2</code>.</p> <p>Examples of valid search results:</p> <ul style="list-style-type: none"> <li><code>(term1 term2)</code></li> <li><code>(term3 term1 term2 term4)</code></li> </ul>

## OR (|) Operator

Searches for results that include the term before or after the operator or both.

Search String Examples	Description
<code>term1 OR term2</code> <code>TERM1   TERM2</code> <code>OR: term1 term2</code> <code> : term1 term2</code>	<p>Returns the match that includes either or both <code>term1</code> and <code>term2</code>.</p> <p>Examples of valid search results:</p> <ul style="list-style-type: none"> <li><code>term1</code></li> <li><code>term2</code></li> <li><code>term2 term1</code></li> </ul>
<code>(" term1 OR term2 ")</code> OR <code>(" (term1 OR term2)</code>	<p>Returns the match that is enclosed in the parentheses and that includes either <code>term1</code> or <code>term2</code> or both.</p> <p>Examples of valid search results:</p> <ul style="list-style-type: none"> <li><code>(term1)</code></li> <li><code>(term3 term2)</code></li> <li><code>(term2 term1 term4)</code></li> </ul>

## NOT (!) Operator

Searches for results that do not include the term after the operator.

Search String Examples	Description
NOT TERM1	Returns values other than term1. Examples of valid search results: <ul style="list-style-type: none"> <li>term2</li> <li>term3 term4</li> </ul>
!="term1 term2"	Returns values other than string term1 term2. Examples of valid search results: <ul style="list-style-type: none"> <li>term3</li> <li>term2 term1</li> </ul>
!(2019-01-11)	Returns dates other than 2019-01-11. Examples of valid search results: <ul style="list-style-type: none"> <li>2019-02-12</li> <li>2017-03-11</li> </ul>

## Warning Users When Transitioning Files

For transitions that include dynamic notifications, you get a warning if you do not select any user or group to receive a notification.

## Web2 Enhancements

When you drag a folder to the file list, the Check In File Structure dialog box opens automatically.

In the **Details** section of the data card, in **Comment**, you can see version comments.

## Bill of Materials Tab in Web2

SOLIDWORKS PDM Web2 lets you see a read-only view of the Bill of Materials.

In the large screen layout, the Bill of Materials tab is available in the file detail view. The supported BOM types are:

- Computed BOMs
- Weldment BOMs
- Weldment cut lists
- SOLIDWORKS BOMs


In the small screen layout, the Bill of Materials tab is available from the ellipsis menu. The tab contains two customizable columns.

## Bill of Materials Tab in Web2

The Bill Of Materials tab displays the bill of materials of SOLIDWORKS PDM items or of a SOLIDWORKS assembly, drawing, part, or weldment part.

**To display the Bill of Materials tab:**

In the large screen layout, click the file name and click the Bill Of Materials tab.

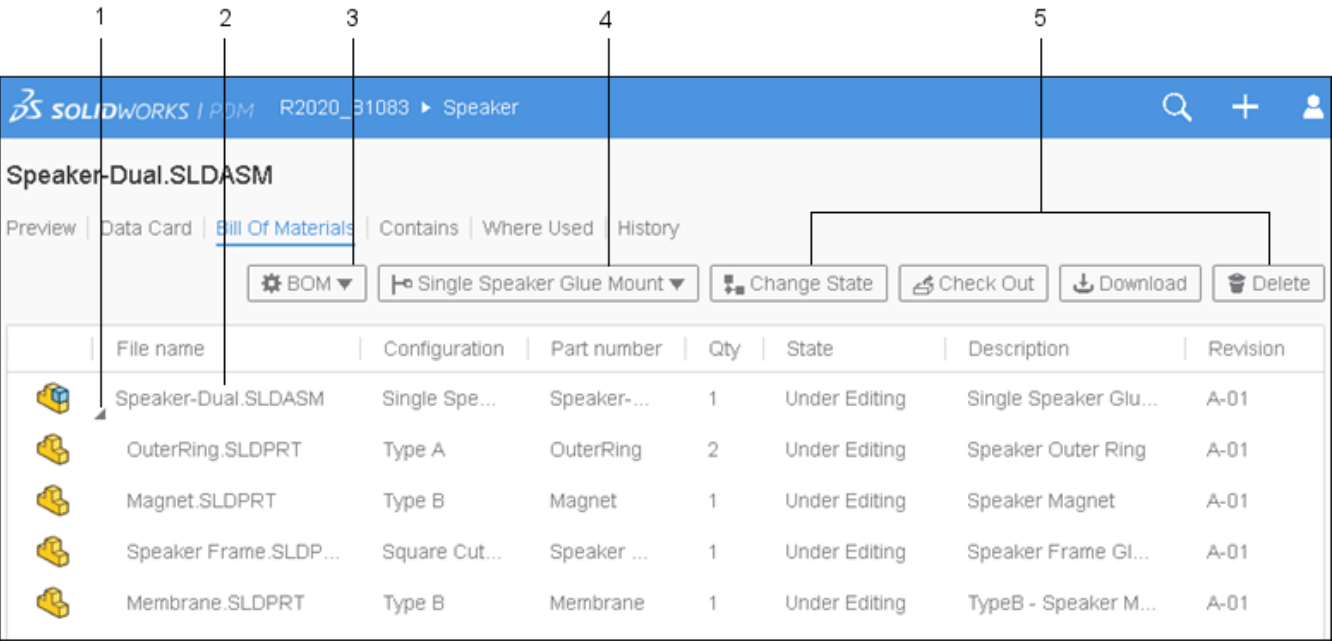

### Bill of Materials Tab

1	Expand or collapse		Expands or collapses the indented BOMs.
2	Table view	<b>BOM</b>	Displays the selected item for <b>Indented</b> or <b>Top Level Only</b> .

- 3 BOM type and options Displays the name of the selected BOM at the top with the list of other BOMs and options based on the selected BOM.

Selected BOM	List of BOMs	View option and reference version
BOM	Computed BOM, Weldment BOM, Weldment cut list, SOLIDWORKS BOM	Indented, Parts Only, Top Level Only, As Built, Latest
Weldment BOM or Weldment cut list	Computed BOM, Weldment BOM, Weldment cut list	-
SOLIDWORKS BOM	Computed BOM, SOLIDWORKS BOM	-

- 4 Configurations or sheets Displays the name of the selected configuration or sheet for Computed BOM, Weldment cut list, and Weldment BOM.

- 5 Actions Lets you select options and perform actions based on user permissions:
- **Change State**
  - **Check Out**
  - **Download**
  - **Delete**

## Bill of Materials Tab - Small Screen Layout

The Bill of Materials tab contains two columns.

### To display the Bill of Materials tab:

In the file detail view, click the ellipsis, and click **Bill Of Materials**.

Speaker-Dual.SLDASM BOM, Single Speaker Glue Mount		
File name	Qty	
Speaker-Dual.SLDASM Single Speaker Glue Mount, Speaker-Dual, Under Editing, Single Speaker Glue Mo...	1	
OuterRing.SLDPRT Type A, OuterRing, Under Editing, Speaker Outer Ring, A-01	2	
Magnet.SLDPRT Type B, Magnet, Under Editing, Speaker Magnet, A-01	1	
Speaker Frame.SLDPRT Square Cutout Glueable, Speaker Frame, Under Editing, Speaker Frame Glue M...	1	
Membrane.SLDPRT Type B, Membrane, Under Editing, TypeB - Speaker Membrane, A-01	1	


1	File name header	Displays the file name, selected BOM name, and configuration or sheet name.
2	Row details	Displays the values of two columns and comma-separated values of remaining columns.
3	Settings control	Displays the selected BOM, view option, reference version, and configuration or sheet.
4	Columns control	Lets you select the left and right columns to display.
5	Expand/collapse control for row	Expands or collapses the row to display values of other columns.
6	Expand/collapse control	Expands or collapses the indented, multilevel computed BOMs.

## History Tab

SOLIDWORKS PDM Web2 lets you see a read-only view of the history.

In the large screen layout, the History tab is available in the file detail view. It displays the table view that includes the **Event** column and customizable columns:

- **Version**
- **User**
- **Date**
- **Comment**

Click  and select or clear the columns to display.


In the small screen layout, to access the History tab, in the file detail view, click the ellipsis. The History tab has:

- A list of events in descending order of date and time.
- A separate row for each event.
- Information such as **Version**, **User**, **Date**, and **Comment** in each row for each event.
- A common control to expand or collapse all rows.
- Individual controls for each row.

## List of Files to Download in Web2

SOLIDWORKS PDM Web2 displays the list of files to download.

In the large screen layout, the Download with References dialog box displays the collapsible **Settings** option and the list of files to download.

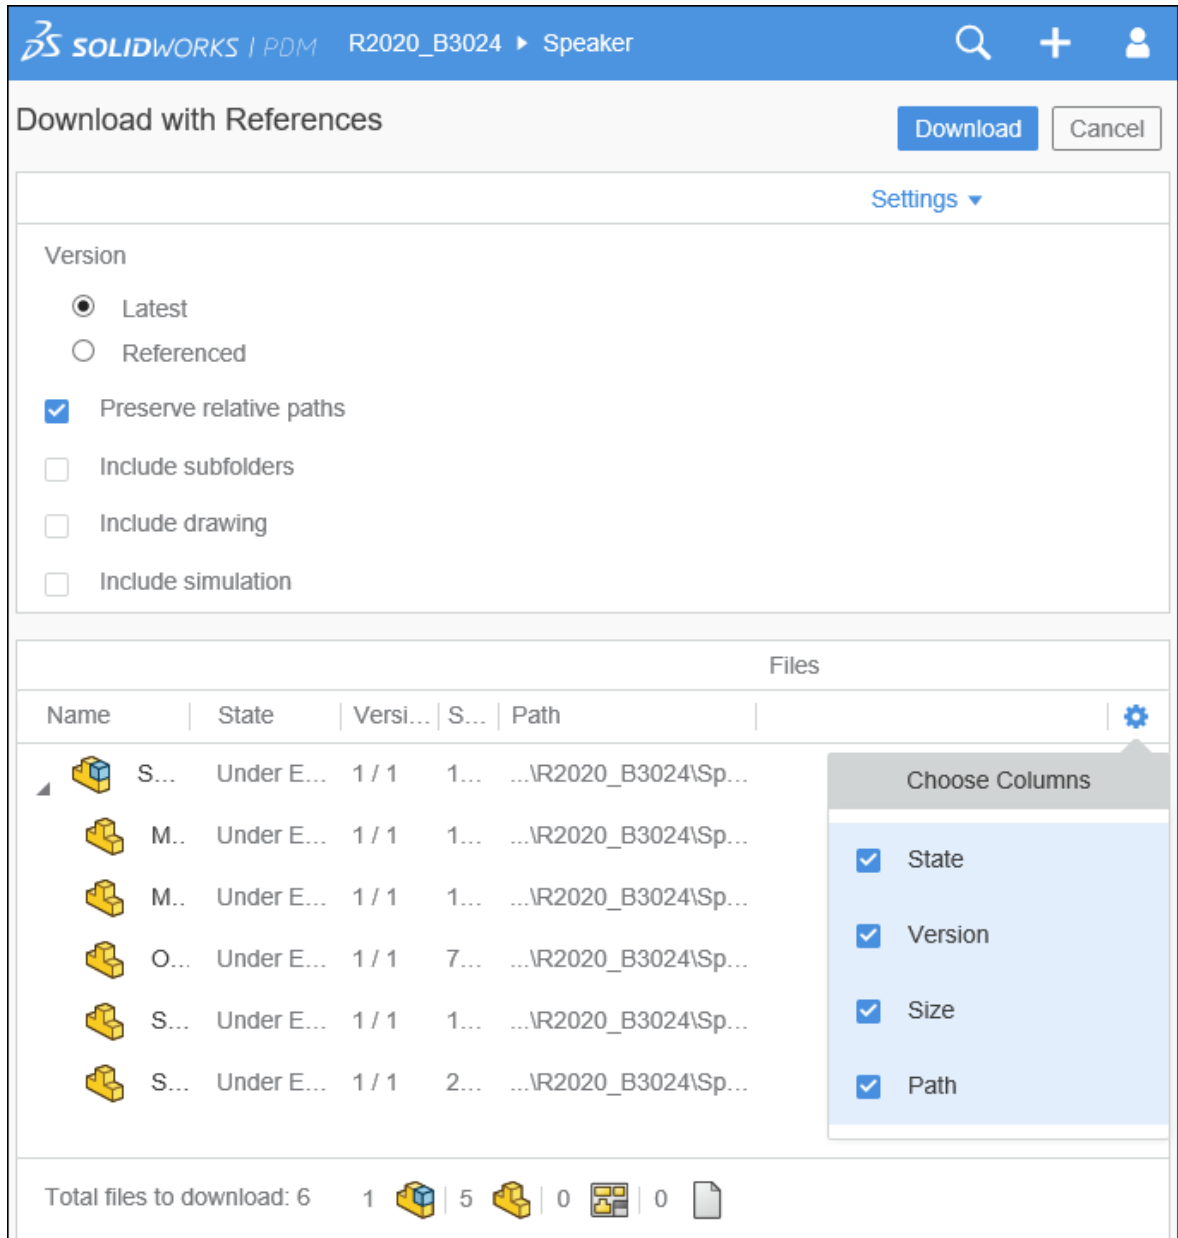


The file list displays the files based on these settings:

- **Version**
  - Latest
  - Referenced
- **Preserve relative paths**
- **Include subfolders**
- **Include drawing**
- **Include simulation**

The file list includes customizable columns such as **State**, **Version**, **Size**, and **Path**. Click and select or clear the columns to display.



In the small screen layout, the Download with References dialog box displays the list of files to download in one column.

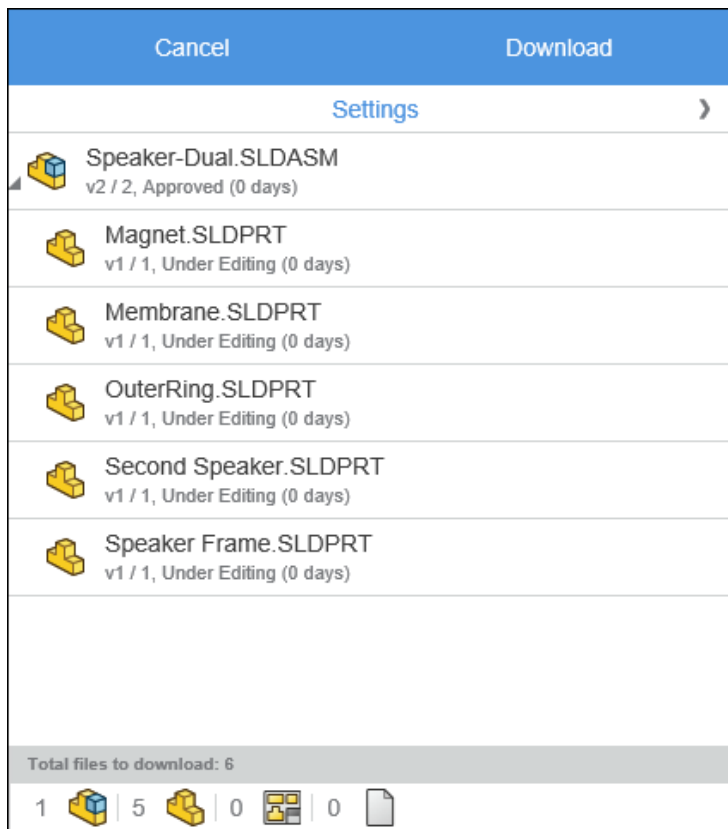

Click **Settings** to select the appropriate options. Click **Cancel** to access the file list.

# 20

## SOLIDWORKS Plastics

---

This chapter includes the following topics:

- **Coolant Input Boundary Condition**
- **Create Body from Deformed Shape**
- **Domains Node**
- **Enhanced Solid Mesh (Auto) Workflow**
- **Streamlined Mesh Creation**
- **Flow, Pack, and Cool Analyses Enhancements**
- **Geometry-Based Boundary Conditions**
- **Legacy Plastics Simulation Studies**
- **Material Library Updates**
- **Plastics Material Databases in 3D ContentCentral**
- **Plastics Tutorials**
- **Study Creation and Management**
- **Virtual Mold Design**

SOLIDWORKS® Plastics Standard, SOLIDWORKS Plastics Professional, and SOLIDWORKS Plastics Premium are separately purchased products that you can use with SOLIDWORKS Standard, SOLIDWORKS Professional, and SOLIDWORKS Premium.

### Coolant Input Boundary Condition

The **Coolant Input** boundary condition replaces the Cooling System boundary conditions of **Cool Pipe**, **Coolant Flow Field**, and **Coolant Entrance**.

The **Coolant Input** boundary condition is more intuitive and easier to use than the previous boundary conditions. Assign the **Coolant Input** boundary condition directly on geometry entities. This boundary condition supports both solid body and sketch-based cooling channel designs.

### Create Body from Deformed Shape

After running a warpage analysis, you can export the deformed shape as a SOLIDWORKS® part body.

**To open the Body from Deformed Shape PropertyManager:**

In the PlasticsManager, under **Results**, right-click **Warp Results**, and click **Create Body from Deformed Shape**.

Save the deformed body as a new configuration or a new part file. Use the **Advanced Export** to access alternative export formats, such as **Surfaces** and **Tessellated** body, to recreate geometry from a deformed shape.

Product designers can use this functionality to evaluate a part's deformed shape and assembly fit requirements, while mold designers can size the mold accurately.

Designers of plastic optical lenses can use **Body from Deformed Shape** in their optical simulations to evaluate the effect of manufacturing-induced deformation on the performance of the lens.

## Domains Node

The **Domains** node in the PlasticsManager tree lists the part bodies participating in the analysis and their domain classification.

The domain classification choices available for a study depend on the type of **Injection Process** and **Analysis Procedure** defined when creating a new study. For a **Shell** analysis procedure, the domain choice is limited to **Cavity**. For a **Solid** analysis procedure, the domain choices are: **Cavity**, **Runner**, **Cooling Channel**, **Mold**, and **Insert**.

The available domain choices depend on the installed SOLIDWORKS Plastics license.

Notes:

- You can select multiple part bodies to assign the same domain type, which is useful for models with a large number of bodies.
- You can access the Runner Design, Cooling Channel, and Virtual Mold PropertyManagers to create these features.
- You can assign the **Order** in which the cavities are injected for two-shot overmolding or multishot overmolding designs.
- You can exclude bodies from the analysis.

Before generating the mesh, every part body listed in the **Domains** node requires a domain assignment. You can exclude bodies that do not participate in the Plastics simulation by selecting **Exclude from Analysis**.

## Enhanced Solid Mesh (Auto) Workflow

The **Solid Mesh (Auto)** workflow is enhanced to create hybrid meshes for single and multi-material models.

Hybrid meshes, which are composed of a mixture of prism elements at the surface and tetrahedral elements to fill the volume of a part, are best suited for analyses. In previous releases, the **Solid Mesh (Auto)** algorithm created marching hexahedral meshes.

A good-quality watertight surface mesh is a prerequisite for the successful creation of a hybrid mesh. If the hybrid mesh creation fails, the **Solid Mesh (Auto)** algorithm reverts to creating a marching hexahedral mesh.

## Streamlined Mesh Creation

The Mesh PropertyManager is redesigned to simplify the mesh creation workflow.

The number of steps in the mesh creation workflow is reduced.

To access the Mesh PropertyManager, right-click **Solid Mesh**, or **Shell Mesh**.

To create a solid mesh with the automatic mesh process, click **OK** in the Mesh PropertyManager.

Follow a manual mesh creation workflow to specify the mesh type (**Tetrahedral Hybrid** or **Hexahedral**), mesh size, and curvature controls.

## Flow, Pack, and Cool Analyses Enhancements

Analyses solvers are improved.

- For the Shell and Solid mesh procedures, the Flow and Pack analyses account for multipoint, variable specific heat (C), and thermal conductivity (k) material data. Specific heat (C) and thermal conductivity (K) material properties can vary as a function of temperature. You can now incorporate multi-point data provided by material suppliers into analyses.
- Prediction of pressure decay is more accurate with improved pressure calculations in the pure cooling phase.
- A new turbulence (k- $\omega$ ) model calculates the flow of coolant in the cooling circuits. Cool simulations are more accurate using the new model.

## Geometry-Based Boundary Conditions

You can assign more boundary conditions directly on geometric entities than you previously could.


The boundary conditions that you can apply on geometric entities are the following:

- **Injection Location**
- **Control Valves**
- **Mold Wall Temperature**
- **Clamp Force**
- **Symmetry Face**
- **Insert Properties** (previously, **Insert Boundary**)
- **Air Vents**
- **Exclude from Warp** (previously, **Runner Element**)
- **Filled Hot Runner**
- **Coolant Input**

Although the majority of the boundary conditions are geometry-based, the following boundary conditions remain mesh-based:

- **Warp Boundary**
- **Flow Injection Factor**

- **Modify Local Thickness**

The mesh-based boundary conditions are available after generating a mesh. To access the mesh-based boundary conditions, right-click **Mesh** .

## Legacy Plastics Simulation Studies

Legacy studies created in SOLIDWORKS Plastics 2019 and earlier are read-only in the 2020 release due to an architectural redesign.

You can open legacy studies in SOLIDWORKS Plastics 2020, but you can only edit post-processing features such as results export and report creation.

## Material Library Updates

The SOLIDWORKS Plastics material library features new polymer grades provided by material suppliers.

Sixteen polymer grades are added from the Chevron Phillips Chemical and thirteen polymer grades from the RadiciGroup material databases.

<b>Chevron Phillips Chemical</b>	<b>RadiciGroup High Performance Polymers</b>
HDPE / Marlex 9005	PA / Radistrong A RV500W 333BK
HDPE / Marlex 9006	PA6 / Radilon S CW300LW 339 E BK
HDPE / Marlex 9012	PA6 / Radilon S RV300W 333 BK
HDPE / Marlex 9018	PA6 / Radilon S RV350W 333BK
HDPE / Marlex 9035	PA610 / Radilon D RV300W 333 BK
HDPE / Marlex 9708	PA610 / Radilon D HSKC 106NT
HDPE / Marlex H525	PA610 / Radilon D RV600RKC 306BK
HDPE / Marlex HHM 4903	PA612 / Radilon DT RV300RKC2 106 NT
HDPE / Marlex HHM 5502BN	PA66 / Radilon A CF200 316 BK
HDPE / Marlex HMN 6060UV	PA66 / Radilon A RV300W 333BK
HDPE / Marlex HMN TR-938	PA66 / Radilon A RV350W 333 BK
HDPE / Marlex HMN TR-942	PA66 / Radistrong A RV600W 333 BK
DPE / Marlex HXM 50100	PPS / Raditeck P RV400K 1700NT
HDPE / Marlex TRB-432	
LDPE / Marlex 1007	
LDPE / Marlex KN226	

The following obsolete material grades are removed from the database based on the supplier's recommendation.

EMS-GRIVORY
Grilamid DAM55 COND
Grilamid DAM55 LX COND
Grilamid DAM55 LY COND
Grilamid TR XE 3657
Grilamid TR70
Grilamid XE3050 GRAU
Grilamid XE3732
Grilamid TR70 LX
Grilamid ELY 20 NZ
Grilon A28DZ
Grilon A28GM
Grilon A28NZ
Grilon A28V0

## Plastics Material Databases in 3D ContentCentral

SOLIDWORKS partnered with the world's largest plastics material suppliers to provide access to the most up-to-date and accurate plastics material databases.

### To access the plastics material databases in 3D ContentCentral:

1. Go to <http://www.3dcontentcentral.com/>.
2. Click **FIND > INJECTION MOLDING MATERIALS**.

The complete catalog of plastics materials appears with information about the material supplier, material family, tradename, grade, and a short description (if available).

To download an individual material grade, click **Download Plastics Material Data**. Unzip the compressed binary file `.bin` to a local folder.

### To add a material file from 3D ContentCentral to the SOLIDWORKS Plastics User-defined database:

1. In the PlasticsManager, under **Material**, right-click **Polymer** and click **Open Database**.
2. In the dialog box, click **User-defined Database**.
3. Click **Import Plastic Material > File**.
4. Browse to the location of the unzipped material data file and select it.

The new material is added under the **Plastics Database**

When new material grades become available, the material suppliers upload the data in 3D ContentCentral. New materials uploaded to 3D ContentCentral by material suppliers are included in subsequent service packs or future major releases of SOLIDWORKS Plastics.

## Plastics Tutorials

Seven tutorials covering a range of SOLIDWORKS Plastics workflows are available.

### To access the tutorials:

From the SOLIDWORKS Plastics CommandManager, click **Settings and Help > Tutorials**.




## Study Creation and Management

You can create a new Plastics study based on the current SOLIDWORKS configuration. Study management features for editing, deleting, and clearing a study are available.

In the SOLIDWORKS Plastics CommandManager, click **New Study**.

In the Study PropertyManager, type a name for the study, set the appropriate **Injection Process** parameters, and select a **Solid** or **Shell** mesh for the **Analysis Procedure**. The new study is based on the active SOLIDWORKS configuration.

After creating a new study, right-click the top study node in the PlasticsManager tree to access the study management features.

	<b>Edit Study</b>	Edits the study parameters.
	<b>Delete Study</b>	Deletes the study.
	<b>Clear Study</b>	Resets the study to its default state. Deletes all boundary conditions, mesh, materials, process parameters, and results associated with the active configuration.

## Virtual Mold Design

You can define the position of a virtual mold relative to the cavity with a bounding box or by setting global coordinates.

### To open the Virtual Mold PropertyManager:



- In the PlasticsManager, right-click **Domains** , and click **Virtual Mold Design**.



## Specification Method

<b>Bounding Box</b>	Centers the rectangular volume in space representing the mold on the approximate centroid of the part.
<b>Global coordinate</b>	Specifies the location and dimensions of the rectangular volume in space representing the mold using the global coordinate system.

## Parameters

<b>+X, -X</b>	Specifies the extents of the X coordinates of the volume in space.
<b>+Y, -Y</b>	Specifies the extents of the Y coordinates of the volume in space.
<b>+Z, -Z</b>	Specifies the extents of the Z coordinates of the volume in space.
	Links the positive and negative coordinate extents, such that the negative extent varies simultaneously with the positive extent.
	Specifies the positive and negative coordinate extents independently.

# 21

## Routing

---

This chapter includes the following topics:

- **3D Route Changes in Flattened Routes**
- **Color for Electrical Coverings**
- **Connector Blocks**
- **Create Multiple Connection Points**
- **Length Leaders for Flattened Routes**
- **Manufactured-Style Flattened Route**
- **Mass and Density of Cables and Wires**
- **Minimum Bend Radius**
- **Pipe Drawings**
- **Reimport Electrical Data**
- **Show/Hide Flatten Route Items**
- **Splices Without Components**
- **Transparent Coverings**

Routing is available in SOLIDWORKS® Premium.

### 3D Route Changes in Flattened Routes

You can update a 3D route by adding or deleting items such as connectors, clips, branches, and splices. When you flatten the 3D route, the software updates the flattened route with the 3D route changes.

### Color for Electrical Coverings

You can set the color for electrical coverings through the Routing Library Manager and view the colors in the Coverings PropertyManager, under **Layer Properties**.

#### Covering Library Wizard

You can set the color for electrical coverings from the **Covering list**.

---

<b>SWColor</b>	Specifies the color for electrical coverings. Double-click the color to set it.
----------------	---

---





# Connector Blocks

You can create connector blocks for parts and assembly connectors with the Create Connector Block PropertyManager and the Routing Library Manager.

The End View Creation PropertyManager is now the Create Connector Block PropertyManager. In this PropertyManager you can:

- Preview and select the view for connectors using standard views.
- Provide the pin information for the connector block. The pin information is visible on the flattened drawing view.

## To create connector blocks:

- For parts and assembly connectors, click **Create Connector Block**  (Electrical toolbar) or **Tools > Routing > Electrical > Create Connector Block** .
- For routing assemblies, in the FeatureManager design tree, expand **Components**, right-click any component, and click **Create Connector Block**  or in the graphics area, right-click the connector and click **Create Connector Block** .

## Insert Pin Information

<b>Selected Entities</b>	Displays the selected entities.
<b>Pin Information</b>	Displays the pin information, which you can edit.
<b>Pin Text</b>	Contains additional pin information that you enter.

# Create Multiple Connection Points

You can create multiple connection points in parts.

Select the following parameters to create multiple connection points in parts:

- A sketch that has sketch points. The number of connection points is equal to the number of sketch points in a sketch.
- Multiple circular edges.
- Multiple circular and cylindrical faces.

## Assign Port ID Information

You can assign port ID or pin information to the connection points through the Connection Point PropertyManager.

For the route type as **Electrical**, the software displays the **Assign Pin Information** section. For the route types as **Tube** and **Fabricated Pipe**, the software displays the **Assign Port ID Information** section.

<b>Selected Entities</b>	Displays the entities from the <b>Selections</b> section.
<b>CPoint Name</b>	Displays the connection point name, which you can edit.
<b>Port ID or Pin Number</b>	Displays the port ID or pin number, which you can edit.

To create the connection points for the **Selected Entities**, select the check box for each row.

## View/Edit Connection Point Parameters

You can use this dialog box to view and edit connection point parameters. The software highlights the CPoint or ACPPoint in the graphics area and FeatureManager design tree when you select or edit any parameter.

### To access this dialog box:


1. Open a part that has connection points or an assembly that has assembly connection points.
2. In the FeatureManager design tree, right-click **CPoint** and click **View/Edit Connection Point Parameters**.

<b>CPoint Name</b>	Displays the connection point name.
<b>Pin Number/Port ID</b>	Displays the pin number or port number, which you can edit.
<b>Stub Length</b>	Displays the stub length, which you define when you create connection points. You can edit the stub length.
<b>Reverse Direction</b>	Reverses the direction of the route.

For assembly connection points, you can edit only the **Pin Number/Port ID**.

## Length Leaders for Flattened Routes

You can show length leaders when you flatten routes with the Flatten Route PropertyManager.


To access the PropertyManager in the route assembly, click **Tools > Routing > Electrical > Flatten Route** .

### Flatten Options

<b>Show Length Leaders</b>	Displays length leaders in the flattened route and on flattened drawings.
----------------------------	---

# Manufactured-Style Flattened Route

You can adjust the angle of a line or an arc from the X-axis when you edit the manufactured-style flattened route.

To access the PropertyManager, right-click a manufacture-style flattened route in the FeatureManager design tree and click **Edit Flattened Route** .



## Edit Tools

---

<b>Adjust angle from X-axis</b>	Adjusts the angle of a line or an arc from the X-axis.
---------------------------------	--

---

# Mass and Density of Cables and Wires

You can set the mass of cables, cores, and wires in the **Cable Wire Library Wizard**  and the density for coverings in the **Covering Library Wizard**  using the Routing Library Manager.

The cable wire library and the covering library define the mass properties of an electrical route that has cables, cores, wires, and coverings. The software calculates and applies these properties to the solid bodies based on the values set in the libraries. You can view the mass by using **SOLIDWORKS Mass Properties**.

You can also view the **Mass per Unit Length** and **Density** attributes in the following PropertyManagers. These values are read-only.


- Edit Wires PropertyManager under **Properties**.
- Covering PropertyManager under **Layer Properties**.
- Fixed Length Covering PropertyManager under **Layer Properties**.

# Minimum Bend Radius

You can create a route part if the bend radius of the cable, core, or wire is less than the minimum.

Click **Tools > Options > System Options > Routing** and select **Create route part for segments if bend radius is less than the minimum**.

In a route part for segments, the software considers the individual minimum bend radius for the cable and core.

You can view the unit of measure for **Minimum Bend Radius** and **Outer Diameter** in the **Cable Wire Library Wizard**  using the Routing Library manager.

When you save the XML file using the Routing Library manager, the XML file and the Routing Library manager use the same unit of measure.

## Pipe Drawings

You can specify the drawing template and the sheet format for pipe drawings with the Pipe Drawing PropertyManager.

To access the PropertyManager, click **Pipe Drawing**  (Piping toolbar) or **Tools > Routing > Piping > Pipe Drawing** .

### Drawing Options

<b>Drawing template</b>	Uses the selected template for the pipe drawing.
-------------------------	--

## Reimport Electrical Data

You can remove unused sketch segments and connectors from the route assembly when you update and reimport the From-To Excel or XML file using the Import Electrical Data PropertyManager.

### Update Options

<b>Delete segments with no data</b>	Deletes unused sketch segments.
<b>Delete connector</b>	Deletes unused connectors.

## Show/Hide Flatten Route Items

You can create 3D connectors and connector blocks simultaneously when you create flattened route drawings for route assemblies.

When you flatten a route from the Flatten Route PropertyManager, in **Flatten Options**, you can select **Display 3D connectors** or **Use drawing connector blocks**. The software creates 3D connectors and connector blocks for flattened route drawings. You can select one or both types.

### Connectors

<b>3D Connectors</b>	Visible in the drawing view if you select <b>Display 3D connectors</b> when you flatten the route.
<b>Connector Blocks</b>	Visible in the drawing view if you select <b>Use drawing connector blocks</b> when you flatten the route.

<b>Pin Text</b>	Enabled if you provide pin text when you define connector blocks.
<b>Pin Color</b>	Enabled if you provide a pin color when you define connector blocks.

## Annotations


<b>Component Reference</b>	Displays the connector name and reference in the drawing view. When you select <b>Display 3D connectors</b> , the connector and component name are highlighted when you click the connector table. When you select <b>Use drawing connector blocks</b> , the connector name is highlighted when you click the connector table in the drawing view.
----------------------------	--

## Accessory Components

- **Splices**
- **Inline Components**

# Splices Without Components

You can add splices without components to electrical routes. A spherical image appears on a junction point without a CPoint or an RPoint when you add splices without components.



When you add splices to the route, the software adds a **Splices** folder to the FeatureManager design tree.

You can delete splices without components from the FeatureManager design tree or from the graphics area by deleting the splice junction point.

## Add Splice PropertyManager

When you pin the Add Splice PropertyManager and select **Without Component** in **Splice Options**, you can assign properties to the splice and add multiple splices with the same properties.

## Splice Options

<b>With component</b>	Adds splices with components.
-----------------------	-------------------------------

<b>Without Component</b>	Adds splices without components and displays <b>Additional Properties</b> . You can create and modify properties.	
	<b>Name</b>	Enter a name for a new property.
	<b>Value</b>	Enter a value or text expression for a new property.
	<b>Create/Edit</b>	Adds the new name and value to the Additional Properties list.

---

## Transparent Coverings

You can create transparent coverings for wires and cables.

Click **Tools > Options > System Options > Routing** and select **Create transparent coverings**.



# 22

## Sheet Metal

---

This chapter includes the following topics:

- **Convert to Sheet Metal**
- **Tab and Slot**



### Convert to Sheet Metal

With the **Convert to Sheet Metal** tool:

- There are improved flat pattern results.
- For sheet metal parts created in SOLIDWORKS® 2020 and later, you can:
  - Convert multiple disjoint tabs that share a common bend face.
  - Use relief cuts that:
    - Use improved logic to determine where to include relief cuts.
    - Behave similarly to relief cuts created with the **Edge Flange** tool.
    - Reflect the selected auto relief, type, and gap values more accurately.

### Tab and Slot

When creating a **Tab and Slot** feature in a sheet metal part, you can set negative values.

In the Tab and Slot PropertyManager, under **Slot**, click **Slot Length Offset**  or **Slot Width Offset**  to set the values as negative. This does not create a negative offset in cases of a single body tab and slot or if the resulting tab and slot bodies are merged.

# 23

## SOLIDWORKS Simulation

---

This chapter includes the following topics:


- **Collapse Simulation Tree Folders**
- **Distributed Coupling for Pins and Bolts**
- **Draft and High-Quality Mesh Definition**
- **Free Body Forces for Nonlinear Studies**
- **Link Between Results and Model Files**
- **Repair Corrupt Studies**
- **Simulation Evaluator**
- **Simulation Performance Improvements**
- **Stress Averaging at Mid-Side Nodes**
- **Thermal Loads for Beams**

SOLIDWORKS® Simulation Standard, SOLIDWORKS Simulation Professional, and SOLIDWORKS Simulation Premium are separately purchased products that you can use with SOLIDWORKS Standard, SOLIDWORKS Professional, and SOLIDWORKS Premium.

### Collapse Simulation Tree Folders

In a simulation study tree, you can collapse all folders and subfolders with a single command.

To collapse all folders and subfolders in a simulation study tree:

- Right-click a simulation folder or subfolder, and click **Collapse Tree Items** . You can also right-click an empty area next to a simulation folder to access **Collapse Tree Items**.

### Distributed Coupling for Pins and Bolts

The introduction of distributed coupling enhances the formulation of pin and bolt connectors.

Distributed coupling allows the faces attached to pin and bolt connectors to deform, which delivers a more realistic representation of a connector's behavior. Distributed coupling for pins and bolts is available for linear static studies only.

In the Connectors PropertyManager, under **Connection Type**, select **Distributed**.

For new pin and bolt connector definitions, the default **Connection Type** is **Distributed**. For legacy connector definitions, **Connection Type** is **Rigid**.


When you set **Connection Type** to **Distributed**, a distributed coupling formulation connects a reference node (beam element node of a bolt shank) to a group of coupling nodes inside the imprint regions of a bolt's head and nut. Distributing coupling constrains the motion of the coupling nodes to the translation and rotation of the reference node. Nodes located inside the head and nut imprint areas can deform relative to each other.

This constraint is enforced in an average sense in a way that enables control of the transmission of loads through weight factors at the coupling nodes. For example, the constraint distributes a bolt's pre-load such that the sum of the forces at the coupling nodes is equivalent to the total pre-load at the reference node. Uniform weight factors are applied in this case.


The distributed connection produces more realistic stress and displacement fields at a bolt's head and nut contact areas.

A rigid connection produces stress hot spot areas inside the head and nut regions of the connected components, because rigid bars introduce high stiffnesses. A distributed connection eliminates these high stresses.

The image shows two cylindrical components connected by a bolt with a prestress load of 1,000 N. No-penetration contact exists between the two components.

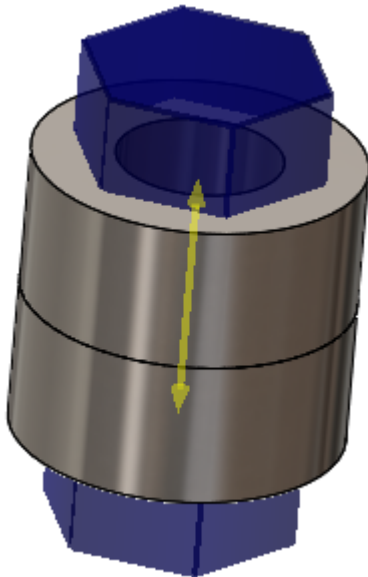


Results of a static analysis using rigid and distributed connection for this bolt.

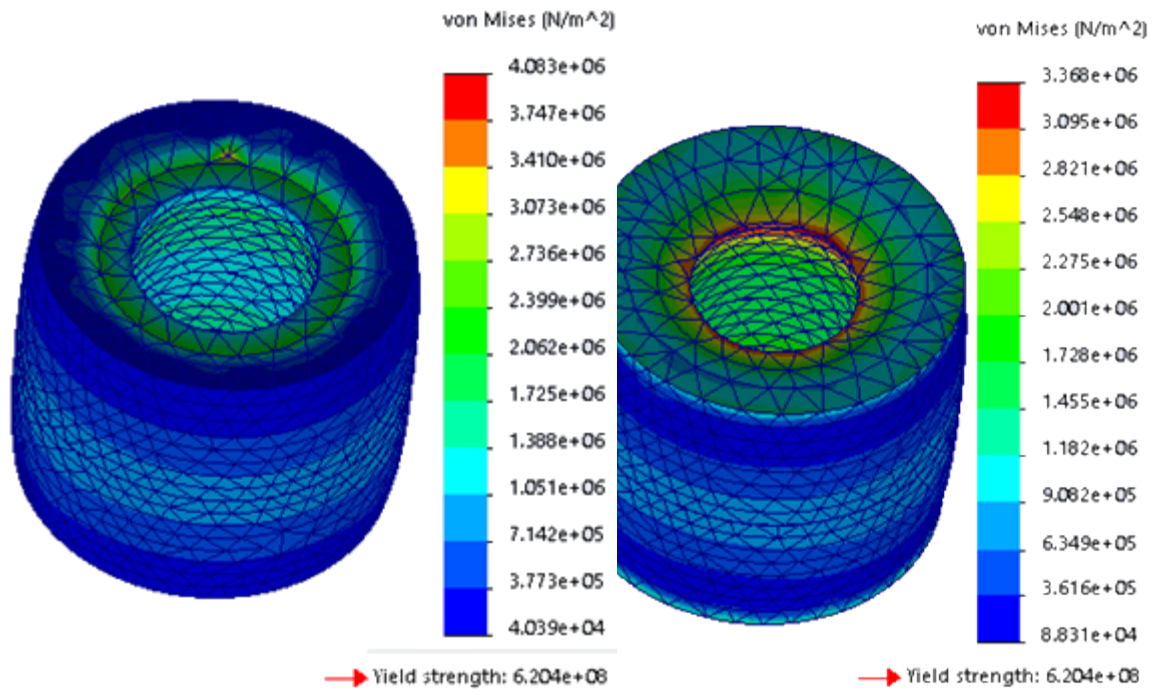**Rigid Bolt Connection****Distributed Bolt Connection**

von Mises stress plot with hot spot at the head imprint region.

von Mises stress plot with smoother gradients at the head imprint region.

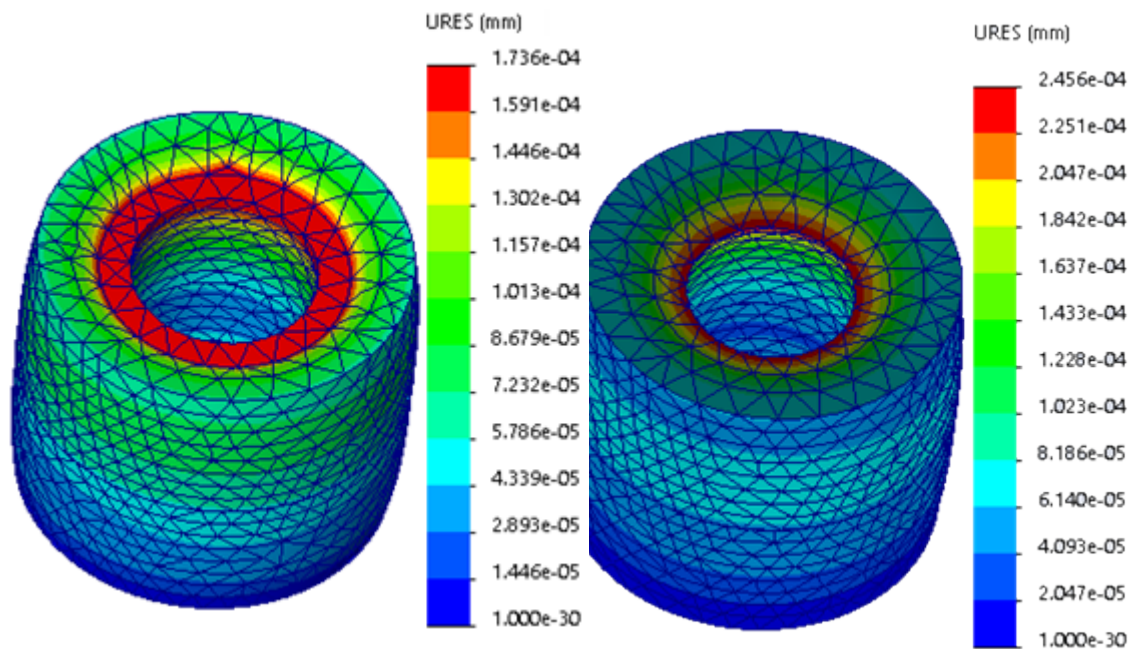**Rigid Bolt Connection****Distributed Bolt Connection**

**Rigid Bolt Connection**

Resultant displacement plot showing uniform deformation at the head imprint region.

**Distributed Bolt Connection**


Resultant displacement plot showing smoother distribution at the head imprint region.


## Draft and High-Quality Mesh Definition

An improved mesh formulation for linear static studies allows both draft and high-quality solid elements to coexist in a single mesh definition.

You can select which solid bodies to mesh with high-quality mesh or draft-quality mesh. The simulation runs with a hybrid mesh definition that has draft and high-quality tetrahedral elements. The hybrid mesh is available only for linear static studies with solid bodies.

- **To assign a draft-quality mesh to a solid body:**

Right-click the body in a Simulation static study, and click **Apply Draft Quality Mesh** .

An orange triangle icon  next to a body indicates a draft-quality mesh assignment.

- **To assign a high-quality mesh to a solid body:**

Right-click the body, and click **Apply High Quality Mesh** .


A blue circle icon  next to a body indicates a high-quality mesh assignment.

- **To assign a draft or high-quality mesh to all solid bodies in a study:**

Right-click the **Parts** folder , and click **Apply Draft Quality Mesh to All** , or **Apply High Quality Mesh to All** .

You can also assign a draft or high-quality mesh quality to selected solid bodies from the **Mesh Quality** tab of the Mesh PropertyManager.

The image shows an assembly with draft and high-quality mesh assignments.

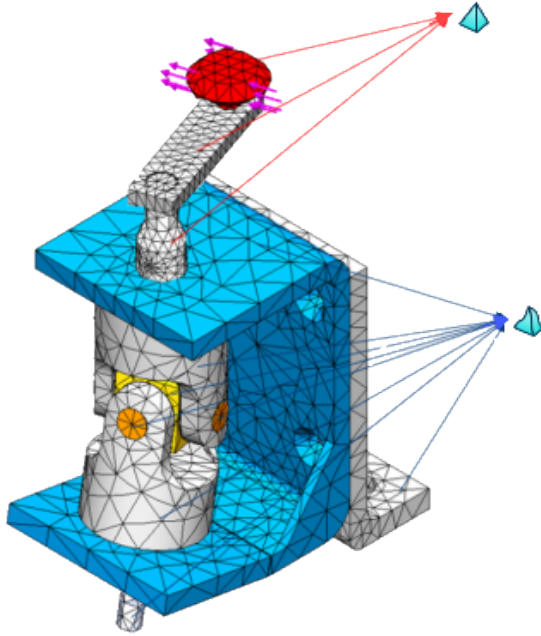

Results from Linear static studies with hybrid meshes are valid as input for dependent study types such as: Fatigue, Pressure Vessel, Design, and Submodeling studies.

## Free Body Forces for Nonlinear Studies ★

After running a nonlinear static or nonlinear dynamic study, you can list the free body forces on select geometry entities at each solution step.

In the Nonlinear-Static dialog box, click **Compute free body forces**.


When the analysis completes, right-click **Results**, and click **List Result Force**. Under **Options** select **Free Body Force**.

Select geometry entities (face, edge, or vertex) or a body to list the free body forces that act on the selected entities for a defined solution step.

The free body forces can come from contact, external loads, restraints, or connectors.

Free body calculations are not available for 2D simplification studies.

Table 1: Listing of Free Body Forces on Selected Faces

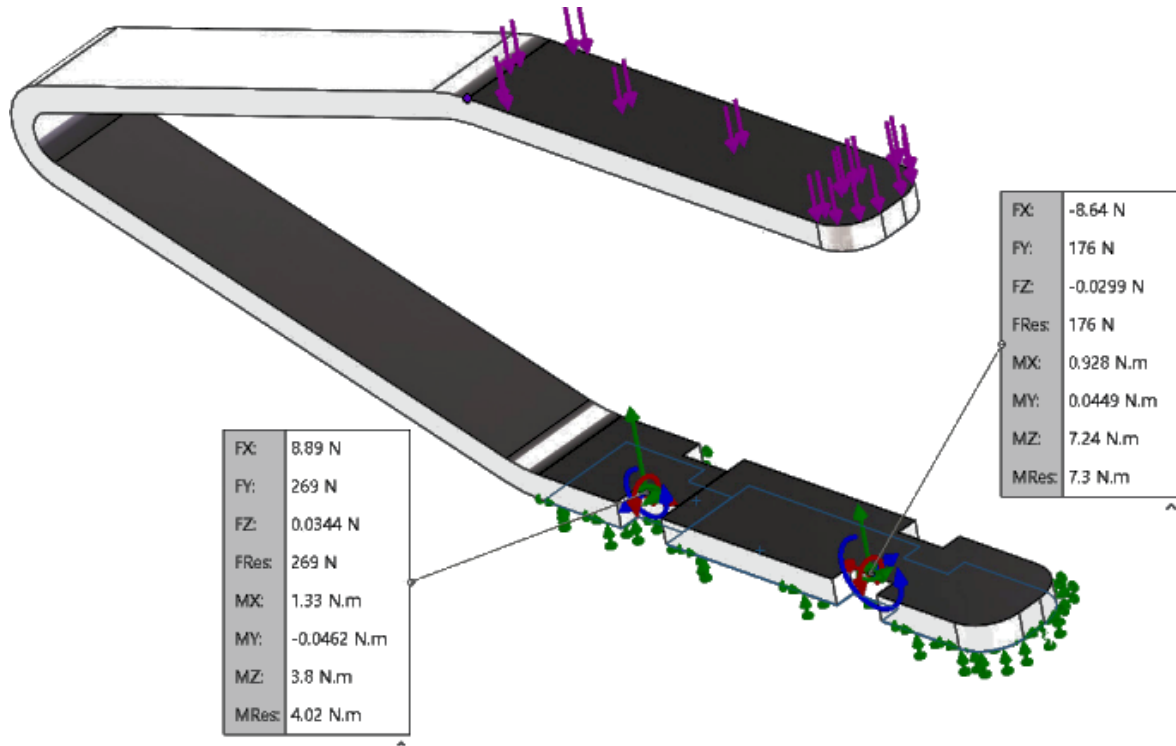

## Link Between Results and Model Files

The algorithm that links the results file (\*.cwr) to the model file that generated the results is improved.

You can upload and view result plots from data saved in the most recent \*.cwr file, even in cases where the software terminated before completing the analysis of all simulation studies. For example, during a batch analysis of multiple studies, if the program terminates before running the last study, the software validates the links to the completed \*.cwr files for post-processing.

It is important to save the model after meshing. The same mesh data exist in both files for the software to establish the link between the results file and the model that generated the results.

The software checks for the results file in this order:

1. The results folder specified on the study's Properties dialog box.
2. The folder of the model file that generated the results.
3. The results folder specified on the **Default Options > Results** tab.

To re-establish a link between a valid \*.cwr file and a model file, and be able to create result plots, start the **Simulation Evaluator**.

**Simulation Evaluator** lists the location of the model file and results folder. If a results file (\*.cwr) exists, click the link provided to validate the results file and link it to the

current study. In the event that the software cannot establish a link between the active model and the results file in the designated results folder, a warning message lists the reasons of failure.

Renaming a model file or a simulation study after saving the results can invalidate the link to the results file. The software cannot reconstruct the link between the new file and the results saved in the original file *<model name-study name.cwr>*.

## Repair Corrupt Studies



The software identifies simulation studies with corrupt data, and issues a warning to delete the corrupted studies before saving the model.

When the software detects a simulation study with corrupt data, it flags the study tab with an error icon. When you save a model that has corrupt studies, the software issues a warning to delete the corrupt studies before proceeding.

## Simulation Evaluator

Simulation Evaluator checks a study's setup to determine if the setup is optimal for a successful simulation.

**To run the Simulation Evaluator, do one of the following:**

- In the Simulation CommandManager, click **Simulation Evaluator** .
- In a Simulation study tree, right-click the top study icon, and click **Simulation Evaluator** .

**Simulation Evaluator** checks conditions related to the results folder, storage capacity of the results drive, materials used in the simulation, and the mesh volume. If conditions in the study prevent a successful simulation run, the Simulation Evaluator dialog box provides information for corrective actions.

In the Simulation Evaluator dialog box, click **Save** to save the content of the dialog box in a `.txt` document.

## Simulation Performance Improvements

Performance improvements are implemented for linear static studies with multiple load cases and studies with contacts set to incompatible bonding.

### Linear Static Studies with Multiple Load Cases

You see performance benefits while solving a simulation for linear static studies with multiple load cases defined with remote loads. The force and moment components of remote loads support the optimized solver performance. Translation, rotation, and mass components of remote loads remain unchanged for all load cases.



Performance is not improved when no-penetration contact or virtual wall contact are present in any load case.

The Intel Direct Sparse solver performs the global stiffness matrix factorization (which consumes the majority of the total solution time) only once, because the stiffness matrix remains the same for each load case.

The optimized reconfiguration of the Intel Direct Sparse solver was introduced in SOLIDWORKS Simulation 2019, and it was realized for pressure, force, and torque load types.

## Incompatible Bonding

The algorithm of the surface-to-surface incompatible bonding is improved. The solver calculates correctly the zero-stress state and zero frequencies for rigid body modes.

The calculation of stresses at bonded interfaces with unmatched (incompatible) meshes is also improved.

The default option for bonded component contact is now set to **Incompatible mesh**. You can change the mesh setting for the **Component contact** (including the **Global Contact** option) to **Compatible mesh** or **Incompatible mesh** for a bonded contact type from **Simulation Options > Default Options > Contact**.


## Stress Averaging at Mid-Side Nodes

The improved stress averaging algorithm applies to linear dynamic studies.

Before you run a linear dynamic study, in the Results Options PropertyManager, click **Average stresses at mid-nodes (high-quality solid mesh only)**.

For a high-quality solid element, the stresses at the mid-side nodes are calculated by averaging the stress values at the adjacent corner nodes. This stress averaging method improves the calculation of stresses at mid-side nodes for tetrahedral elements with high aspect ratios.

Example:

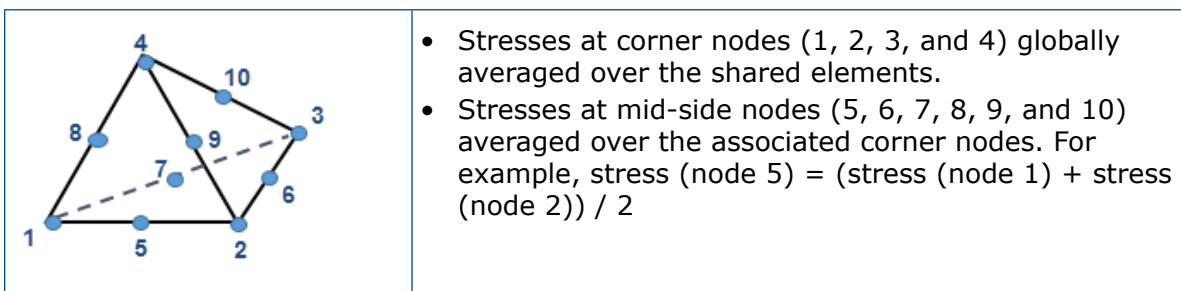

## Thermal Loads for Beams ★



You can apply thermal loads on beam joints and beam bodies. After running thermal analysis on a model with beams, you can import the temperatures into a Linear Static,


Nonlinear Static, Frequency, Buckling, or Nonlinear Dynamic study to perform stress analysis.

The table lists the type of thermal loads you can apply on beam and truss elements. Apply concentrated thermal loads on beam and truss joints and distributed thermal loads along the length of beam and truss bodies.


Beam or Truss		
Thermal Loads	Joint	Body
Temperature	Yes	Yes
Convection	No	Yes
Heat Flux	No	Yes
Heat Power	Yes	Yes
Radiation to Ambient only	No	Yes

Only heat flux supports non-uniform distribution of thermal load.

For example, to apply temperature to a joint or beam body, in the Temperature PropertyManager click **Joints**  or **Beams** . In the graphics area, select the joints or beam bodies to apply the temperature loads.

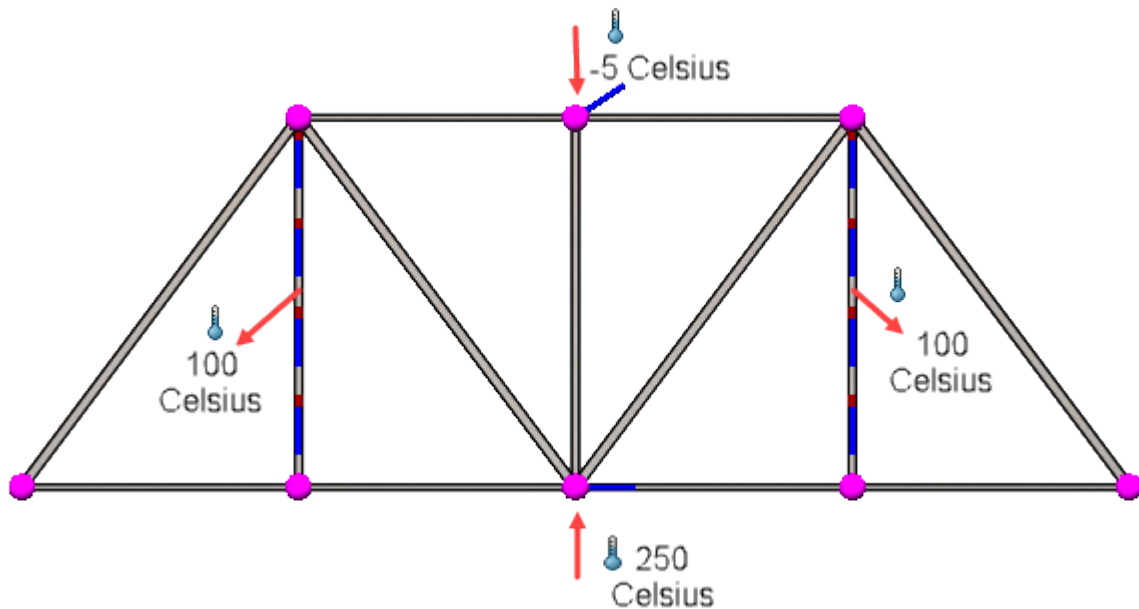


After running a thermal study, you can view thermal plot results on beam models. The temperature result plot of a truss is shown.

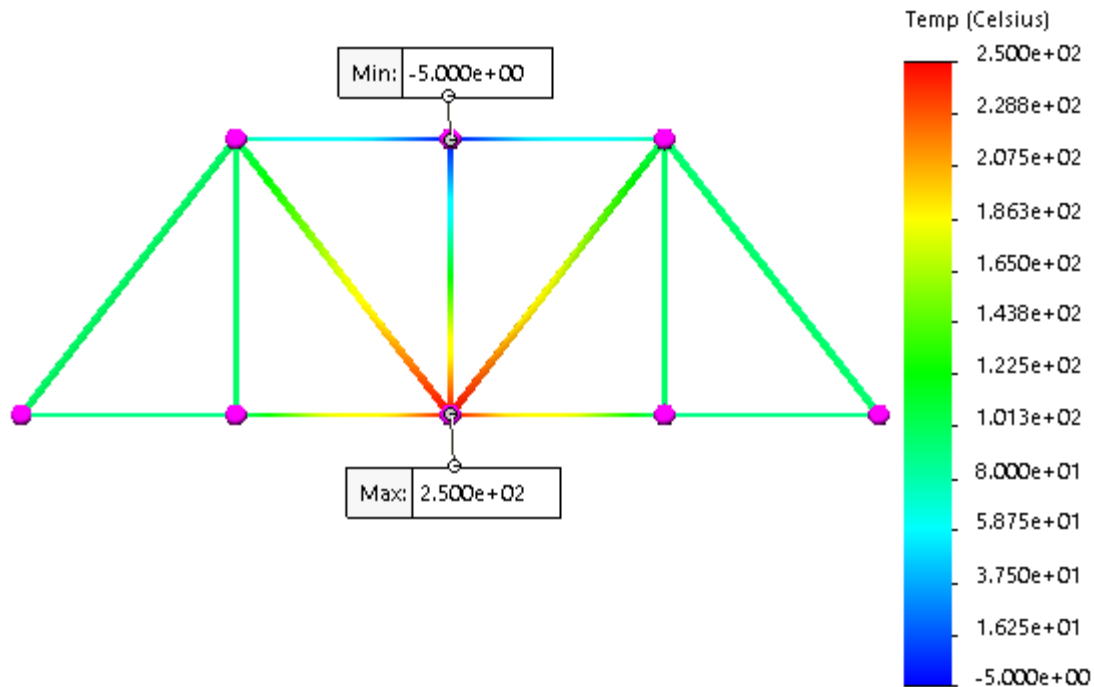

**To perform stress analysis based on temperatures from a thermal study:**

1. Create a static study.
2. Open the static study Properties dialog box.
3. On the Flow/Thermal Effects tab, select **Temperatures from thermal study**.

The resultant displacement plot of a truss model with temperature loads imported into a static study is shown.

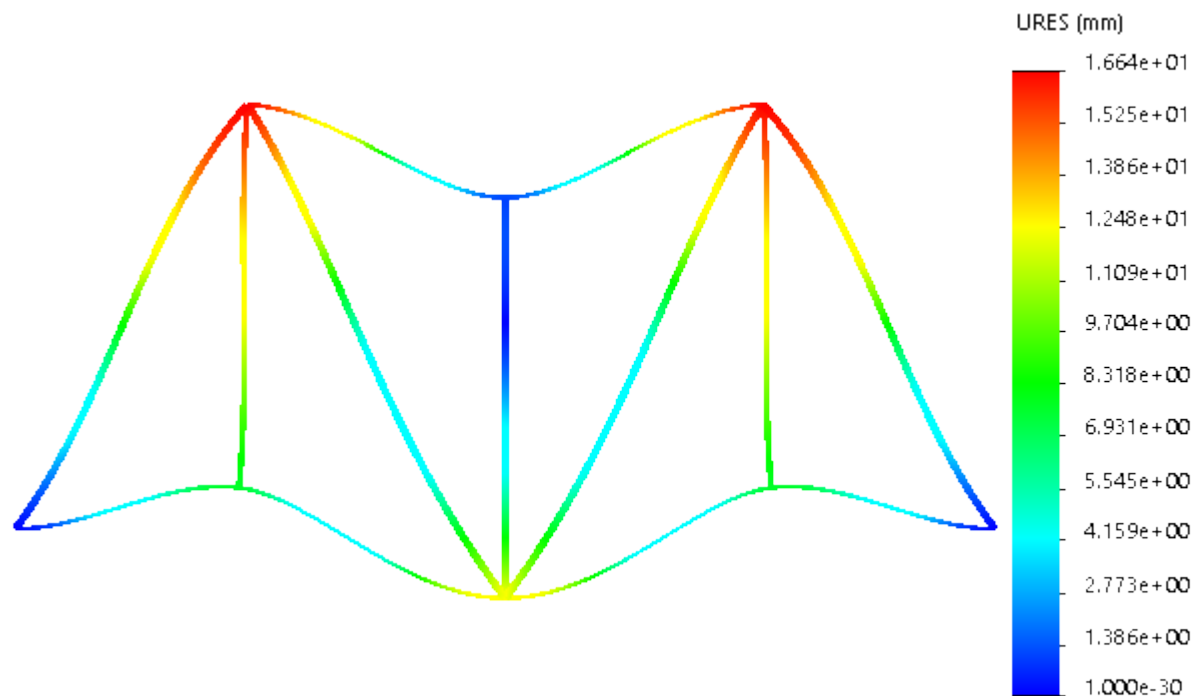

# 24

## Sketching

---

This chapter includes the following topics:

- **Applying Torsion Continuity Relations**
- **Baseline and Chain Dimensions in Sketches**
- **Importing 2D DXF or DWG Files as Reference Sketches**
- **Power Modify Tool**
- **Silhouette Entities**



## Applying Torsion Continuity Relations ★


You can apply torsion continuity relations between splines and any other sketch entity in 2D sketches. The sketch entities must share an end point. These relations create a smooth continuity at the end point and apply equal curvature and an equal rate of curvature to the sketch entities.

You can apply torsion continuity relations to a spline and one of these sketch entities:



- Spline
- Arc
- Conic or elliptical arc
- Model edges that are linear, circular, conic, parabolic, elliptical, or spline-based


### To apply torsion continuity relations:

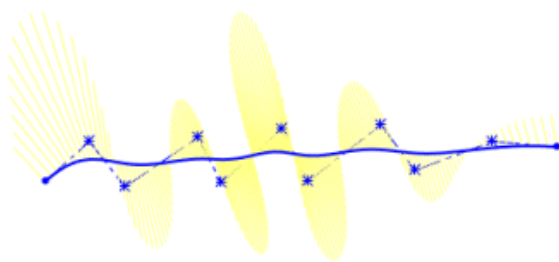

1. Select a plane and open a sketch.
2. Click **Style Spline**  (Sketch toolbar) or **Tools > Sketch Entities > Style Spline** .
3. Sketch a spline.




4. Right-click the spline and click **Show Curvature Combs**.

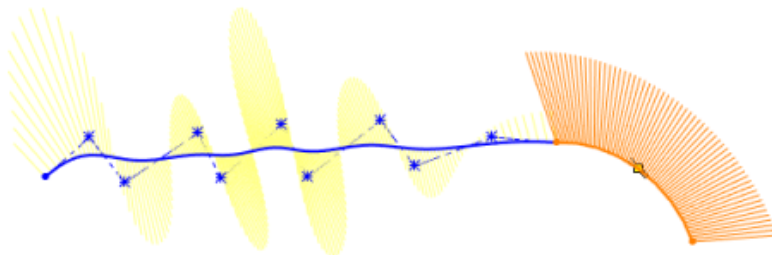5. Click **3 Point Arc**  (Sketch toolbar) or **Tools > Sketch Entities > 3 Point Arc** .
6. Sketch an arc that shares common end point with the spline.



7. Right-click the arc and click **Show Curvature Combs**.
8. **Ctrl +** select the spline and arc.  
The Add Relations/Properties PropertyManager appears.
9. In the Add Relations/Properties PropertyManager, under **Add Relations**, click **Torsion Continuity** .
10. Click .

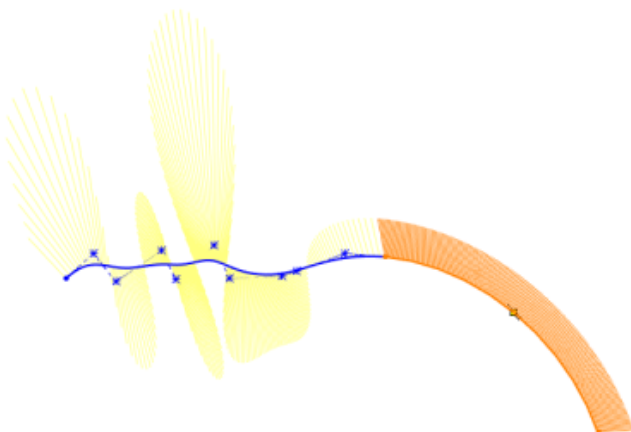

The result is a smooth continuity with equal curvature and equal rate of curvature at the shared end point between the spline and arc.

## Baseline and Chain Dimensions in Sketches


In assemblies and parts, **Baseline** and **Chain** dimension tools are available in Sketch mode.

- Baseline dimensions can be driving or driven.
- Chain dimensions can only be driven.

# Importing 2D DXF or DWG Files as Reference Sketches

You can import 2D DXF or DWG files as reference sketches.

## To import 2D DXF or DWG files as reference sketches:

1. Click **Open**  (Standard toolbar) or **File > Open**.
2. In the Open dialog box, set **File of type** to **Autodesk AutoCAD Files (\*.dwg; \*.dxf)**, browse to the file, and click **Open**.
3. In the DXF/DWG Import dialog box, under **Import to a new part as**, select **2D sketch** and **Import as reference**.
4. Click **Finish**.

The software imports the DXF or DWG file as a reference sketch.

You cannot edit a reference sketch. In the FeatureManager® design tree, right-click the reference sketch and click **Make Edit Sketch**. The software converts the reference sketch to a regular sketch and you can edit it.





## Power Modify Tool

**Power Modify** is a pen sketch mode that uses pen gestures to modify sketch geometry. **Power Modify** adds pink strokes that indicate where you want modifications such as adding fillets or trimming to take place.

Click or touch **Power Modify**  (Sketch Ink toolbar).


	<b>Power Modify</b>	Modifies the sketch geometry when you use ink strokes as gestures to trim, extend, split, offset, and add fillets and chamfers to sketch geometry.
---	---------------------	--

After using **Power Modify**, you can further update the sketch geometry by using the following tools on the context toolbar:

	<b>Edit Power Modify</b>	Undoes the last <b>Power Modify</b> stroke.
	<b>Convert to sketch chamfer</b>	Converts lines into chamfers.
	<b>Convert to sketch fillet</b>	Converts arcs into fillets.
	<b>Convert to sketch extend</b>	Extends lines or arcs up to the nearest sketch entity.


You can use the **Power Modify** ink strokes to do the following:

- Add fillets by drawing an arc that intersects sketch geometry.

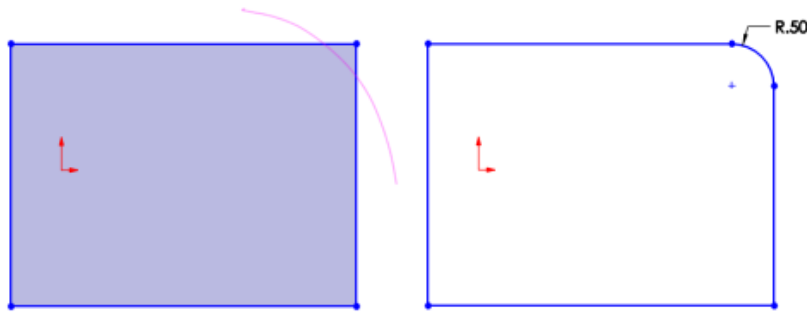


When you add multiple fillets quickly, the software converts all the pink strokes into fillets at the same time. The software considers them as consecutive fillets with the same radius and creates an automatic relation with the first fillet in the series.


- Add chamfers by drawing a line that intersects sketch geometry.

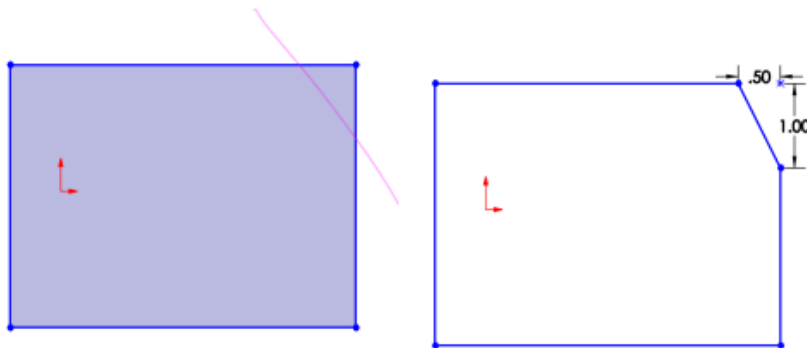


- Power trim sketch entities by drawing a scribble gesture on sketch geometry.

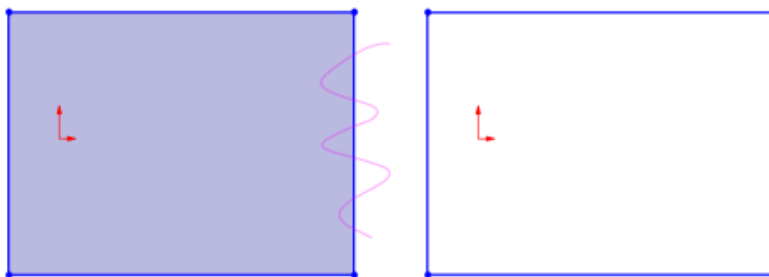


- Extend sketch entities along their natural paths by drawing a line or arc that partially overlaps the sketch geometry to which you want to extend.

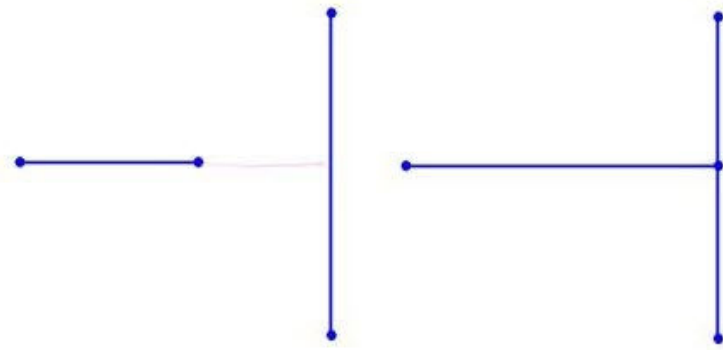

- Split sketch entities by drawing two intersecting lines or arcs on sketch geometry.

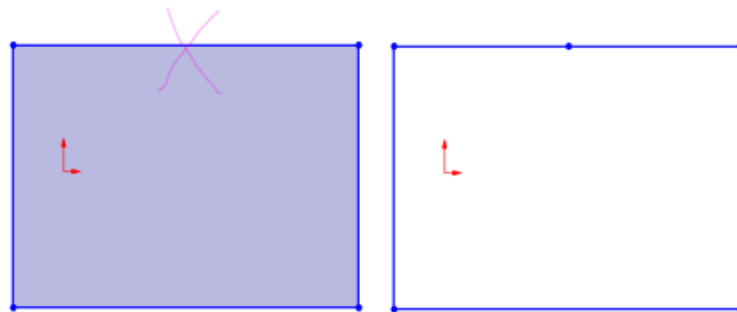

- Offset sketch entities by drawing two parallel lines that intersect sketch geometry. You can offset the following sketch geometries:
  - Multiple lines, arcs, or splines
  - Multiple shaded sketch contours

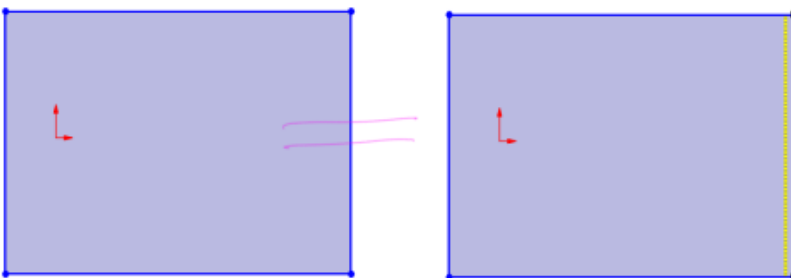


## Silhouette Entities ★

You can create multiple sketch entities by projecting the outline of the bodies in a part or components in an assembly onto a parallel sketch plane.

Silhouette entities create parametric sketch constraints on the model. You can use silhouette entities when you use **Sketch**  and **3D Sketch On Plane** .



In **Section View**  mode:


- The **Silhouette Entities**  tool is available only when you clear the **Graphics-only section** option.
- Silhouette entities do not contain sketch constraints.
- You can silhouette a component that has only a single instance in an assembly.




To use silhouette entities, click **Silhouette Entities**  (Sketch toolbar) or **Tools** > **Sketch Tools** > **Silhouette Entities** .

## Creating Silhouette Entities


**To create silhouette entities:**

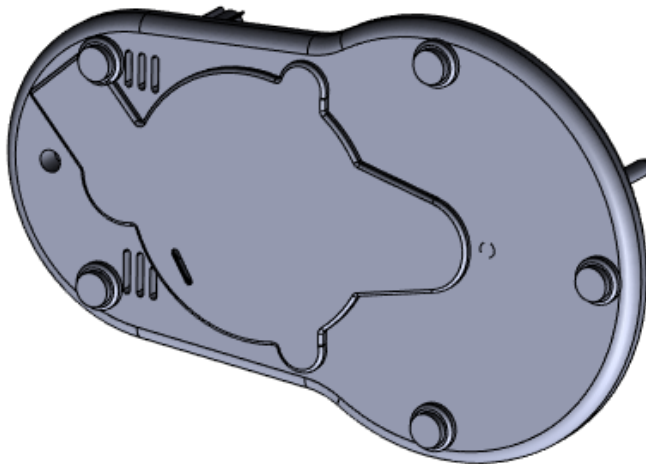1. Open `system_dir:\Users\Public\Public Documents\SOLIDWORKS\SOLIDWORKS 2020\samples\whatsnew\sketching\food_processor_silhouette.SLDASM`.



2. In the FeatureManager design tree, select **Plane4**.
3. Click **Sketch**  (Sketch toolbar).
4. Click **Silhouette Entities**  (Sketch toolbar) or **Tools** > **Sketch Tools** > **Silhouette Entities** .
5. In the PropertyManager, for **Entities to Silhouette**, select `base_plate<1>` from the FeatureManager design tree.

6. Clear **External silhouette** to create sketch entities of the outer body and the internal entities of the model.

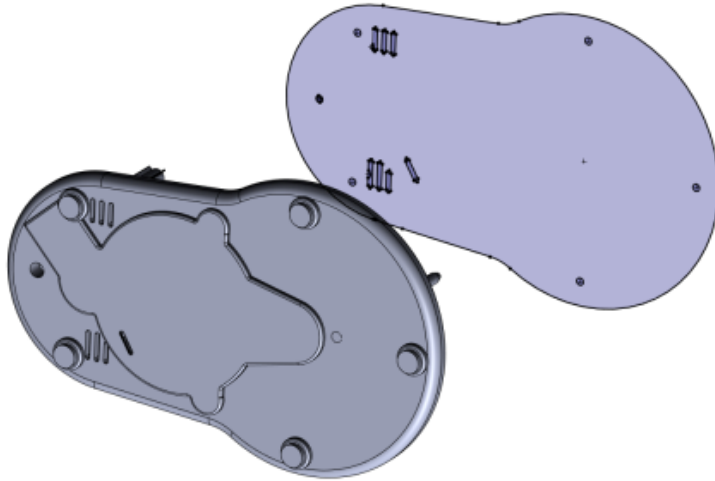



7. Click .

To create entities of the external silhouette only, select **External silhouette**. Silhouette entities appear on the sketch.

## Silhouette Entities PropertyManager

**To open the Silhouette Entities PropertyManager:**

1. In a part or assembly, open a sketch on a plane.
2. Click **Silhouette Entities**  (Sketch toolbar) or **Tools > Sketch Tools > Silhouette Entities** .

### Entities to Silhouette

<b>Select bodies or components to create silhouette sketch entities</b>	Lists the selected bodies in parts or components in assemblies.
<b>External silhouette</b>	Creates the sketch entity from the silhouette of the outer boundary of the model. Clear this option to project the inner loops in the model.

# 25

## SOLIDWORKS Visualize

---

This chapter includes the following topics:

- **AMD ProRender Integration**
- **AxF Measured Materials**
- **glTF Export for AR and VR**
- **IES Light Profiles**
- **Inline Rendering**
- **Instancing**
- **MDL Support**
- **NVIDIA RTX Support**
- **Scaling for High-Resolution Displays**
- **SOLIDWORKS PDM Integration**

SOLIDWORKS® Visualize is a separately purchased product that you can use with SOLIDWORKS Standard, SOLIDWORKS Professional, and SOLIDWORKS Premium, or as a completely separate application.

### AMD ProRender Integration

SOLIDWORKS Visualize supports AMD Radeon™ ProRender, a raytracing engine that is designed to run on AMD's high-performance graphics cards.

To use ProRender, click **Tools > Options > 3D Viewport** and, under **Render Engine**, select **AMD Radeon ProRender**.

### AxF Measured Materials

SOLIDWORKS Visualize supports AxF™ measured materials.


The .axf file format from X-Rite stores digital material representations, most notably measured materials, from their BTF scanning technology. To add .axf files to a project, drag from Windows Explorer into your scene or click **Palette > Appearances > Add > Import Appearances**.

## glTF Export for AR and VR

You can use .gltf and .glb file formats to export your SOLIDWORKS Visualize project data for use in augmented and virtual reality viewers.

## IES Light Profiles

You can use IES light profiles to modify light sources to mimic real-world lights. IES light profiles are standardized files provided by lighting manufacturers.

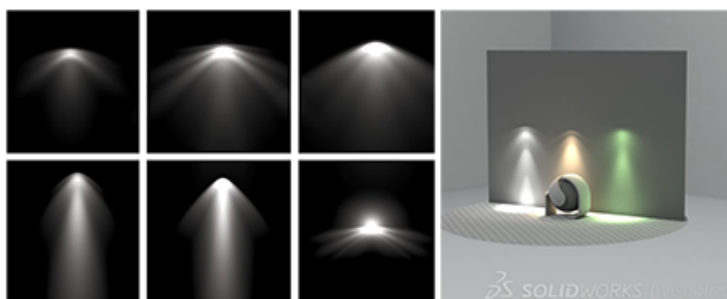

## Using IES Light Profiles



Before you begin, download IES light profiles from lighting manufacturers such as Philips and Lithonia.

1. Search the internet using a string such as "ies light profiles download" to find sources.
2. Download the files and copy them to the **Lights** folder in your SOLIDWORKS Visualize Content folder.

The default location for the content folder is

```
system_dir\Users\your_name\SOLIDWORKS Visualize Content
year\SOLIDWORKS Visualize Content.
```

### To use IES light profiles:

1. In the Palette, on the Scenes  tab, click **Add + > New Light**.
2. Select an option: **Pick Target**, **Pick Position**, or **Match Current Camera**.  
If you select **Pick Target** or **Pick Position**, pick a point in the viewport.
3. For **Type**, select **IES Profile**.
4. Under **IES Profile**, click , browse to your IES profiles folder, and select a file.
5. Set options in the Palette.

## Inline Rendering

SOLIDWORKS® Visualize supports and defaults to **Live** rendering mode. This can improve performance and reduce memory consumption for final renders.

## Instancing

SOLIDWORKS Visualize can handle duplicated geometry, such as patterned components from SOLIDWORKS assemblies, more efficiently.

Typically, for larger SOLIDWORKS assemblies, the use of duplicated geometry requires less GPU memory and reduces the likelihood of running out of GPU memory.

Appearance part-grouping mode does not support this functionality.

## MDL Support

SOLIDWORKS Visualize supports full editing capabilities of NVIDIA® Material Definition Language (MDL) materials.



You can modulate textures and edit color fields and parameters.

Also, these materials are supported in **Preview** mode.

## Using MDL Materials

The NVIDIA vMaterials catalog provides access to a collection of MDL materials.

Before you begin, download and install the vMaterials catalog from the NVIDIA website:

1. Go to the NVIDIA **VMATERIALS** web page.
2. Click **DOWNLOAD** and follow the instructions.

### To use MDL materials:

1. In SOLIDWORKS Visualize, open a new or existing project.

2. In Microsoft® File Explorer, browse to the location on your computer where you installed the NVIDIA vMaterials catalog.
3. To assign a material to a part, drag any .mdl file and drop it on the part in SOLIDWORKS Visualize.
4. To edit the material, select it in the viewport or on the Appearances tab, and then edit parameters on the Appearances tab.

The changes you make affect only the copy of the appearance in the project. The source appearance is not affected.

## NVIDIA RTX Support

SOLIDWORKS Visualize has RT Core support for full RTX hardware acceleration for **Accurate** and **Fast** render modes on NVIDIA Turing™ TU10x GPUs.

## Scaling for High-Resolution Displays

Displays with 4K resolution and higher are supported in SOLIDWORKS Visualize.

Icons and buttons scale so that their appearance does not degrade or become blurry on high-resolution and high-pixel density displays.

All aspects of the user interface respond to the Microsoft Windows® display scaling setting. In dialog boxes and the Palette, the software uses the display scaling setting to display icons and buttons at an appropriate size. Icons associated with text are scaled to a size appropriate for the text.

## SOLIDWORKS PDM Integration

You can use the integrated SOLIDWORKS PDM menu to access vault commands and view file information when the file is open in SOLIDWORKS Visualize. You must have SOLIDWORKS PDM Professional installed.

Unless otherwise noted, you must save an active SOLIDWORKS Visualize file in the PDM vault before you can access the following SOLIDWORKS PDM commands.

<b>Change State</b>	Changes the workflow state. Workflow states represent where the file is in the design and approval process, such as <b>Under Editing</b> , <b>Waiting for Approval</b> , or <b>Approved</b> .
<b>Check In</b>	Checks in files after editing to make them available to users with appropriate rights. Until you check in a file, changes are saved in your local version only.
<b>Check Out</b>	Checks out a file to give you exclusive right to edit it until you check it back in. Other users can open the file for viewing and copying but cannot change it.

---

<b>Undo Check Out</b>	Cancels a check out without saving changes.
<b>Get Latest Version</b>	Changes the version of a file in your local cache to the latest available version.
<b>Get Version</b>	Changes the version of a file in your local cache to another version you select.
<b>Search</b>	(Always available, even if no files are open in SOLIDWORKS Visualize.) Searches for files and folders and for non-file data such as users and items.
<b>Select in Windows Explorer</b>	(Available if a file that is saved outside the PDM vault is open.) Opens Windows Explorer in the folder where the selected file is located and preselects the file.
<b>Show Card</b>	Opens the SOLIDWORKS PDM data card for the document you are viewing.

---

The following information is listed at the bottom of the menu.

---

<b>Local Version</b>	Displays version information for the document in the local cache.
<b>Local Revision</b>	Displays revision information for the document in the local cache.
<b>Checked Out By</b>	Displays the name of the user who has checked out the file.
<b>Checked Out In</b>	Displays the location (system name and path) where the user checked out the file.
<b>Workflow State</b>	Displays the current state of the document as it is defined in the SOLIDWORKS PDM workflow.

---

# 26

## Structure System and Weldments

---

This chapter includes the following topics:

- **Options for Creating Primary Members Based on Points**
- **Creating Curved Beams and Merging Tangent Members**
- **Split Members**
- **Pattern and Mirror Support**
- **Member and Corner Trim Enhancements**
- **Cut List Properties for Weldment and Structure System Features**

### Options for Creating Primary Members Based on Points ★

When specifying **Point and Length**, you can set a direction for a primary member by selecting a sketch entity as a reference. The member extrudes in its direction. You can also reverse its direction.


Additional end condition types:




<b>Point</b>	Extends a primary member from the start point to the end point. Click <b>Chain Link</b> to add members along a chain of points.
<b>Up to Point</b>	Extends a primary member up to the selected point.
<b>Up to Plane</b>	Extends a primary member from a point to a plane. The member extrudes in the direction of the reference plane.



## Specifying the Member Profile

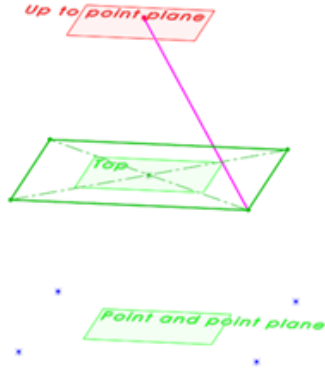
1. Open `system_dir:\Users\Public\Public Documents\SOLIDWORKS\SOLIDWORKS 2020\samples\whatsnew\structure_system\point_length.SLDPRT`.



2. Click **Insert** > **Structure System** > **Structure System**  to enter Structure System mode.
3. Click **Insert** > **Structure System** > **Primary Member**  to add primary members.
4. Click **Pin**  at the top of the PropertyManager.
5. In the Profile tab, set the following:
  - a) For **Standard**, select **Iso**.
  - b) For **Type**, select **pipe**.
  - c) For **Size**, select **21.3 x 2.3**.


## Creating Primary Members Based on Point and Length


**To create primary members based on point and length:**

1. In the Member tab, under **Primary Member Type**, click **Point Length Member** .
2. Under **End Condition**, select **Length** and enter `200.00mm`.

The PropertyManager displays the following members:


- **Point11@Point and point**
- **Point5@Point and point**
- **Point9@Point and point**
- **Point7@Point and point**

3. In the graphics area, select the four sketch points on the **Point and point plane**.
4. Click .

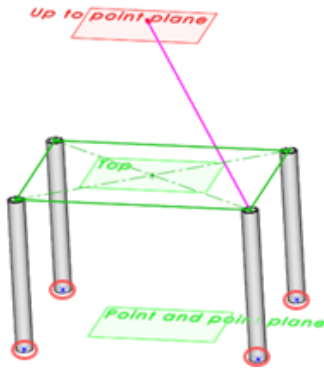


## Creating Primary Members Between Points


**To create primary members between points:**

1. In the Member tab, under **End Condition**, select **Point**.
2. Under **Points And Length**, click **Chain Link** .
 

The end point of one member is used as the beginning of the next pair in the chain.
3. In the graphics area, click each point at the corners of the rectangle on the **Top** plane.
 


The PropertyManager lists the following pairs:

  - **Point8@Base Point, Point6@Base Point**
  - **Point6@Base Point, Point7@Base Point**
  - **Point7@Base Point, Point5@Base Point**
  - **Point5@Base Point, Point8@Base Point**
4. Click .

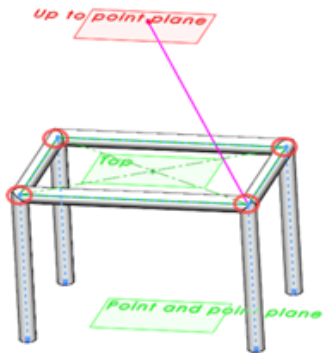

## Creating Primary Members Based on Up to Point


**To create primary members based on up to point:**


1. In the Member tab, under **End Condition**, select **Up to Point**.
2. Under **End Condition**, click in the **End Condition** box .

3. In the graphics area, select the point on the plane labeled **Up to point**.



**Point1@Uptopoint** displays in the PropertyManager.


4. In the Member tab, click in the **Points And Length** box .
5. In the graphics area, select **points 8, 5, and 7** as shown.

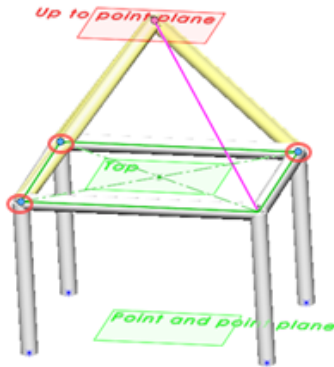


6. Click .





## Creating Primary Members Based on Direction

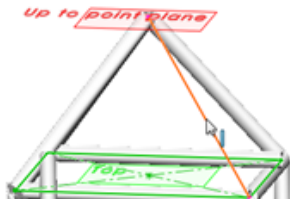
**To create primary members based on direction:**

1. In the Member tab, under **End Condition**, select **Length**.
2. Under **End Condition**, click in the **Direction of Member** box .
3. In the graphics area, select the sketch line that appears in a magenta color.  
When you select the sketch line, the color changes to orange.



The PropertyManager displays **Line1@For direction control**.

4. In the graphics area, click the remaining corner on the rectangle on the **Top** plane.
5. In the Member tab, enter 280.00mm for **Length**.
6. Unpin  the PropertyManager and click .
7. Click **Structure System**  in the Confirmation Corner to exit Structure System mode.
8. In the Corner Management PropertyManager, click .

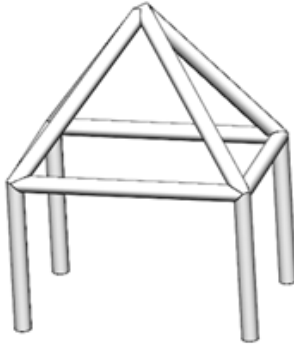

## Creating Curved Beams and Merging Tangent Members

You can create curved beams from primary and secondary members in a structure system. Curved members behave the same way as linear members where you can add secondary members between them.

If you select a 3D curve or spline as a reference, the member can only pierce through the center of the profile. Also, in some scenarios, you cannot sweep members with 2D or 3D splines because of their curvature and radius.

You can also merge multiple members that are tangent to each other into a single member with the **Merge Tangent Members** option and add secondary members between merged members.

## Split Members


You can split primary and secondary members by specifying references or dimensions.


For **Reference** type, you can select faces, reference planes, or members. For **Dimension** type, you can specify a dimension for length, direction vector, and the number of split member instances to create.


## Splitting Members by Reference

### To split members by reference:

1. Open *system\_dir*: \Users\Public\Public Documents\SOLIDWORKS\SOLIDWORKS 2020\samples\whatsnew\structure\_system\split.SLDPRT.

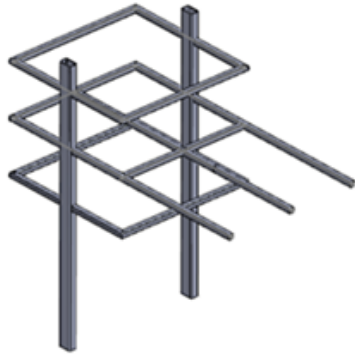


2. In the FeatureManager design tree, right-click **Structure System2** and click **Edit Feature** .
3. In the graphics area, select this member as shown.

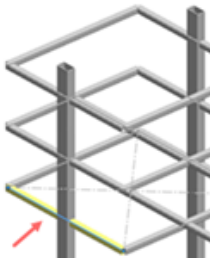

The Member Properties PropertyManager lists **Member8** in **Selected Members**.


4. Optional: **Ctrl +** select the two members above Member8 as shown in the graphics area.

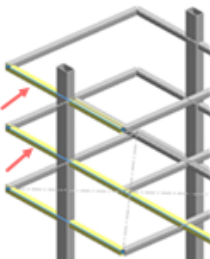

**Member20** and **Member16** are added to **Selected Members**.

5. In the PropertyManager, click **Split Member** and select **Based On Reference**.

6. In the graphics area, select the vertical member that intersects the horizontal members, as shown.

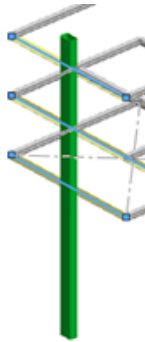

7. Click ✓.


Members 8, 20, and 16 split at their intersection of Member 15.

Do not exit Structure System mode. Keep the model open to continue with the next step.

## Splitting Members by Dimension

**To split members by dimension:**


1. In the graphics area, select the longest horizontal member as shown.

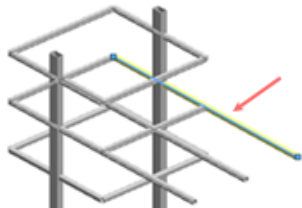

The PropertyManager lists **Member21** in **Selected Members**.

2. In the PropertyManager, click **Split Member** and select **Based On Dimension**.
3. Click **Instance** and enter 6.
4. Click ✓.
5. In the FeatureManager design tree, expand **Structure System2** and expand **<iso><square tube><20 x 20 x 2>(3)**.

**Member21** lists the split instances from **Member21\_1** to **Member21\_6**.

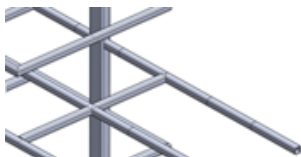

## Pattern and Mirror Support

You can pattern and mirror structure system members using the **Linear Pattern**, **Circular Pattern**, or **Mirror** tools.


In the Pattern PropertyManager, under **Bodies**, you can specify structure system features or individual members to pattern. You can also mirror members by specifying structure system features or individual members under **Bodies to Mirror** in the Mirror PropertyManager.

You can add secondary members as a separate structure system feature between patterned and mirrored members.

You can also create secondary members as part of a new structure system by selecting members from existing structure system features.


### Creating a Linear Pattern of a Structure System Feature


1. Open `system_dir:\Users\Public\Public Documents\SOLIDWORKS\SOLIDWORKS 2020\samples\whatsnew\structure_system\shed.SLDPRT`.

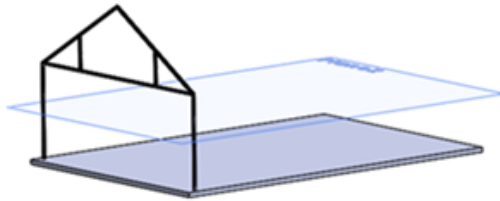


2. Click **Insert** > **Pattern/Mirror** > **Linear Pattern**.


3. In the PropertyManager, for **Direction 1**:

a) For **Pattern Direction** , select the edge shown in the graphics area.

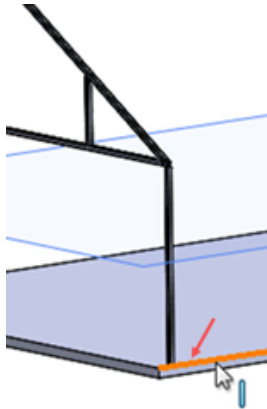

b) Select **Up to reference**.


c) Click in **Reference Geometry** , and in the graphics area, rotate the model and select the face shown.

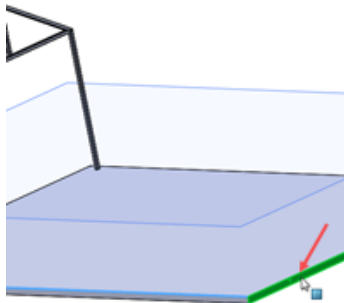

d) For **Spacing** , enter 10mm.


e) Click **Number of Instances**  and enter 6.

4.

5. In the PropertyManager, click **Bodies** and click in **Structure System to Pattern** .

6. In the flyout FeatureManager design tree, click **Structure System1**.



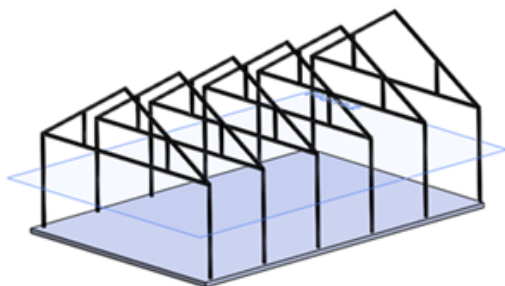

7. Click .





The model adds six instances of the frame.




## Adding a Structure System Feature to an Existing Feature


1. Click **Insert** > **Structure System** > **Structure System** .
2. Click **Insert** > **Structure System** > **Secondary Member** .
3. Click **Pin**  at the top of the PropertyManager.
4. Click the Profile tab and set the following:
  - a) For **Standard**, select **Iso**.
  - b) For **Type**, select **square tube**.
  - c) For **Size**, select **80 x 80 x 5**.
5. Click the Member tab, and for **Secondary Member Type**, click **Support Plane Member** .
6. Click in **Support Plane**, and in the flyout FeatureManager design tree, select **Plane2**.

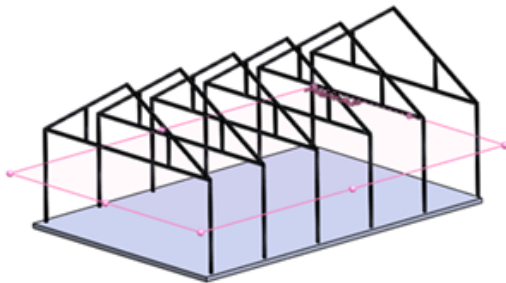



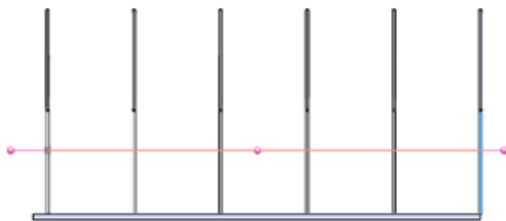

7. Click in **Member Parameters** and click **Chain Link** .
8. In the graphics area, click **Right Orientation** (Heads-up View toolbar).

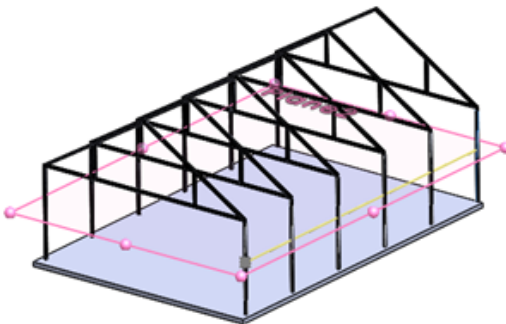


9. Click each of the vertical members and click .



A row of secondary members displays along the right side of the model.

10. Right-click in **Member Parameters** and click **Clear Selections**.
11. In the graphics area, click **Left Orientation** (Heads-up View toolbar) and repeat steps 6 to 9 to generate another row of secondary members.
12. Unpin the PropertyManager  and click .
13. Click **Structure System**  in the Confirmation Corner to exit Structure System mode.
14. In the Corner Management PropertyManager, click .

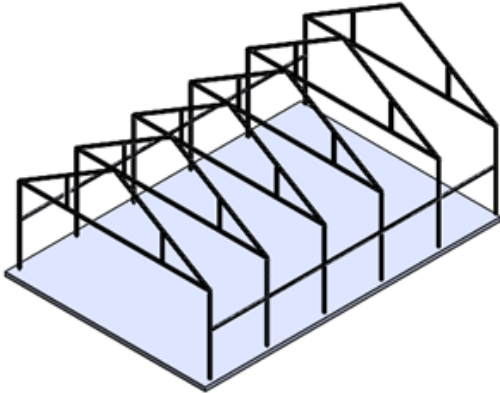

## Member and Corner Trim Enhancements

Enhancements and quality improvements for structure system features include:

- When creating **Ref Plane** and **Face Plane** intersection primary members, you can select faces in addition to reference planes.
- When creating **Support Plane** secondary members, you can select faces in addition to reference planes.
- You can delete input sketches and planes for individual members without deleting the Structure System feature.
- Issues with corner treatment, especially with creating complex corners, are resolved.
- You can define individual gap values for trimming corners.
- Original corner features are retained even after adding or deleting new members at the corner location.

## Cut List Properties for Weldment and Structure System Features


Two cut list properties are available for structural members created by weldment as well as structure system features.

The **Angle Direction** property indicates whether the two ends face of the body are along the same direction or not. You can specify:

- **Same**

- **Opposite**
- **Out of Plane**
- **None**

The **Angle Twist** property indicates the angle between the normals of two end cut planes for out of plane trimming. You can set the angle 0–180 degrees.

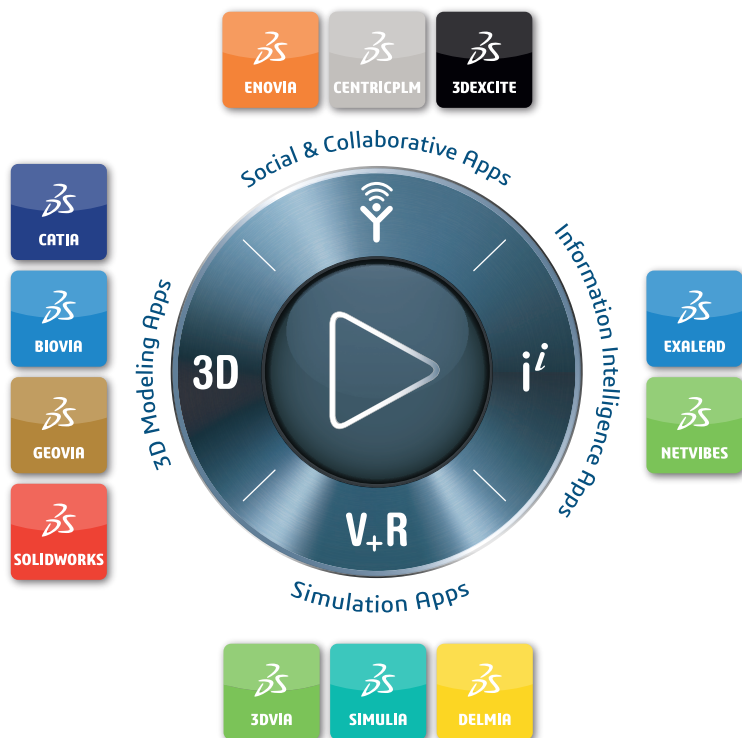

Our **3DEXPERIENCE®** platform powers our brand applications, serving 11 industries, and provides a rich portfolio of industry solution experiences.

Dassault Systèmes, the **3DEXPERIENCE®** Company, provides business and people with virtual universes to imagine sustainable innovations. Its world-leading solutions transform the way products are designed, produced, and supported. Dassault Systèmes' collaborative solutions foster social innovation, expanding possibilities for the virtual world to improve the real world. The group brings value to over 250,000 customers of all sizes in all industries in more than 140 countries. For more information, visit [www.3ds.com](http://www.3ds.com).

#### Europe/Middle East/Africa

Dassault Systèmes  
10, rue Marcel Dassault  
CS 40501  
78946 Vélizy-Villacoublay Cedex  
France

#### Asia-Pacific

Dassault Systèmes K.K.  
ThinkPark Tower  
2-1-1 Osaki, Shinagawa-ku,  
Tokyo 141-6020  
Japan

#### Americas

Dassault Systèmes  
175 Wyman Street  
Waltham, Massachusetts  
02451-1223  
USA

**DASSAULT SYSTEMES** | The **3DEXPERIENCE®** Company